



## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery</b>	<b>1</b>
1.1 Battery concept in Touareg	1
1.2 Types of battery	2
1.3 Warning notices and safety regulations	2
1.4 Battery terminal connection	2
<b>2 Checking battery</b>	<b>3</b>
<b>3 Charging battery</b>	<b>4</b>
3.1 Charging battery with battery deactivation relay	4
<b>4 Disconnecting and reconnecting battery</b>	<b>7</b>
4.1 Disconnecting and reconnecting battery, vehicles with one-battery concept	7
4.2 Disconnecting and connecting battery, vehicles with single battery concept with additional battery and dual battery concept	10
<b>5 Removing and installing battery</b>	<b>17</b>
5.1 Removing and installing battery beneath front left seat	17
5.2 Removing and installing second battery or additional battery in luggage compartment	19
<b>6 Battery parallel circuit relay J581</b>	<b>22</b>
6.1 Removing and installing battery parallel circuit relay J581	22
<b>7 Battery master switch and isolator switch E74</b>	<b>24</b>
7.1 General description	24
7.2 Assembly overview - battery master/isolator switch E74	24
7.3 Detection of triggering	24
7.4 Resetting after triggering	25
7.5 Removing and installing battery master/isolator switch E74	27
<b>8 Specified torques: battery</b>	<b>29</b>
<b>9 Slave start point, vehicles to 04/05</b>	<b>30</b>
9.1 Assembly overview - slave start point, vehicles to 04/05	30
9.2 Removing and installing slave start point, vehicles to 04/05	30
<b>10 Slave start point, vehicles from 05/05</b>	<b>34</b>
10.1 Assembly overview - slave start point, vehicles from 05/05	34
10.2 Removing and installing slave start point, vehicles from 05/05	34
<b>11 Starter</b>	<b>37</b>
11.1 Checking starter B	37
11.2 Removing and installing starter, automatic gearbox	38
11.3 Removing and installing starter, manual gearbox	63
<b>12 Specified torques: starter</b>	<b>68</b>
12.1 6-cylinder 3.2 l and 3.6 l FSI engine	68
12.2 8-cyl. injection engine, direct injection (FSI)	68
12.3 8-cylinder 4.2 l injection engine	68
12.4 12-cylinder 6.0 l injection engine	68
12.5 2.5 l, 5-cylinder TDI engine	68
12.6 2.5 l, 5-cylinder TDI engine with diesel particulate filter	69
12.7 3.0 l, 6-cylinder TDI engine	69
12.8 4.9 l, 10-cylinder TDI engine	69
<b>13 Alternator</b>	<b>70</b>
13.1 Characteristics of alternators	70
13.2 Checking poly V-belt	71
13.3 Checking alternator C	71
13.4 Alternator, air-cooled, 6-cylinder injection engine	72
13.5 Alternator, water-cooled, 6-cylinder injection engine 3.2 l and 3.6 l FSI	76
13.6 Alternator, 8-cyl. 4.2 l injection engine	81



13.7	Alternator, 8-cyl. 4.2 l direct injection engine	85
13.8	Alternator, 12-cyl. 6.0 l injection engine	89
13.9	Alternator, 5-cyl. 2.5 l TDI engine	92
13.10	Coolant-cooled alternator, 6-cyl. 3.0 l TDI engine	98
13.11	Air-cooled alternator, 6-cyl. 3.0 l TDI engine	105
13.12	Alternator, 10-cyl. 5.0 l TDI engine	109
13.13	Removing and installing poly V-belt pulley on alternator	123
13.14	Removing and installing poly V-belt pulley with freewheel on alternator	126
13.15	Voltage regulator for alternator	133
<b>14</b>	<b>Cruise control system (CCS)</b>	<b>136</b>
14.1	General description	136
14.2	Activating and deactivating cruise control system (CCS)	136
<b>15</b>	<b>Adaptive cruise control (ACC)</b>	<b>137</b>
15.1	General description	137
15.2	Assembly overview	137
15.3	Removing and installing adaptive cruise control button E357	138
15.4	Removing and installing adaptive cruise control unit J428	138
15.5	Calibrating adaptive cruise control sensor G550	139
15.6	Initialising adaptive cruise control	139
<b>16</b>	<b>Distance monitoring system (Front Assist)</b>	<b>141</b>
16.1	General description	141
16.2	Adaptive cruise control unit J428	141
16.3	Adaptive cruise control button E357	141
<b>90</b>	<b>Gauges, instruments</b>	<b>142</b>
<b>1</b>	<b>Dash panel insert</b>	<b>142</b>
1.1	General description	142
1.2	Renewing dash panel insert	143
1.3	Removing and installing dash panel insert	143
1.4	Dash panel insert final control diagnosis	145
1.5	Description of back of dash panel insert	146
1.6	Connection assignment for connector in dash panel insert, vehicles to 11/06	147
1.7	Connection assignment for connector in dash panel insert, vehicles from 12/06 with monochrome display	149
1.8	Connection assignment for connector in dash panel insert, vehicles from 12/06 with colour display	149
1.9	Warning lamp symbols in dash panel insert, vehicles to 11/06	149
1.10	Warning lamp symbols in dash panel insert, vehicles from 12/06 with monochrome display	151
1.11	Warning lamp symbols in dash panel insert, vehicles from 12/06 with colour display	152
<b>2</b>	<b>Service interval display</b>	<b>154</b>
2.1	Resetting service interval display	154
<b>92</b>	<b>Windscreen wash/wipe system</b>	<b>155</b>
<b>1</b>	<b>Windscreen wiper system</b>	<b>155</b>
1.1	General description	155
1.2	Deactivating APP function of wiper motors from 11/07	156
1.3	Assembly overview - windscreen wiper system	157
1.4	Removing and installing windscreen wiper system	158
1.5	Removing and installing wiper arms	167
1.6	Adjusting wiper blade park position	167
1.7	Removing and installing joint-free wiper	168
1.8	Removing and installing rain sensor G213 / rain and light sensor G397	170
1.9	Wiper motor control unit J400	173
<b>2</b>	<b>Windscreen washer system</b>	<b>175</b>
2.1	General description	175



2.2	Assembly overview - windscreen washer system	175
2.3	Removing and installing washer fluid reservoir	177
2.4	Removing and installing windscreen and rear window washer pump V59	179
2.5	Removing and installing windscreen washer fluid level sender G33	179
2.6	Removing and installing windscreen washer system spray jets	180
2.7	Adjusting windscreen washer system spray jets	180
<b>3</b>	<b>Rear window wiper system</b>	<b>182</b>
3.1	General description	182
3.2	Assembly overview - rear window wiper system	182
3.3	Removing and installing rear window wiper	183
3.4	Adjusting rear window wiper park position	186
3.5	Removing and installing joint-free wiper	187
<b>4</b>	<b>Rear window washer system</b>	<b>189</b>
4.1	General description	189
4.2	Assembly overview - rear window washer system	189
4.3	Renewing spray jet	190
4.4	Adjusting spray jet	190
<b>5</b>	<b>Headlight washer system</b>	<b>192</b>
5.1	General description	192
5.2	Assembly overview - headlight washer system	192
5.3	Removing and installing headlight washer system pump V11	193
5.4	Removing and installing spray jet pop-up cylinders	194
5.5	Removing and installing spray jet assembly	195
5.6	Adjusting headlight washer system spray jets	196
5.7	Bleeding headlight washer system	196
<b>6</b>	<b>Washer fluid line hose couplings</b>	<b>197</b>
<b>7</b>	<b>Hose repair</b>	<b>198</b>
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>199</b>
<b>1</b>	<b>Headlights with halogen bulbs up to 11/06</b>	<b>199</b>
1.1	General description	199
1.2	Assembly overview - headlight	199
1.3	Removing and installing headlight	202
1.4	Removing and installing headlight mounting	203
1.5	Adjusting headlight installation position	211
1.6	Replacing headlight bulbs	212
1.7	Removing and installing headlight range control motor	218
1.8	Converting headlights for use when driving on the left or right	219
1.9	Adjusting headlights	221
<b>2</b>	<b>Headlights with gas discharge bulbs up to 11/06</b>	<b>222</b>
2.1	General description	222
2.2	Assembly overview - gas discharge headlights	223
2.3	Removing and installing headlight	226
2.4	Removing and installing headlight mounting	227
2.5	Adjusting headlight installation position	227
2.6	Renewing gas discharge bulbs in headlights	227
2.7	Removing and installing headlight range control motor	233
2.8	Headlight screen adjustment solenoid	234
2.9	Headlight range control unit	235
2.10	Vehicle level sender	237
2.11	Converting headlights for use when driving on the left or right	238
2.12	Adjusting headlights	240
<b>3</b>	<b>Headlights with gas discharge bulbs and cornering light to 11/06</b>	<b>243</b>
3.1	General description	243
3.2	Assembly overview - headlight with gas discharge bulb and cornering light	244



3.3	Removing and installing headlight	249
3.4	Removing and installing headlight mounting	250
3.5	Adjusting headlight installation position	250
3.6	Replacing gas discharge bulbs and cornering light bulbs in headlights	250
3.7	Headlight range control motor	258
3.8	Dynamic cornering light control motor	258
3.9	Swivel module position sensor	258
3.10	Headlight screen adjustment solenoid	258
3.11	Power output module for headlight	259
3.12	Removing and installing gas discharge bulb control unit	261
3.13	Cornering light and headlight range control unit J745	262
3.14	Vehicle level sender	267
3.15	Converting headlights for use when driving on the left or right	268
3.16	Adjusting headlights	272
3.17	Operation and safety notes for gas discharge bulbs	272
<b>4</b>	<b>Headlights with halogen bulbs from 12/06</b>	<b>275</b>
4.1	General description	275
4.2	Assembly overview - headlights with halogen bulbs from 12/06	275
4.3	Removing and installing headlight	277
4.4	Removing and installing headlight mounting	278
4.5	Adjusting headlight installation position	279
4.6	Renewing bulbs in headlight with halogen bulbs from 12/06	279
4.7	Headlight range control motor	285
4.8	Converting headlights for use when driving on the left or right	287
4.9	Adjusting headlights	289
<b>5</b>	<b>Headlights with gas discharge bulbs and cornering light from 12/06</b>	<b>290</b>
5.1	General description	290
5.2	Assembly overview - headlight with gas discharge bulb and cornering light	291
5.3	Removing and installing headlight	295
5.4	Removing and installing headlight mounting	297
5.5	Adjusting headlight installation position	298
5.6	Replacing gas discharge bulbs and cornering light bulbs in headlights	298
5.7	Headlight range control motor	305
5.8	Dynamic cornering light control motor	308
5.9	Swivel module position sensor	308
5.10	Headlight screen adjustment solenoid	309
5.11	Power output module for headlight	309
5.12	Gas discharge bulb control unit	311
5.13	Cornering light and headlight range control unit J745	311
5.14	Vehicle level sender	316
5.15	Converting headlights for use when driving on the left or right	318
5.16	Adjusting headlights	320
5.17	Operation and safety notes for gas discharge bulbs	320
<b>6</b>	<b>Fog lights</b>	<b>323</b>
6.1	Removing and installing fog light	323
6.2	Removing and installing fog light bulb	324
6.3	Checking fog lights	325
6.4	Adjusting fog lights	325
6.5	Fog light Touareg Volkswagen R GmbH	325
<b>7</b>	<b>mirror turn signal lamp and entry light in exterior mirror</b>	<b>326</b>
7.1	Turn signal repeater bulb	326
7.2	Entry light in exterior mirror	327
<b>8</b>	<b>Tail lights (tail light cluster)</b>	<b>329</b>
8.1	Assembly overview - tail light (tail light cluster) in side panel	329
8.2	Removing and installing tail light (tail light cluster) in side panel	331



8.3	Removing and installing tail light (cluster) bulb carrier in side panel	333
8.4	Adjustable tail light carrier in side panel	334
8.5	Assembly overview - tail light (tail light cluster) in rear lid	335
8.6	Removing and installing tail light (tail light cluster) in rear lid	336
8.7	Removing and installing tail light (cluster) bulb carrier in rear lid	337
8.8	Tail light (tail light cluster) gaps and shut lines	338
<b>9</b>	<b>Number plate light</b>	<b>339</b>
9.1	Removing and installing number plate left light X4 and number plate right light X5	339
9.2	Checking number plate left light X4 and number plate right light X5	339
<b>10</b>	<b>Additional brake light bulb M25</b>	<b>340</b>
10.1	Removing and installing additional brake light M25	340
10.2	Checking high-level brake light bulb M25	341
<b>11</b>	<b>Steering column switch</b>	<b>342</b>
11.1	Assembly overview - steering column switch	342
11.2	Removing and installing steering column switch	344
11.3	Dismantling and assembling steering column switch	347
11.4	Pin assignment on steering column switch	349
11.5	Steering column electronics control unit J527	350
<b>12</b>	<b>Rear window opening</b>	<b>352</b>
12.1	Emergency release of rear lid window	352
12.2	Removing and installing button to open rear lid window E361	352
12.3	Removing and installing rear lid window release unit V312	354
<b>13</b>	<b>Entry and start authorisation</b>	<b>355</b>
13.1	Emergency release of ignition key	355
13.2	Entry and start authorisation switch E415	356
13.3	Entry and start authorisation button E408	358
13.4	Entry and start authorisation control unit J518	359
13.5	Entry and start authorisation aerials and sensors	362
<b>14</b>	<b>Parking aid</b>	<b>371</b>
14.1	Assembly overview - parking aid	371
14.2	Removing and installing parking aid control unit J446	373
14.3	Removing and installing parking aid button E266	375
14.4	Removing and installing front parking aid senders	375
14.5	Removing and installing rear parking aid senders	377
14.6	Removing and installing front left parking aid display Y13	378
14.7	Removing and installing rear parking aid display Y15	379
14.8	Removing and installing parking aid loudspeaker R169	380
<b>15</b>	<b>Side Assist (lane change assistant)</b>	<b>382</b>
15.1	General description	382
15.2	Removing and installing lane change assist control unit with radar sensor	382
15.3	Removing and installing lane change assist warning lamps in exterior mirror	383
15.4	Calibrating lane change assistant (Side Assist)	384
15.5	Lane change assist control unit final control diagnosis	391
15.6	Coding lane change assist control unit	391
<b>16</b>	<b>Reversing camera system</b>	<b>393</b>
16.1	General description	393
16.2	Removing and installing reversing camera	394
16.3	Removing and installing reversing camera system control unit	397
16.4	Calibrating reversing camera system	399
<b>17</b>	<b>Winch</b>	<b>405</b>
17.1	Winch with reel window	405
17.2	Bumper carrier with winch mounting	411
17.3	Winch E-box	412
17.4	Additional relay carrier in E-box in plenum chamber	416



17.5	Power relay	418
17.6	Winch remote control	419
<b>18</b>	<b>Roof luggage basket with additional headlights</b>	<b>422</b>
18.1	Additional headlights on roof luggage basket	422
18.2	Socket for additional headlights on roof luggage basket	425
<b>19</b>	<b>Specified torques: lights, bulbs, switches - exterior</b>	<b>430</b>
19.1	Specified torques: headlights	430
19.2	Specified torques: fog lights	430
19.3	Specified torques: tail light in side panel	430
19.4	Specified torques: tail light in rear lid	430
19.5	Torque settings: Steering column switch	430
19.6	Torque settings: Rear window opening	430
19.7	Torque settings: Winch	430
19.8	Torque settings: Roof luggage basket with additional headlights	431
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>432</b>
<b>1</b>	<b>Interior lights and switches</b>	<b>432</b>
1.1	Tools	432
1.2	Removing and installing interior monitoring deactivation switch and vehicle inclination sender, vehicles to 11/06	432
1.3	Removing and installing interior monitoring deactivation switch and vehicle inclination sender, vehicles from 12/06	433
1.4	Footwell lights	434
1.5	Removing and installing illuminated sill panel moulding with lettering	436
<b>2</b>	<b>Lights and switches in engine compartment</b>	<b>439</b>
2.1	Removing and installing engine compartment light W27	439
2.2	Removing and installing bonnet contact switch F266	440
<b>3</b>	<b>Lights and switches in dash panel</b>	<b>441</b>
3.1	Removing and installing light switch E1	441
3.2	Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20	442
3.3	Removing and installing airbag disabled warning lamp, front passenger side K145	442
3.4	Removing and installing glove compartment light W6	443
3.5	Removing and installing glove compartment light switch E26	444
3.6	Removing and installing switches in centre of dash panel	444
3.7	Removing and installing key switch to deactivate front passenger airbag , vehicles from 12/06	445
<b>4</b>	<b>Lights and switches in front doors</b>	<b>447</b>
4.1	Removing and installing driver side switch module	447
4.2	Driver side interior locking warning lamp K174 and central locking deadlock function warning lamp on front passenger side K204	448
4.3	Removing and installing window regulator switch in front passenger door E107	449
4.4	Remote release button for fuel filler flap and rear lid E463	451
4.5	Removing and installing front passenger side interior locking button for central locking system E309	453
4.6	Driver side door inner handle illumination bulb L146 and front passenger side door inner handle illumination bulb L147	454
4.7	Front left entry light W31 and front right entry light W32	456
4.8	Driver side door warning lamp W30 and front passenger side door warning lamp W36	458
4.9	Components - front door locks	459
<b>5</b>	<b>Lights and switches in rear doors</b>	<b>461</b>
5.1	Removing and installing rear left interior locking button for central locking system E310 and rear right interior locking button for central locking system E311	461
5.2	Removing and installing rear left window regulator switch (in door) E52 and rear right window regulator switch (in door) E54	461
5.3	Removing and installing ashtray illumination bulb L15	461



5.4	Rear left interior door handle illumination bulb L133 and rear right interior door handle illumination bulb L134	462
5.5	Rear left entry light W33 and rear right entry light W34	462
5.6	Rear left door warning lamp W37 and rear right door warning lamp W38	463
5.7	Components - rear door locks	463
<b>6</b>	<b>Lights and switches in luggage compartment</b>	<b>464</b>
6.1	Removing and installing electric hinged tow coupling attachment button E474	464
6.2	Luggage compartment light W3	465
6.3	Rear lid light W51	466
6.4	Rear lid lock unit F256	467
6.5	Removing and installing AC/DC converter with socket, 12 V - 230 V U13	468
<b>7</b>	<b>Lights and switches in roof trim</b>	<b>470</b>
7.1	Removing and installing front interior light W1	470
7.2	Removing and installing front passenger reading light W13 and driver side reading light W19	470
7.3	Removing and installing button module for front interior/reading light	471
7.4	Sunroof switch E8	473
7.5	Removing and installing sliding sunroof switch illumination bulb L65	474
7.6	Removing and installing rear left reading light W11 and rear right reading light W12	475
7.7	Removing and installing roof display unit J702	476
7.8	Removing and installing garage door operating unit E284	476
<b>8</b>	<b>Lights and switches in centre console</b>	<b>478</b>
8.1	Removing and installing centre armrest illumination L157	478
8.2	Removing and installing storage compartment illumination switch F335	479
8.3	Removing and installing exterior mirror adjustment module	479
8.4	Removing and installing key switch to deactivate front passenger airbag , vehicles to 11/06	480
8.5	Removing and installing adaptive suspension operating unit E281	480
8.6	Removing and installing module for running gear adjustment	480
8.7	Operating panel for transfer box E473	481
8.8	12 V socket	481
8.9	Cigarette lighter U1	481
<b>9</b>	<b>Horn</b>	<b>482</b>
9.1	Removing and installing treble horn H2 and bass horn H7	482
9.2	Checking treble horn H2 and bass horn H7	482
<b>10</b>	<b>Immobiliser, vehicles to 11/06</b>	<b>483</b>
10.1	General description	483
10.2	Entry and start authorisation control unit J518	484
10.3	Electronic steering column lock	484
10.4	Engine control unit	485
10.5	Exchanging all components	486
10.6	Ignition key	486
10.7	Online system test	487
<b>11</b>	<b>Immobiliser, vehicles from 12/06</b>	<b>488</b>
11.1	General description	488
11.2	Immobiliser control unit J362	489
11.3	Entry and start authorisation control unit J518	489
11.4	Electronic steering column lock	490
11.5	Engine control unit J623	490
11.6	New immobiliser identity	490
11.7	Ignition key	492
11.8	Fazit system test	493
<b>12</b>	<b>Anti-theft alarm (ATA)</b>	<b>494</b>
12.1	Activating and deactivating anti-theft alarm	494
12.2	Incorporation of trailer into vehicle anti-theft alarm system	495



12.3	Interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	496
12.4	Removing and installing interior monitoring sensor G273	496
12.5	Removing and installing vehicle inclination sender G384	497
12.6	Central locking and anti-theft alarm system aerial R47	498
12.7	Alarm horn H12 (back-up horn)	502
<b>13</b>	<b>Specified torques: lights, bulbs and switches - interior</b>	<b>504</b>
13.1	Torque settings: alarm horn H12	504
<b>97 - Wiring</b>		<b>505</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>505</b>
<b>2</b>	<b>Fuse holder</b>	<b>506</b>
2.1	Removing and installing fuse holder	506
2.2	Removing and installing pre-fuse box	507
<b>3</b>	<b>Relay carriers</b>	<b>508</b>
3.1	Removing and installing relay carrier in front left footwell	508
<b>4</b>	<b>Electronics boxes</b>	<b>510</b>
4.1	Removing and installing E-box in plenum chamber on left	510
<b>5</b>	<b>Control units</b>	<b>512</b>
5.1	Onboard supply control unit J519	513
5.2	Data bus diagnostic interface J533	517
5.3	Convenience system central control unit J393	518
5.4	Entry and start authorisation control unit J518	522
5.5	Trailer detector control unit J345	524
5.6	Garage door operation control unit J530	527
<b>6</b>	<b>Wiring harness and connector repairs</b>	<b>528</b>