



## Contents

<b>91 - Communication</b>	<b>1</b>
<b>1 Communication systems</b>	<b>1</b>
1.1 Fault finding	1
<b>2 „Delta“ radio system</b>	<b>2</b>
2.1 General description	2
2.2 Removing and installing the „Delta“ radio	3
2.3 Overview of multi-pin connectors 1, 2, 3 and 4	5
2.4 Adapting radio components	8
<b>3 „Radio navigation system RNS 510“</b>	<b>9</b>
3.1 General notes	9
3.2 Fault finding	10
3.3 Overview of radio navigation system „RNS 510“	10
3.4 Removing and installing radio navigation system „RNS 510“	11
3.5 Overview of connectors on radio navigation system „RNS 510“	13
3.6 Anti-theft coding	17
<b>4 „Radio and navigation system 2“ with multi-function display (MFD)</b>	<b>21</b>
4.1 General description	21
4.2 Overview of „radio/navigation system 2“ with 6.5 inch colour display, with amplifier for the „Sound 2“ system	22
4.3 Removing and installing „radio/navigation system 2“ with 6.5 inch colour display	23
4.4 Overview of radio navigation system connectors	25
4.5 Adapting navigation system components	30
4.6 Adapting radio components	31
<b>5 Satellite digital radio tuner (SDARS tuner)</b>	<b>32</b>
5.1 General notes	32
5.2 Fault finding	32
5.3 Removing and installing satellite digital radio tuner	32
<b>6 Analogue TV reception tuner (TV)</b>	<b>34</b>
6.1 General notes	34
6.2 Removing and installing TV tuner	34
6.3 Overview of contacts in 54-pin connector	37
6.4 Connecting additional audio/video units to the TV tuner	37
<b>7 Digital TV tuner for digital television (DVB-T)</b>	<b>39</b>
7.1 General notes	39
7.2 Removing and installing the digital TV tuner	39
7.3 Teaching in the remote control for the digital TV tuner	41
7.4 Changing remote control batteries	41
7.5 Fuse for the digital TV tuner	42
<b>8 Multimedia system RSE (Rear Seat Entertainment)</b>	<b>43</b>
8.1 General description	43
8.2 Overview of the multimedia system	44
8.3 Removing and installing the multi-media system	45
8.4 Deactivating the system lock	46
8.5 Connection jacks for additional equipment	48
8.6 Changing headphone batteries	48
8.7 Changing remote control batteries	49
8.8 Fuse and relay for voltage monitoring	49
<b>9 Compass</b>	<b>50</b>
9.1 General description	50
9.2 Removing and installing roof display unit	50
9.3 Removing and installing vehicle position recognition control unit	52
9.4 Calibrating the compass manually	52



<b>10</b>	<b>Telematics system (USA vehicles only)</b>	<b>55</b>
10.1	General notes	55
10.2	Fault finding	56
10.3	Overview of telematics system	56
10.4	Removing and installing telematics operating unit	57
10.5	Description of functions of telematics operating unit buttons	58
10.6	Removing and installing telematics control unit	59
10.7	Fault finding on telematics system	65
10.8	Coding telematics system	67
10.9	Deactivating transport mode	67
<b>11</b>	<b>Amplifier for sound systems „Sound 1“ and „Sound 2“</b>	<b>68</b>
11.1	General description	68
11.2	Overview - sound systems	68
11.3	Connectors on „Sound 1“ and „Sound 2“ systems	70
11.4	Removing and installing amplifier for sound system	73
<b>12</b>	<b>CD changer</b>	<b>77</b>
12.1	General notes	77
12.2	Removing and installing CD changer	77
<b>13</b>	<b>Telephone system</b>	<b>80</b>
13.1	General notes	80
13.2	Fault finding	80
13.3	Telephone system/preparation for telephone installation with telephone bracket on the dash panel	81
13.4	Telephone system/preparation for telephone installation with telephone bracket in the centre armrest	89
13.5	Removing and installing telephone system microphone	96
<b>14</b>	<b>Loudspeaker systems</b>	<b>98</b>
14.1	Overview of loudspeaker system	98
14.2	Removing and installing front bass loudspeakers	99
14.3	Removing and installing front mid-range loudspeakers	100
14.4	Removing and installing front treble loudspeakers	101
14.5	Removing and installing rear bass loudspeakers	102
14.6	Removing and installing rear mid-range loudspeakers	103
14.7	Removing and installing centre loudspeaker	104
<b>15</b>	<b>Aerial system</b>	<b>106</b>
15.1	Overview of aerial system	106
15.2	Removing and installing aerial amplifier in rear lid	108
15.3	Removing and installing aerial amplifiers over side windows	109
15.4	Removing and installing aerial selection control unit	109
15.5	Removing and installing aerial for navigation and telephone	110
15.6	Removing and installing roof aerial (USA vehicles only)	112
15.7	Renewal of aerial wiring	113
<b>16</b>	<b>Multifunction steering wheel</b>	<b>114</b>
16.1	Fault finding	114
16.2	Removing and installing steering wheel operating unit	114
16.3	Removing and installing multifunction steering wheel control unit	116
16.4	Adapting multifunction steering wheel components	118
<b>17</b>	<b>Notes on operating mobile telephones and two-way radios</b>	<b>119</b>
17.1	General notes	119
17.2	Notes on performing repair work	120
17.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	121
17.4	Transmitting power and aerial fitting locations	122
<b>18</b>	<b>Suppression measures</b>	<b>124</b>
18.1	Suppression measures	124