



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Automatic anti-dazzle interior mirror	1
1.2 Removing and installing interior mirror	1
1.3 Bonding on retaining plate for interior mirror with rain sensor	2
2 Compartments, covers and trims	4
2.1 Tools	4
2.2 Removing and installing centre console	4
2.3 Removing and installing centre console compartment	6
2.4 Removing and installing cover for selector mechanism	8
2.5 Removing and installing ashtray in console	9
2.6 Removing and installing footwell covers	10
2.7 Removing and installing dash panel end trims	11
2.8 Removing and installing centre dash panel compartment	12
2.9 Removing and installing glove compartment	12
2.10 Removing and installing instrument binnacle	18
2.11 Removing and installing steering column trim	19
2.12 Removing and installing sun visor	20
2.13 Removing and installing console in moulded headliner	21
2.14 Removing and installing vehicle wallet compartment	23
2.15 Removing and installing glove compartment lid	25
2.16 Removing and installing centre armrest	26
2.17 Removing and installing upper part of centre armrest	27
2.18 Removing and installing centre armrest mounting	28
2.19 Removing and installing bearing bracket for centre armrest	32
3 Sill panel mouldings	33
3.1 Tools	33
3.2 Removing and installing sill panel moulding	33
4 Sun blind	35
4.1 Removing and installing sunblind on rear door trim	35
5 Grab handles	36
5.1 Removing and installing grab handles (roof)	36
69 - Passenger protection	37
1 Seat belts	37
1.1 General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	38
1.2 Special instructions for belt tensioners	39
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	39
1.4 Assembly overview - front seat belts	39
1.5 Removing and installing front seat belts	40
1.6 Removing and installing belt height adjustment (mechanical)	42
1.7 Removing and installing front belt buckle	43
1.8 Removing and installing belt end anchor	44
1.9 Removing and installing rear seat belts	46
1.10 Removing and installing rear belt buckles	49
1.11 Removing and installing belt height adjuster, C-pillar	50
1.12 Removing and installing middle rear seat belt	51
2 Inspecting seat belts	53
2.1 Points to check	53
3 Checking child seat anchors after an accident	57



3.1	Points to check	57
4	Airbag	58
4.1	Overview of locations - airbag systems	58
4.2	General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	60
4.3	Special instructions for driver and front passenger airbag	61
4.4	Special instructions for curtain airbag modules	62
4.5	Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	62
4.6	Deactivating the airbag	62
4.7	Renewing airbag units following an accident	63
4.8	Removing and installing airbag control unit (J234)	63
4.9	Removing and installing driver airbag unit	65
4.10	Removing and installing driver side airbag unit mounting plate	68
4.11	Removing and installing steering wheel	71
4.12	Removing and installing return spring with slip ring	73
4.13	Removing and installing front passenger airbag unit	74
4.14	Removing and installing side airbags on driver and front passenger sides	78
4.15	Removing and installing curtain airbag on driver and passenger side	80
4.16	Removing and installing Seat occupied sensor, front passenger side G128	83
4.17	Adapting components	87
5	Seat occupied recognition (USA)	88
5.1	Safety precautions for when working on seat occupied recognition	88
5.2	Procedure for seat belt tensioner after an accident and /or triggering of airbag	88
5.3	Assembly overview - seat occupied recognition (USA)	88
5.4	Components of repair kit for seat occupied recognition	89
5.5	Removing components of seat occupied recognition (vehicles with electrically operated seats)	90
5.6	Installing repair kit for seat occupied recognition (vehicles with electrically operated seats)	96
5.7	Importers reporting obligation	98
5.8	Performing basic settings for seat occupied recognition	99
6	Crash sensors	100
6.1	Overview of locations - crash sensors	100
6.2	Removing and installing front airbag crash sensors	100
6.3	Removing and installing side airbag crash sensors	102
6.4	Removing and installing rear side airbag crash sensors	103
70	Trim, insulation	106
1	Dash panel	106
1.1	Tools	106
1.2	Removing and installing dash panel	106
2	Assembly carrier	119
2.1	Removing and installing assembly carrier	119
3	Door trims	127
3.1	Tools	127
3.2	Removing and installing front door trim on driver side	127
3.3	Removing and installing front door trim on passenger side	128
3.4	Removing and installing rear door trim	130
4	Pillar trims	132
4.1	Tools	132
4.2	Removing and installing upper trim for A-pillar	132
4.3	Removing and installing lower trim for A-pillar	133
4.4	Removing and installing B-pillar trim	135
4.5	Removing and installing C-pillar trim	136
4.6	Removing and installing D-pillar trim	137



5	Rear lid trims	139
5.1	Tools	139
5.2	Removing and installing lower rear lid trim	139
5.3	Removing and installing window frame trims	141
6	Luggage compartment trims	143
6.1	Tools	143
6.2	Removing and installing rear lock carrier cover	143
6.3	Removing and installing luggage compartment floor	144
6.4	Removing and installing side panel trim	145
7	Roof trims	148
7.1	Tools	148
7.2	Removing and installing roof frame trim	148
7.3	Removing and installing moulded headlining	149
72 -	Seat frames	152
1	Front seats	152
1.1	Tools	152
1.2	Removing and installing seat	153
1.3	Removing and installing seat rail covers	157
1.4	Removing and installing trim of front seat frame	160
1.5	Removing and installing seat frame	160
1.6	Removing and installing trim	161
1.7	Removing and installing handle for seat height adjuster (manually adjustable seat)	163
1.8	Removing and installing seat switch unit (electrically adjustable seat)	164
1.9	Removing and installing control unit (electrically adjustable seat)	165
1.10	Removing and installing longitudinal seat adjustment (electrically adjustable seat)	168
1.11	Removing and installing longitudinal seat adjustment motor (electrically adjustable seat)	170
1.12	Removing and installing seat height adjustment motor (electrically adjustable seat)	172
1.13	Removing and installing seat angle adjustment motor (electrically adjustable seat)	173
1.14	Removing and installing seat fittings trim (electrically adjustable seat)	174
1.15	Removing and installing backrest adjustment wheel	175
1.16	Removing and installing backrest	176
1.17	Removing and installing heated driver seat control unit J131 and heated front passenger seat control unit J132	178
2	Rear seats	180
2.1	Removing and installing right bench seat (▷ week 47, 2006)	180
2.2	Removing and installing left bench seat (▷ week 47, 2006)	181
2.3	Removing and installing right bench seat (week 48, 2006 ▷)	182
2.4	Removing and installing heated rear left seat control unit J215 and heated rear right seat control unit J216	185
2.5	Removing and installing right backrest	186
2.6	Removing and installing left backrest	187
2.7	Removing and installing backrest mounting bracket	188
2.8	Removing and installing mounting bracket	190
2.9	Removing and installing backrest mounting	191
74 -	Seat - padding, covers	194
1	Front seat covers and padding	194
1.1	Tools	194
1.2	Removing and installing front seat cushion cover and padding	194
1.3	Removing and installing front seat backrest cover and padding	196
2	Rear seat covers and padding	199
2.1	Tools	199
2.2	Removing and installing bench seat cover and padding	199
2.3	Removing and installing rear backrest cover and padding	202



2.4 Removing and installing drink holders in centre armrest 206