



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Electrical and electronic components and fitting locations	2
1.3 Assembly overview - lock carrier, service position	3
1.4 Assembly overview - lock carrier service position, W12 petrol engine	4
1.5 Service position	5
1.6 Assembly overview - lock carrier with add-on parts	8
1.7 Removing and installing lock carrier with add-on parts	9
2 Wing	11
2.1 Tools	11
2.2 Assembly overview - front wing	11
2.3 Removing and installing front wing	12
2.4 Front wing - bolting sequence	14
3 Noise insulation	16
3.1 Tools	16
3.2 Assembly overview - noise insulation	16
4 Underbody cladding	18
4.1 Tools	18
4.2 Assembly overview - underbody panel	18
5 Plenum chamber bulkhead	20
5.1 Tools	20
5.2 Assembly overview - plenum chamber bulkhead	20
6 Skid plate	21
6.1 Tools	21
6.2 Assembly overview - skid plate	21
6.3 Assembly overview - engine skid plate	23
6.4 Removing and installing engine skid plate	24
6.5 Assembly overview - gearbox skid plate	26
6.6 Removing and installing gearbox skid plate	27
6.7 Assembly overview - rear differential skid plate	29
6.8 Removing and installing rear differential skid plate	30
6.9 Assembly overview - fuel tank underride guard	32
6.10 Assembly overview - wishbone skid plate	33
6.11 Assembly overview - sill guard	34
55 - Bonnet, rear lid	35
1 Contact corrosion!	35
2 Bonnet	36
2.1 Tools	36
2.2 Assembly overview - bonnet	36
2.3 Removing and installing bonnet	38
2.4 Removing gas strut	39
2.5 Releasing gas from gas strut	39
2.6 Removing and installing insulation	40
2.7 Assembly overview - locking and release components	40
2.8 Removing and installing bonnet lock	41
2.9 Adjusting bonnet	43
2.10 Separating Bowden cable	45
2.11 Removing and installing release lever	45
3 Rear lid	48
3.1 Tools	48



3.2	Assembly overview - rear lid	48
3.3	Removing and installing rear lid	50
3.4	Adjusting rear lid	51
3.5	Assembly overview - guide pins and guide wedges	53
3.6	Adjusting guide wedge and guide pin	55
3.7	Assembly overview - rear lid hinge	56
3.8	Removing and installing rear lid hinges	56
3.9	Removing and installing gas strut cover > 15.06	58
3.10	Removing and installing gas strut cover 16.06 >	58
3.11	Assembly overview - gas strut for rear lid opening window	59
3.12	Removing and installing gas strut for rear lid opening window	60
3.13	Assembly overview - rear lid gas strut	62
3.14	Removing and installing rear lid gas strut	63
3.15	Releasing gas from gas strut	65
3.16	Assembly overview - hydraulic rear lid drive	65
3.17	Removing and installing hydraulic pump for hydraulic rear lid drive	67
3.18	Removing and installing hydraulic cylinder for hydraulic rear lid drive	69
3.19	Filling with hydraulic fluid and checking fluid level	73
3.20	Removing and installing control unit	75
3.21	Removing and installing angle sensor	76
3.22	Basic setting of rear lid electronics	78
3.23	Assembly overview - locking and release components	79
3.24	Removing and installing locking and release components	80
3.25	Removing and installing rear lid lock	81
3.26	Removing and installing striker pin with power latching system	81
3.27	Removing and installing rear lid release motor	82
3.28	Removing and installing rear lid opening window lock	82
3.29	Removing and installing rear lid window release unit	83
3.30	Assembly overview - handle for vehicles with spare wheel carrier on rear lid	83
3.31	Removing and installing handle for vehicles with spare wheel carrier on rear lid	85
3.32	Rear lid seal	86
3.33	Removing and installing rear lid seal	86
4	Rear spoiler	89
4.1	Tools	89
4.2	Assembly overview - rear spoiler	89
4.3	Removing and installing rear spoiler	90
5	Tank flap unit	92
5.1	Tools	92
5.2	Assembly overview - tank flap unit	92
5.3	Removing and installing fuel tank filler cap locking and release components	94
57	Front doors, door components, central locking	96
1	Front door	96
1.1	Tools	96
1.2	Assembly overview - front door	97
1.3	Assembly overview - fittings carrier individual parts	99
1.4	Assembly overview - door hinges	100
1.5	Greasing new door hinges	102
1.6	Removing and installing door	103
1.7	Door adjustment	103
1.8	Adjusting striker pin	104
1.9	Assembly overview - door handle and door lock	105
1.10	Removing and installing lock cylinder housing	106
1.11	Removing and installing door handle	107
1.12	Door handle with (Kessy) cable routing	109
1.13	Removing and installing door lock	109



1.14	Door seals	114
1.15	Removing and installing inner door seal	115
1.16	Removing and installing outer door seal	115
1.17	Removing and installing door seal	117
2	Central locking	118
2.1	Assembly overview - central locking and convenience system	118
2.2	Adapting keys with remote control	120
2.3	Assembly overview - batteries for main key (foldable) with remote control	121
2.4	Removing and installing batteries for folding main key with remote control system	122
58	Rear doors, door components	123
1	Rear door	123
1.1	Tools	123
1.2	Assembly overview - rear door	124
1.3	Assembly overview - fittings carrier individual parts	126
1.4	Assembly overview - door hinges	127
1.5	Greasing new door hinges	129
1.6	Removing and installing door	130
1.7	Adjusting door	130
1.8	Adjusting striker pin	131
1.9	Assembly overview - door handle and door lock	132
1.10	Removing and installing lock cylinder housing	133
1.11	Removing and installing door handle	134
1.12	Door handle with (Kessy) cable routing	136
1.13	Removing and installing door lock	136
1.14	Door seals	141
1.15	Removing and installing inner door seal	141
1.16	Removing and installing outer door seal	141
1.17	Removing and installing door seal	143
60	Sunroof	144
1	Sunroof with glass panel	144
1.1	Tools	144
1.2	Function	144
1.3	Assembly overview	145
1.4	Removing sliding/tilting sunroof glass panel	147
1.5	Installing sliding/tilting sunroof glass panel	147
1.6	Adjusting height of sliding/tilting sunroof glass panel	148
1.7	Checking parallel running of glass panel	149
1.8	Adjusting parallel running of glass panel	149
1.9	Adjusting panel seal	150
1.10	Renewing panel seal	150
1.11	Removing wind deflector	151
1.12	Removing sliding headliner	151
1.13	Removing drive for sliding/tilting sunroof	152
1.14	Adjusting drive for sunroof (zero position)	152
1.15	Removing pre-selector control for sliding/tilting sunroof	153
1.16	Removing and installing carrier unit	153
1.17	Removing coulisse guide	155
1.18	Operating without current	155
1.19	Cleaning water drain hoses	156
2	Remove sliding/tilting sunroof with solar panel	158
2.1	Tools	158
2.2	Function	158
2.3	Assembly overview	159
2.4	Removing sliding/tilting sunroof solar panel	160



2.5	Installing sliding/tilting sunroof solar panel	161
2.6	Adjusting sliding/tilting sunroof solar panel height	161
2.7	Checking parallel running of solar panel	162
2.8	Adjusting parallel running of solar panel	163
2.9	Renewing panel seal	163
2.10	Removing wind deflector	163
2.11	Removing solar panel trim	164
2.12	Removing sliding/tilting sunroof drive	164
2.13	Adjusting drive for sliding/tilting sunroof (zero position)	165
2.14	Removing preselection control for sliding/tilting sunroof	166
2.15	Removing and installing DC converter	166
2.16	Removing and installing solar contact in solar panel	166
2.17	Removing and installing solar contact in carrier unit	167
2.18	Removing and installing carrier unit	167
2.19	Operating without current	169
2.20	Cleaning water drain hoses	170
63	- Bumpers	172
1	Front bumper > 10.2006	172
1.1	Tools	172
1.2	Repairing bumper cover	172
1.3	Assembly overview - bumper cover	172
1.4	Removing and installing bumper cover	173
1.5	Front bumper add-on parts	175
1.6	Front bumper cover - preparation for vehicles with skid plate	176
1.7	Front bumper cover - preparation for vehicles with cable winch	177
1.8	Front bumper substructure	181
1.9	Assembly overview - bumper carrier	182
1.10	Removing and installing bumper carrier	182
1.11	Bumper carrier with cable winch mounting bracket	183
2	Front bumper 11.2006 >	187
2.1	Tools	187
2.2	Repairing bumper cover	187
2.3	Assembly overview - bumper cover	187
2.4	Removing and installing bumper cover	188
2.5	Front bumper add-on parts	191
2.6	Front bumper substructure	192
2.7	Assembly overview - bumper carrier	193
2.8	Removing and installing bumper carrier	193
3	Rear bumper	195
3.1	Tools	195
3.2	Repairing bumper cover	195
3.3	Assembly overview - bumper cover	195
3.4	Removing and installing bumper cover	196
3.5	Rear bumper add-on parts	199
3.6	Rear bumper substructure	202
3.7	Assembly overview - bumper carrier	203
3.8	Assembly overview - towing bracket	204
3.9	Electrically retractable towing bracket	205
3.10	Removing and installing adjustment motor for electrically retractable towing bracket	208
3.11	Assembly overview - USA towing bracket	210
3.12	USA towing bracket - bolting sequence	211
64	- Glazing	212
1	Flush bonded windows	212
1.1	Tools	212



1.2	Materials	214
1.3	Repairing windscreen	214
1.4	Assembly overview - windscreen	214
1.5	Removing and installing plenum chamber cover	216
1.6	Removing windscreen	218
1.7	Installing windscreen	220
1.8	Preparing windscreen with viewing window for chassis number for vehicles without chassis number	220
1.9	Preparing a removed windscreen for glazing	220
1.10	Preparing new window for glazing	223
1.11	Preparing body flange for glazing	227
1.12	Installation instructions	228
1.13	Minimum curing time	228
1.14	Touching up paint damage	229
1.15	Cleaning off excess adhesive sealing material	229
2	Windows having threaded connections	230
2.1	Tools	230
2.2	Assembly overview - side windows	230
2.3	Removing and installing side window	232
2.4	Assembly overview - rear lid opening window	234
2.5	Removing and installing rear lid opening window	234
2.6	Adjusting rear lid opening window	235
2.7	Adjusting striker pin	235
2.8	Assembly overview - rear lid opening window button and striker pin	235
2.9	Window seal	237
3	Front door windows	238
3.1	Tools	238
3.2	Assembly overview - front door	238
3.3	Assembly overview - window frame parts	240
3.4	Removing and installing door window	241
3.5	Repairing window regulators	244
3.6	Removing and installing window regulator motor	245
4	Rear door windows	246
4.1	Tools	246
4.2	Assembly overview - rear door	246
4.3	Assembly overview - window frame parts	248
4.4	Removing and installing door window	248
4.5	Repairing window regulators	252
4.6	Removing and installing window regulator motor	253
66	Exterior equipment	254
1	Wheel housing liners	254
1.1	Tools	254
1.2	Assembly overview - front wheel housing liner	254
1.3	Assembly overview - rear wheel housing liner	256
2	Exterior mirror	257
2.1	Exterior mirror > 10.2006	257
2.2	Exterior mirror 11.2006 >	261
2.3	Assembly overview - exterior mirror	268
2.4	Removing and installing exterior mirror	268
3	Radiator grille	270
3.1	Tools	270
3.2	Assembly overview - radiator grille > 10.2006	270
3.3	Removing and installing radiator grille > 10.2006	271
3.4	Removing and installing chrome grille > 10.2006	272



3.5	Assembly overview - radiator grille 11.2006 >	272
3.6	Removing and installing radiator grille 11.2006 >	274
3.7	Removing and installing emblem 11.2006 >	276
3.8	Installing number plate carrier 11.2006 >	278
3.9	Installing number plate carrier, USA 11.2006 >	279
4	Mouldings and trims	280
4.1	Tools	280
4.2	Drip channel	281
4.3	B-pillar trim	284
4.4	Removing and installing side window trim	286
4.5	Assembly overview - water deflector	286
4.6	Front wing trim panel	288
4.7	Front door trim panel	290
4.8	Rear door trim panel	292
4.9	Side member protective strips	294
4.10	Renewing roof trim strips	296
4.11	Door trim strips	297
4.12	Protective film and trim film	300
5	Wheel housing, wing and side member extensions	301
5.1	Tools	301
5.2	Materials	301
5.3	Safety requirements	302
5.4	Fitting notes for extensions	302
5.5	Overview - components	303
5.6	Front wheel housing extension	304
5.7	Rear wheel housing extension	306
5.8	Side member extension "R50"	308
5.9	Side member extension "R Line"	311
5.10	Preparing add-on parts for bonding	313
5.11	Preparing new part for bonding	313
5.12	Preparing body part for bonding	313
5.13	Installation instructions	313
5.14	Cleaning guidelines	314
5.15	Minimum curing time	314
5.16	Touching up paint damage	314
5.17	Cleaning off excess adhesive sealing material	314
6	Roof rack	315
6.1	Tools	315
6.2	Assembly overview - guide rail	315
6.3	Removing and installing guide rail	316
6.4	Guide rail - bolting sequence	318
6.5	Assembly overview - roof rack	319
6.6	Removing roof rack	319
6.7	Assembly overview - roof rack repair kit	322
6.8	Removing and installing roof rack repair kit	322
6.9	Removing and installing roof rack lock cylinder	324
6.10	Assembly overview - roof railing	325
6.11	Removing and installing roof railing	326
6.12	Assembly overview - roof-mounted luggage basket	331
6.13	Removing and installing roof-mounted luggage basket	332
7	Spare wheel carrier for rear lid	334
7.1	Tools	334
7.2	Assembly overview - spare wheel carrier for rear lid	334
7.3	Removing and installing spare wheel	336
7.4	Removing and installing spare wheel carrier	336



7.5	Removing and installing lock carrier	338
7.6	Removing and installing lock	339
7.7	Removing and installing emergency release	340
7.8	Adjusting guide for spare wheel carrier	341
8	Lettering	342
8.1	Tools	342
8.2	Attachment notes for lettering	342
8.3	Rear lettering dimensions	342
8.4	Wing lettering dimensions - Individual	344
8.5	Wing lettering dimensions - R-Line	345