



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Identification plate	3
1.3 Vehicle data sticker	4
2 Safety instructions	5
3 Moulded foam elements	6
4 Galvanized body parts	7
4.1 Body	7
4.2 Platform	7
5 Laser welding	8
6 Body panel gaps/shut lines	9
6.1 Body - front	9
6.2 Body - rear	10
7 Body dimensions	11
7.1 Body - front	11
7.2 Body - centre	17
7.3 Body - rear	22
7.4 Floor group - front	23
7.5 Floor group - centre	25
7.6 Floor group - rear	26
8 Alignment bracket set	27
8.1 Overview	27
9 Portal gauge	28
9.1 Overview	28
50 - Body - front	30
1 Renewing wing connecting plate	30
1.1 Removing	31
1.2 Installing	31
2 Renewing upper longitudinal member - partial renewal	32
2.1 Removing	32
2.2 Installing	33
3 Renewing bumper bracket	34
3.1 Removing	35
3.2 Installing	36
4 Renewing front suspension strut mounting	38
4.1 Removing	38
4.2 Installing	39
5 Repairing threads for securing subframe (suspension subframe)	41
5.1 Contents of thread repair kit	42
5.2 Repairing thread	43
6 Renewing front longitudinal member	46
6.1 Removing	46
6.2 Installing	48
7 Renewing front longitudinal member - partial replacement	53
7.1 Removing	54
7.2 Installing	55
51 - Body - centre	58



1	Renewing roof	58
1.1	Removing	59
1.2	Installing	61
2	Renewing front roof cross member	74
2.1	Removing	74
2.2	Installing	75
3	Renewing rear roof cross member	78
3.1	Removing	78
3.2	Installing	80
4	Renewing A-pillar	83
4.1	Removing	87
4.2	Installing	88
5	Renewing A-pillar reinforcement	92
5.1	Removing	93
5.2	Installing	95
6	Renewing B-pillar	98
6.1	Removing	103
6.2	Installing	104
7	Renewing B-pillar reinforcement	106
7.1	Removing	107
7.2	Installing	109
8	Renewing outer side member	111
8.1	Removing	112
8.2	Installing	114
9	Renewing inner side member - partial renewal	115
9.1	Removing	116
9.2	Installing	118
10	Renewing side member reinforcement (reinforcement pipe)	120
10.1	Removing	120
10.2	Installing	121
11	Renewing front floor panel - partial renewal	123
11.1	Removing	124
11.2	Installing	125
12	Renewing rear floor panel - partial renewal	127
12.1	Removing	129
12.2	Installing	130
13	Replacing battery compartment	132
13.1	Removing	133
13.2	Installing	133
53 - Body - rear		135
1	Renewing cross panel	135
1.1	Removing	136
1.2	Installing	137
2	Renewing rear cross panel	138
2.1	Removing	139
2.2	Installing	139
3	Renewing lock carrier	141
3.1	Removing	141
3.2	Installing	143
4	Renewing D-pillar reinforcement	146
4.1	Removing	146
4.2	Installing	147



5	Renewing tail light mounting	149
5.1	Removing	149
5.2	Installing	150
6	Renewing tow bar mounting	152
6.1	Removing	152
6.2	Installing	154
7	Renewing rear longitudinal member - partial replacement	157
7.1	Removing	157
7.2	Installing	159
8	Renewing side panel	163
8.1	Removing	166
8.2	Installing	168
9	Renewing outer wheel housing liner	170
9.1	Removing	171
9.2	Installing	175
10	Renewing spare wheel holder reinforcement	179
10.1	Removing	179
10.2	Installing	182
11	Renewing spare wheel well	184
11.1	Removing	185
11.2	Installing	188