



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Safety information</b>	1
1.1   Safety precautions when working on air conditioning systems	1
1.2   Safety measures when working on vehicles with a start/stop system	1
1.3   Safety precautions when using testing and measuring instruments during a road test	2
1.4   Safety precautions when working on the cooling system	2
1.5   Safety precautions when handling refrigerants	2
1.6   Safety precautions when working on vehicles with auxiliary/supplementary heater	3
1.7   Safety precautions when working on the SCR system	4
2 <b>General information</b>	6
2.1   Type plates	6
2.2   Notes concerning odours in air conditioned vehicles	6
3 <b>Repair instructions</b>	8
3.1   Rules for cleanliness	8
3.2   General information	8
3.3   General repair instructions	8
3.4   Contact corrosion	9
3.5   Nuts and bolts	9
3.6   Routing and attachment of lines	9
3.7   Fitting radiators and condensers	9
3.8   Working on refrigerant circuit	9
3.9   Refrigerant circuit seals	11
4 <b>Technical data</b>	12
4.1   Refrigerant capacity	12
4.2   Refrigerant oil capacities	12
4.3   Oil distribution	13
<b>80 - Heating</b>	<b>14</b>
1 <b>Dismantling and assembling heater unit</b>	14
1.1   Removing and installing motor for front Bitron blower regulation V305	15
1.2   Removing and installing sender for front Bitron blower regulation G462	16
1.3   Removing and installing intake duct	17
1.4   Removing and installing dust and pollen filter with activated charcoal filter insert	18
1.5   Function of dust and pollen filter with activated charcoal filter insert	18
1.6   Removing vents	20
1.7   Removing and installing fresh air/air recirculation flap control motor V154	21
1.8   Removing and installing heat exchanger	21
1.9   Removing and installing auxiliary air heater element Z35	24
1.10   Removing and installing circulation pump V55 for engine codes AXQ, BXH	27
1.11   Checking ventilation	27
1.12   Removing and installing air quality sensor G238	28
1.13   Principle of operation of air quality sensor G238	29
1.14   Removing and installing fresh air intake duct temperature sensor G89	30
1.15   Removing and installing ambient temperature sensor G17	31
<b>87 - Air conditioning system</b>	<b>32</b>
1 <b>Climatronic air conditioning with automatic regulation</b>	32
1.1   Procedure when checking and adjusting components	32
1.2   Function of operating and display unit for Climatronic air conditioning system E87 with air conditioning system control unit J301	33
1.3   Function of operating and display unit for Climatronic air conditioning system E87 "2-C" with Climatronic control unit J255	34



1.4	Function of operating and display unit for Climatronic air conditioning system E87 "4-C" with Climatronic control unit J255 .....	36
1.5	Function of rear Climatronic operating and display unit E265 , "4-C" only .....	39
1.6	Overview - Climatronic components .....	40
1.7	Checking condensate drain hose with valve .....	41
1.8	Removing and installing high-pressure sender G65 .....	41
<b>2</b>	<b>Components for front control and regulation of manual air conditioning system, Climatronic 2-C and Climatronic 4-C .....</b>	<b>44</b>
2.1	Manual air conditioning system - passenger compartment .....	46
2.2	Removing and installing manual air conditioning system and Climatronic control unit J255 .....	47
2.3	Removing and installing sunlight penetration photosensor G107 or sunlight penetration photosensor 2 G134 .....	47
2.4	Removing and installing roof temperature switch G86 .....	48
2.5	Climatronic - passenger compartment .....	49
2.6	Removing and installing right footwell vent temperature sender G262 .....	50
2.7	Removing and installing left footwell vent temperature sender G261 .....	50
2.8	Removing and installing front right chest vent temperature sensor G386 .....	51
2.9	Removing and installing front left chest vent temperature sensor G385 .....	51
2.10	Removing and installing evaporator temperature sensor G308 or evaporator output temperature sender G263 .....	51
2.11	Renewing control motors on heater and air conditioner unit .....	52
2.12	Overview of control motors on heater and air conditioner unit .....	52
2.13	Removing and installing defroster flap control motor V107 , vehicles with "2-C" and "4-C" Climatronic .....	56
2.14	Removing and installing left side vent control motor V299 , "4-C" Climatronic or side vent control motor V262 , "2-C" Climatronic .....	58
2.15	Removing and installing left centre vent control motor V110 , "4-C" Climatronic or centre vent control motor V102 , "2-C" Climatronic .....	59
2.16	Removing and installing left temperature flap control motor V158 .....	59
2.17	Removing and installing left footwell flap control motor V108 , "4-C" Climatronic or footwell flap control motor V261 , "2-C" Climatronic .....	60
2.18	Removing and installing right temperature flap control motor V159 .....	60
2.19	Removing and installing right footwell flap control motor V109 and right temperature flap control motor V159 .....	61
2.20	Removing and installing right centre vent control motor V111 and right side vent control motor V300 .....	63
2.21	Removing and installing defroster flap control motor V107 or front air distribution control motor V145 for vehicles with manual air conditioning system .....	64
2.22	Removing and installing footwell flap control motor V261 or temperature flap control motor V68 for vehicles with manual air conditioning system .....	65
2.23	Removing and installing high-pressure sender G65 .....	66
2.24	Removing and installing air duct in centre console, Climatronic "2-C" .....	68
<b>3</b>	<b>Components for control and regulation of Climatronic "4-C", rear (2nd heater and air conditioner unit) .....</b>	<b>69</b>
3.1	Removing rear Climatronic operating and display unit E265 .....	69
3.2	Components and air duct for Climatronic air conditioning system "4-C" .....	70
3.3	Moving 2nd heater and air conditioner unit, rear to service position .....	73
3.4	Removing and installing rear left air quantity flap control motor V239 .....	74
3.5	Removing and installing rear right air quantity flap control motor V240 .....	75
3.6	Removing and installing rear left temperature flap control motor V313 .....	75
3.7	Removing and installing rear right temperature flap control motor V314 .....	76
3.8	Removing and installing rear left vent temperature sender G405 .....	76
3.9	Removing and installing rear right vent temperature sender G406 .....	77
3.10	Removing and installing motor for rear Bitron blower regulation V306 .....	77
3.11	Removing and installing rear blower regulation sender G463 .....	78
3.12	Checking rear condensation drain hose with valve .....	78
3.13	Removing and installing heat exchanger with rear heater and air conditioner unit installed .....	78



<b>4</b>	<b>Air conditioner compressor .....</b>	<b>81</b>
4.1	Loosening and tightening input shaft of air conditioner compressor .....	81
4.2	Removing and installing input shaft of air conditioner compressor .....	82
4.3	Removing and installing drive plate with overload protection .....	82
4.4	Checking and adjusting true running of drive plate with overload protection .....	83
4.5	Unbolting drive plate from and bolting onto air conditioner compressor .....	83
4.6	Conversion from Hardy disc to Gates coupling .....	85
4.7	Removing and installing mounting with freewheel on air conditioner compressor .....	86
<b>5</b>	<b>Repair work on refrigerant circuit which may be performed only in appropriate workshops by specially trained mechanics .....</b>	<b>90</b>
5.1	Required special tools, workshop equipment, testers, measuring instruments and auxiliary items .....	91
5.2	Repairing refrigerant circuit components in engine compartment (2-C / 4-C) .....	92
5.3	Removing and installing air conditioner compressor and ancillary bracket: engine codes AXQ, BHX .....	93
5.4	Removing and installing air conditioner compressor with ancillary bracket: engine codes AZZ, BAA, BHK, BHL, BKJ, BMV, BMX and BRJ .....	95
5.5	Removing and installing air conditioner compressor, engine code BAR .....	98
5.6	Removing and installing air conditioner compressor with ancillary bracket: engine codes BKS, BUN, CASA, CASB, CASC and CATA .....	102
5.7	Removing and installing air conditioner compressor: engine code AYH, BKW, BLE and CBWA .....	105
5.8	Removing and installing air conditioner compressor with ancillary bracket: engine code BAC, BLK, BPE and BPD .....	107
5.9	Removing and installing air conditioner compressor with ancillary bracket: engine code BJJ .....	110
5.10	Removing and installing evacuating and charging valves, low-pressure side .....	113
5.11	Removing and installing evacuating and charging valves, high-pressure side .....	115
5.12	Removing dryer cartridge .....	116
5.13	Checking high-pressure safety valve on air conditioner compressor .....	118
5.14	Notes on installing air conditioner compressor .....	119
5.15	Removing and installing refrigerant temperature sender G454 .....	121
5.16	Removing and installing expansion valve .....	122
5.17	Removing and installing rear expansion valve .....	123
5.18	Removing and installing condenser .....	124
5.19	Removing and installing heater and air conditioning unit .....	126
5.20	Dismantling and assembling heater and air conditioning unit .....	127
5.21	Removing and installing evaporator .....	129
5.22	Repairing components of refrigerant circuit of 2nd heater and air conditioning unit "4-C" .....	130
5.23	Removing and installing 2nd heater and air conditioning unit at rear .....	132
5.24	Dismantling and assembling 2nd heater and air conditioning unit .....	136
5.25	Removing and installing evaporator with heater and air conditioner unit installed .....	137