



Contents

82 - Supplementary heating	1
1 Auxiliary heater Thermo Top Z/C -B- (petrol) or -D- (diesel)	1
1.1 Safety measures for working on vehicles with auxiliary heaters	1
2 Notes on general repairs on vehicles with auxiliary heaters	2
3 Rules for cleanliness when working on the auxiliary heater and the fuel system	3
4 Auxiliary heater Thermo Top Z/C -D-	4
4.1 Repairing the auxiliary heater Thermo Top Z/C -D-	4
5 Auxiliary heater components	8
5.1 Removing and installing auxiliary heater Thermo Top Z/C -D-	8
5.2 Removing and installing heater cooler shut-off valve N279	12
6 Dismantling and assembling auxiliary heater Thermo Top Z/C -D-	15
6.1 Removing and installing connector strip cover	16
6.2 Connector strip assignment for auxiliary heater	16
6.3 Pin assignment of the connectors	17
6.4 Removing and installing combustion air blower V6	17
6.5 Removing and installing combustion chamber	18
6.6 Removing and installing glow plug with flame monitoring Q8	18
6.7 Connecting auxiliary heater -Thermo Top Z/C -D- in coolant circuit, 10-cylinder	18
6.8 Fuel supply to auxiliary heaters Thermo Top Z/C -D-	19
6.9 Regulating auxiliary heater -Thermo Top Z/C -D- (preheater)	25
6.10 Regulation of auxiliary heater Thermo Top Z/C -D- with preselection clock E111 and/or remote control	26
6.11 Remote control operation	27