



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation, capacities	1
2 Overview - power transmission	3
3 Calculating overall gear ratio "i"	4
4 Repair instructions	5
4.1 General repair instructions	5
30 - Clutch	8
1 Repairing clutch mechanism	8
1.1 Overview	8
1.2 Assembly overview - pedal cluster	10
1.3 Removing, installing and adjusting clutch pedal switch F36	12
1.4 Removing and installing clutch pedal switch F194 (interlock switch)	13
1.5 Removing and installing over-centre spring	14
1.6 Removing and installing clutch pedal	15
1.7 Assembly overview - hydraulics (LHD)	16
1.8 Assembly overview - hydraulics (RHD)	19
1.9 Removing and installing master cylinder	21
1.10 Bleeding clutch mechanism	22
2 Repairing clutch release mechanism	24
2.1 Removing and installing slave cylinder	25
3 Repairing clutch	28
4 Check and, if necessary, reset adjuster ring of self-adjusting pressure plate of new clutches only	32
34 - Controls, housing	35
1 Repairing selector mechanism	35
1.1 Installation position of selector mechanism	35
1.2 I - Removing and installing gear knob and cover	37
1.3 II - Repairing gear lever and selector housing	39
1.4 III - Assembly overview - removing and installing selector cables	40
1.5 Removing and installing selector mechanism	42
1.6 Adjusting selector mechanism	46
2 Removing and installing gearbox	52
2.1 Removing and installing gearbox, vehicles with 5-cylinder diesel engines	52
2.2 Removing and installing gearbox, vehicles with 6-cylinder diesel engines	59
2.3 Removing and installing gearbox, vehicles with 6-cylinder petrol engine	66
2.4 Transporting gearbox	77
3 Checking gear oil	78
4 Gearbox	79
4.1 Assembly overview - components on gearbox	79
4.2 Installing to engine and gearbox support	81
4.3 Renewing locking pin	82
5 Renewing seals and sealing covers	83
5.1 Renewing input shaft seal	83
5.2 Renewing output shaft seal	84
5.3 Renewing seals for rotary gear and gate selector shafts	86
5.4 Renewing layshaft cap	88
6 Selector unit	90



6.1 Removing and installing selector unit 90