



Contents

00 - Technical data	1
1 Suggestions and criticism, general repair notes	1
1.1 Suggestions and criticism of this workshop manual	1
1.2 Information about 6-speed automatic gearbox 09D, general repair notes	2
1.3 Brief overview - driveline guide	2
1.4 Tools	3
1.5 Gearbox	4
1.6 Gaskets, seals	4
1.7 Oil	4
1.8 Nuts and bolts	5
1.9 Electrical components	5
1.10 Guided fault finding, vehicle self-diagnosis and testing	5
2 Gearbox identification	6
3 Identification codes, engine allocation, Touareg 2003 ►	7
3.1 Allocation for vehicles with a petrol engine	7
3.2 Allocation for vehicles with a diesel engine	7
4 Capacity	8
32 - Torque converter	9
1 Proper handling and installation of torque converter	9
1.1 Checking torque converter	10
1.2 Removing and installing torque converter oil seal	10
1.3 Draining torque converter	11
1.4 Installing torque converter	11
37 - Controls, housing	14
1 Connecting »tester«	14
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051	14
2 Repairing selector mechanism	16
2.1 Checking selector mechanism	16
2.2 Dismantling and assembling selector mechanism	17
2.3 Removing and installing selector lever handle	18
2.4 Checking and adjusting selector lever cable	21
2.5 Removing and installing selector lever cable	23
2.6 Removing and installing cover	24
2.7 Signal magnet for Tiptronic switch F189	25
2.8 Removing and installing cover	27
2.9 Releasing selector lever without electrical current (emergency release)	27
2.10 Removing and installing selector lever position P solenoid N380	28
2.11 Removing and installing selector lever lock solenoid N110	29
2.12 Removing and installing selector lever locked in position P switch F319	30
2.13 Removing and installing selector mechanism	31
3 Renewing needle bearing for starter	35
3.1 Renewing needle bearing for starter	36
4 Removing and installing gearbox	37
4.1 Removing and installing gearbox, vehicles with R5 diesel engine	37
4.2 Removing and installing gearbox - vehicles with V6 TDI	50
4.3 Removing and installing gearbox, vehicles with V6 petrol engine, V8 petrol engine, V10 TDI and W12 petrol engine	59
4.4 Transporting gearbox	67
5 Checking ATF level and topping up	68
5.1 Brief description	69



5.2	Checking ATF level and topping up	69
6	ATF lines and ATF cooler	73
6.1	Assembly overview - ATF lines, vehicles with R5 diesel engines	73
6.2	Assembly overview - ATF lines, vehicles with V6 petrol engine and V6 TDI engine	74
6.3	Assembly overview - ATF lines, vehicles with V8 petrol and V10 diesel engines, W12 engine	75
6.4	Removing and installing ATF lines and ATF cooler	76
6.5	Cleaning ATF lines and ATF cooler	78
6.6	Bleeding ATF system	79
7	Control unit for automatic gearbox J217	80
7.1	Removing and installing automatic gearbox control unit J217	80
8	Renew seals	83
8.1	Renewing output shaft seal	83
8.2	Renewing oil seals for selector shaft	84
38	Gears, control	86
1	Removing and installing oil pan	86
1.1	Removing	86
1.2	Installing	86
1.3	Specified torques	87
2	Removing and installing ATF strainer	88
2.1	Removing	88
2.2	Installing	88
2.3	Specified torques	89
3	Removing and installing hydraulic pressure sender 1 for automatic gearbox G193 and hydraulic pressure sender 2 for automatic gearbox G194	90
3.1	Removing	90
3.2	Installing	90
4	Overview - removing and installing valve body	92
4.1	Removing and installing valve body	92
4.2	Removing and installing gearbox output speed sender G195	94
5	Removing, installing and adjusting multifunction switch F125	96
5.1	Removing	96
5.2	Installing and adjusting	96