



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine to assembly stand	11
1.3 Installing engine	13
13 - Crankshaft group	16
1 Dismantling and assembling engine	16
1.1 Assembly overview - chain drive	16
1.2 Assembly overview - cylinder block	19
1.3 Removing and installing vibration damper	21
1.4 Removing and installing engine bracket and engine mounting on left or right side	22
1.5 Removing and installing poly V-belt	24
2 Removing and installing sealing flanges and dual-mass flywheel	26
2.1 Assembly overview - sealing flange	26
2.2 Removing and installing drive plate	27
2.3 Removing and installing seal, flywheel end	28
2.4 Renewing crankshaft oil seal, vibration damper end	29
2.5 Renewing crankshaft sealing flange -vibration damper side-	31
3 Assembly overview - crankshaft	34
3.1 Allocation of crankshaft bearing shells (classification)	35
4 Dismantling and assembling pistons and conrods	38
4.1 Assembly overview - pistons and conrods	38
4.2 Checking pistons, piston rings and cylinder bores	39
15 - Cylinder head, valve gear	42
1 Cylinder head	42
1.1 Assembly overview - cylinder head	42
1.2 Removing and installing cylinder head	46
1.3 Checking valve timing	52
1.4 Installing timing chains for intermediate shaft drive and camshaft drive	54
1.5 Installing camshaft adjuster with timing chain for camshaft drive	60
1.6 Removing and installing cylinder head cover	63
1.7 Assembly overview - removing and installing cover	65
1.8 Checking compression	68
2 Valve gear	71
2.1 Assembly overview	71
2.2 Removing and installing camshafts	73
2.3 Removing and installing camshaft control valves	80
2.4 Renewing valve stem seals	84
2.5 Checking valve guides	85
2.6 Reworking valve seats	86
17 - Lubrication	89
1 Removing and installing parts of lubrication system	89
1.1 Assembly overview	89
1.2 Dismantling and assembling oil filter housing	92
1.3 Dismantling and assembling oil pump	94



1.4	Removing and installing oil sump	95
1.5	Checking oil pressure and oil pressure switch	97
19 - Cooling		100
1	Removing and installing parts of cooling system	100
1.1	Assembly overview - radiator	101
1.2	Assembly overview - radiator fan	103
1.3	Assembly overview - parts of cooling system, body side	103
1.4	Assembly overview - thermostat housing	105
1.5	Removing and installing thermostat housing	106
1.6	Removing and installing thermostat	107
1.7	Assembly overview - parts of cooling system, engine side	108
1.8	Coolant hose schematic diagram	110
1.9	Draining and filling coolant	111
1.10	Removing and installing radiator	114
1.11	Removing and installing coolant pump	115
1.12	Checking cooling system for leaks	116
20 - Fuel supply system		118
1	Parts of fuel supply system	118
1.1	Assembly overview - fuel tank with attachments	119
1.2	Assembly overview - fuel filter	121
1.3	Schematic diagram of fuel lines and components in fuel tank	121
1.4	Safety precautions when working on fuel supply system	123
1.5	Rules for cleanliness	123
1.6	Renewing fuel filter	124
1.7	Bleeding fuel system	125
1.8	Emptying fuel tank	127
1.9	Removing and installing fuel delivery unit, fuel gauge sender and suction jet pumps	130
1.10	Removing and installing fuel tank with attached components	132
1.11	Checking fuel pumps	135
2	Electronic power control (EPC)	146
3	Activated charcoal filter system (vehicles with engine code AZZ, BKJ, BMV or BRJ)	148
3.1	Assembly overview - activated charcoal filter system	149
4	Activated charcoal filter system (vehicles with engine code BAA or BMX)	151
4.1	Assembly overview - activated charcoal filter system	152
4.2	Checking fuel system for leaks	153
24 - Mixture preparation - injection		160
1	Repairing injection system	160
1.1	Assembly overview - intake manifold	160
1.2	Assembly overview - fuel rail	162
1.3	Assembly overview - air filter	162
1.4	Safety precautions	165
1.5	Rules for cleanliness	165
1.6	Technical data	166
2	Checking components	167
2.1	Checking injectors	167
2.2	Checking fuel pressure regulator and holding pressure	169
3	Engine control unit	172
3.1	Removing and installing engine control unit	172
3.2	Removing and installing anti-theft engine control unit	172
26 - Exhaust system		175
1	Removing and installing parts of exhaust system	175



1.1	Assembly overview - exhaust manifold with starter catalytic converters and attachments	176
1.2	Silencer with mountings	178
1.3	Removing and installing exhaust manifolds and exhaust pipes with starter catalytic converters	179
2	Secondary air system	181
2.1	Assembly overview - parts of secondary air system	181
2.2	Checking combination valve	183
28 - Ignition system		185
1	Repairing ignition system	185
1.1	Assembly overview - parts of ignition system	185
1.2	Safety precautions	187
1.3	Test data, spark plugs	187
1.4	Removing and installing ignition coils with output stage	188