



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine on engine and gearbox support VAS 6095	11
1.3 Installing engine	13
2 Assembly mountings	16
2.1 Assembly overview - assembly mountings	16
2.2 Removing and installing engine mountings	16
13 - Crankshaft group	21
1 Dismantling and assembling engine	21
1.1 Part I	22
1.2 Part II	25
1.3 Removing and installing poly V-belt	27
2 Sealing flange and dual-mass flywheel/drive plate	29
2.1 Assembly overview - sealing flanges and dual-mass flywheel/drive plate	29
2.2 Assembly overview - timing chain covers	30
2.3 Removing and installing seal, flywheel end	31
2.4 Removing and installing sealing flange on gearbox side	32
2.5 Removing and installing flywheel	35
2.6 Removing and installing drive plate	36
2.7 Renewing crankshaft sealing flange -vibration damper side-	37
3 Crankshaft	40
3.1 Assembly overview - crankshaft	40
3.2 Fitting sender wheel to crankshaft	41
3.3 Allocation of main bearing shells	42
4 Pistons and conrods	47
4.1 Assembly overview - pistons and conrods	47
4.2 Checking piston and cylinder	48
4.3 Piston and cylinder dimensions	52
15 - Cylinder head, valve gear	53
1 Cylinder head	53
1.1 Assembly overview - cylinder head	53
1.2 Removing and installing cylinder head	56
1.3 Checking valve timing	63
1.4 Removing and installing camshaft adjuster	69
1.5 Removing and installing chain drive for oil pump	82
1.6 Removing and installing camshaft drive timing chain, vehicles with vacuum pump	91
1.7 Removing and installing camshaft drive timing chain, vehicles with no vacuum pump	95
1.8 Removing and installing cylinder head cover	99
1.9 Assembly overview - mechanical vacuum pump	101
1.10 Removing and installing mechanical vacuum pump	102
1.11 Installing cover oil seals	104
1.12 Checking compression	105
2 Valve gear	108
2.1 Assembly overview - valve gear	108
2.2 Camshafts, checking axial clearance	110



2.3	Assembly overview - timing housing	111
2.4	Removing and installing camshaft control valves	112
2.5	Removing and installing camshafts	114
2.6	Camshaft identification	121
2.7	Renewing valve stem seals	121
2.8	Valve dimensions	124
2.9	Checking valve guides	124
2.10	Reworking valve seats	125
17	- Lubrication	127
1	Parts of lubrication system	127
1.1	Engine oil	127
1.2	Assembly overview - sump, oil pump and oil filter bracket	128
1.3	Removing and installing oil sump	130
1.4	Removing and installing oil pump	135
1.5	Assembly overview - oil filter housing	138
1.6	Removing and installing left engine support with oil filter housing	140
1.7	Removing and installing engine oil cooler	143
1.8	Checking oil pressure and oil pressure switch	145
19	- Cooling	149
1	Parts of cooling system	149
1.1	Assembly overview - radiator	150
1.2	Assembly overview - radiator fan	152
1.3	Assembly overview - cooling system, engine side, front and rear	152
1.4	Assembly overview - cooling system, engine side, left	153
1.5	Assembly overview - coolant pump and thermostat	154
1.6	Assembly overview - parts of cooling system, body side	156
1.7	Coolant hose schematic diagram	157
1.8	Draining and filling coolant	158
1.9	Removing and installing fan support with fans	161
1.10	Removing and installing radiator	161
1.11	Removing and installing, checking thermostat	163
1.12	Removing and installing coolant pump	164
1.13	Checking cooling system for leaks	166
20	- Fuel supply system	169
1	Safety precautions	169
1.1	Safety precautions when working on fuel supply system	169
1.2	Releasing pressure in high-pressure area	170
2	Parts of fuel supply system	172
2.1	Rules for cleanliness	173
2.2	Assembly overview - fuel tank with attachments	174
2.3	Assembly overview - fuel filter	176
2.4	Renewing fuel filter	176
2.5	Emptying fuel tank	178
2.6	Removing and installing fuel gauge sender and suction-jet pumps	181
2.7	Removing and installing fuel delivery unit and fuel gauge sender	183
2.8	Removing and installing fuel tank with attached components	186
2.9	Checking fuel pump (vehicles with one-piece intake manifold)	190
2.10	Checking fuel pumps (vehicles with two-piece intake manifold)	199
3	Electronic power control (EPC)	207
3.1	Function of EPC system	207
3.2	Assembly overview - accelerator	207
4	Activated charcoal filter system	209



4.1	Function	209
4.2	Assembly overview - activated charcoal filter system (vehicles up to 08.2006)	210
4.3	Assembly overview - activated charcoal filter system (vehicles from 08.2006)	211
5	Activated charcoal filter system (vehicles for USA and Canada up to 08.2006)	212
5.1	Assembly overview - activated charcoal filter system	213
5.2	Checking fuel system for leaks	215
6	Activated charcoal filter system (vehicles for USA and Canada from 08.2006)	222
6.1	Assembly overview - activated charcoal filter system	223
6.2	Checking fuel system for leaks	224
24	Mixture preparation - injection	232
1	Injection system (vehicles with one-piece manifold)	232
1.1	General notes on the injection system	233
1.2	Rules for cleanliness	233
1.3	Technical data	233
1.4	Assembly overview - intake manifold	234
1.5	Checking vacuum reservoir in intake manifold for leaks	235
1.6	Checking vacuum unit for intake manifold flaps	236
1.7	Assembly overview - fuel rail with high-pressure pump and injectors	237
1.8	Assembly overview - air filter	240
1.9	Assembly overview - suction-jet pump	241
1.10	Removing and installing intake manifold	242
1.11	Removing and installing high-pressure pump	248
1.12	Checking fuel pressure sender G247	250
1.13	Removing and installing injectors	253
1.14	Renewing Teflon combustion chamber seal and support washer on injector	256
2	Injection system (vehicles with two-piece manifold)	261
2.1	General notes on the injection system	262
2.2	Rules for cleanliness	262
2.3	Technical data	262
2.4	Assembly overview - intake manifold	263
2.5	Checking vacuum reservoir in intake manifold for leaks	264
2.6	Checking vacuum unit for intake manifold flap	265
2.7	Assembly overview - fuel rail with high-pressure pump and injectors	266
2.8	Assembly overview - air filter	269
2.9	Removing and installing intake manifold upper part	270
2.10	Removing and installing intake manifold lower part with fuel rail	273
2.11	Removing and installing high-pressure pump	276
2.12	Checking fuel pressure sender G247	278
2.13	Removing and installing injectors	281
2.14	Renewing Teflon combustion chamber seal and support washer on injector	284
3	Engine control unit	288
3.1	Removing and installing engine control unit	288
3.2	Removing and installing anti-theft engine control unit	288
26	Exhaust system	292
1	Parts of the exhaust system	292
1.1	Assembly overview - exhaust manifold with starter catalytic converters and attachments	293
1.2	Silencer with mountings	295
1.3	Removing and installing exhaust manifolds and exhaust pipes with starter catalytic converters	296
1.4	Removing and installing catalytic converters	297
28	Ignition system	299
1	Ignition system	299



1.1	General notes on ignition system	299
1.2	Assembly overview - ignition system	299
1.3	Safety precautions	301
1.4	Test data, spark plugs	302
1.5	Removing and installing ignition coils with output stage	302