



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine data	1
1.2 Numbering of cylinders	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
13 - Crankshaft group	22
1 Cylinder block - belt pulley end	22
1.1 Assembly overview - poly V-belt drive for alternator	22
1.2 Removing and installing poly V-belt	23
1.3 Removing and installing vibration damper	24
1.4 Renewing crankshaft oil seal - belt pulley end	25
2 Cylinder block - gearbox end	28
2.1 Assembly overview - drive plate	28
2.2 Removing and installing drive plate	28
2.3 Renewing crankshaft oil seal on timing chain end	29
2.4 Assembly overview - timing chain covers	31
2.5 Removing and installing left and right timing chain covers	32
2.6 Removing and installing lower timing chain cover	35
2.7 Assembly overview - camshafts timing chains	39
2.8 Removing camshaft timing chains from camshafts	42
2.9 Removing and installing camshaft timing chains	49
2.10 Assembly overview - drive chain for valve gear	52
2.11 Removing and installing drive chain for valve gear	54
2.12 Assembly overview - drive chain for auxiliary drives	56
2.13 Removing and installing drive chain for auxiliary drives	56
2.14 Assembly overview - auxiliary drives	58
2.15 Renewing oil seals for auxiliary drives	59
2.16 Removing and installing spur gear drive	61
3 Crankshaft	66
3.1 Assembly overview - crankshaft	66
3.2 Allocation of main bearing shells for new crankshafts	69
3.3 Allocation of main bearing shells for used and re-machined crankshafts	71
3.4 Bearing bush for torque converter	71
3.5 Crankshaft dimensions	72
3.6 Measuring axial clearance	72
3.7 Measuring radial clearance	72
4 Pistons and conrods	74
4.1 Assembly overview - pistons and conrods	74
4.2 Piston and cylinder dimensions	77
4.3 Measuring radial clearance of conrods	77
15 - Cylinder head, valve gear	79
1 Cylinder head	79
1.1 Assembly overview - cylinder head	79
1.2 Removing and installing left cylinder head cover	80
1.3 Removing and installing cylinder head cover (right side)	82
1.4 Removing and installing cylinder head	84
1.5 Checking compression	91



2	Valve gear	94
2.1	Assembly overview - valve gear	94
2.2	Checking axial clearance of camshafts	96
2.3	Removing and installing camshafts	97
2.4	Renewing valve stem seals	105
2.5	Checking supporting elements with hydraulic clearance compensation	109
2.6	Valve dimensions	111
2.7	Checking valve guides	111
2.8	Checking valves	112
17	- Lubrication	113
1	Parts of lubrication system	113
1.1	Assembly overview - oil pump, lower part of sump	113
1.2	Removing and installing lower part of sump	116
1.3	Removing and installing oil pump	120
1.4	Assembly overview - upper part of sump	123
1.5	Removing and installing upper part of sump	124
1.6	Assembly overview - oil retention valve and spray nozzle valve	129
1.7	Removing and installing oil retention valve and spray nozzle valve	130
1.8	Assembly overview - oil filter housing	132
1.9	Removing and installing oil filter housing	133
1.10	Removing and installing oil cooler	133
1.11	Checking oil pressure and oil pressure switch F1	134
1.12	Checking oil level	137
19	- Cooling	138
1	Parts of cooling system	138
1.1	Assembly overview - radiator	139
1.2	Assembly overview - radiator fan	140
1.3	Removing and installing radiator fan mounting with fans	141
1.4	Assembly overview - parts of cooling system, body side	141
1.5	Coolant hose schematic diagram	143
1.6	Draining and filling coolant	144
1.7	Removing and installing radiator	150
1.8	Assembly overview - coolant pipes	151
1.9	Assembly overview - coolant pump and thermostat	168
1.10	Removing and installing coolant pump	169
1.11	Removing and installing recirculation pump V55	171
1.12	Removing and installing map-controlled engine cooling thermostat F265	171
1.13	Removing and installing coolant temperature sender G62	172
1.14	Checking cooling system for leaks	174
20	- Fuel supply system	176
1	Safety precautions	176
1.1	Safety precautions when working on fuel supply system	176
1.2	Releasing pressure in high-pressure area	177
2	Parts of fuel supply system	179
2.1	Rules for cleanliness	180
2.2	Assembly overview - fuel tank with attachments	181
2.3	Assembly overview - fuel filter	183
2.4	Renewing fuel filter	183
2.5	Emptying fuel tank	185
2.6	Removing and installing fuel gauge sender and suction-jet pumps	188
2.7	Removing and installing fuel delivery unit and fuel gauge sender	190
2.8	Removing and installing fuel tank with attached components	193
2.9	Checking fuel pump	197



3	Electronic power control (EPC)	206
3.1	Function of EPC system	206
3.2	Assembly overview - accelerator	206
4	Activated charcoal filter system	208
4.1	Assembly overview - activated charcoal filter system	208
4.2	Checking fuel system for leaks	208
5	Activated charcoal filter system (vehicles for USA and Canada up to 08.2006)	212
5.1	Assembly overview - activated charcoal filter system	213
5.2	Checking fuel system for leaks	215
6	Activated charcoal filter system (vehicles for USA and Canada from 08.2006)	222
6.1	Assembly overview - activated charcoal filter system	223
6.2	Checking fuel system for leaks	224
24	Mixture preparation - injection	232
1	Injection system (vehicles with aluminium intake manifold)	232
1.1	Assembly overview - intake manifold	232
1.2	Removing and installing intake manifold	234
1.3	Assembly overview - injectors and fuel rail	242
1.4	Removing and installing injectors	244
1.5	Assembly overview - high-pressure pump	249
1.6	Removing and installing high-pressure pump	250
1.7	Rules for cleanliness	252
1.8	Technical data	252
2	Injection system (vehicles with plastic intake manifold)	254
2.1	Assembly overview - intake manifold	254
2.2	Removing and installing intake manifold	255
2.3	Assembly overview - injectors and fuel rail	258
2.4	Removing and installing injectors	260
2.5	Assembly overview - high-pressure pump	264
2.6	Removing and installing high-pressure pump	266
2.7	Vacuum hose schematic diagram	268
2.8	Assembly overview - fuel pipes and fuel rail	269
2.9	Rules for cleanliness	269
2.10	Technical data	270
3	Assembly overview - air filter	271
3.1	Removing and installing lower part of air filter	271
3.2	Removing and installing air intake pipe	273
3.3	Disconnecting connecting line to air suspension compressor	274
4	Engine control unit J623	276
4.1	Removing and installing anti-theft engine control unit J623	276
4.2	Removing and installing engine control unit J623	278
26	Exhaust system	279
1	Parts of exhaust system	279
1.1	Assembly overview - exhaust manifold	279
1.2	Removing and installing left exhaust manifold	280
1.3	Removing and installing right exhaust manifold	281
1.4	Assembly overview - catalytic converters, Lambda probes and attachments	282
1.5	Removing and installing left main catalytic converter	286
1.6	Removing and installing left starter catalytic converter	287
1.7	Removing and installing right main catalytic converter	290
1.8	Removing and installing right starter catalytic converter	291
1.9	Assembly overview - silencers with mountings	294
1.10	Separating front and rear silencers	296
1.11	Aligning exhaust system free of stress	297



1.12	Renewing tailpipes	298
2	Secondary air system	300
2.1	Assembly overview - secondary air system	300
2.2	Removing and installing secondary air pump	302
2.3	Checking combination valve for secondary air system	302
2.4	Removing and installing combination valve for secondary air system	303
3	Secondary air system (vehicles for USA and Canada from 06.2007)	304
3.1	Assembly overview - secondary air system	304
3.2	Removing and installing secondary air pump	306
3.3	Checking combination valve for secondary air system	307
3.4	Removing and installing combination valve for secondary air system	308
28	- Ignition system	310
1	Ignition system	310
1.1	Assembly overview - cylinder bank 1	310
1.2	Assembly overview - cylinder bank 2	313
1.3	Safety precautions	316
1.4	Removing and installing ignition coils with output stage	316
1.5	Removing and installing engine speed sender G28	318
1.6	Removing and installing knock sensors	319
1.7	Test data, spark plugs	320