



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine data	1
<b>10 - Removing and installing engine</b>	<b>3</b>
<b>1 Removing and installing engine</b>	<b>3</b>
1.1 Removing engine	4
<b>13 - Crankshaft group</b>	<b>17</b>
<b>1 Dismantling and assembling engine</b>	<b>17</b>
1.1 Assembly overview	17
1.2 Removing and installing poly V-belt	19
<b>2 Sealing flange and drive plate</b>	<b>21</b>
2.1 Assembly overview	21
2.2 Renewing crankshaft oil seal, vibration damper end	23
2.3 Removing and installing drive plate	24
2.4 Renewing crankshaft oil seal -flywheel end-	26
<b>15 - Cylinder head, valve gear</b>	<b>28</b>
<b>1 Cylinder heads</b>	<b>28</b>
1.1 Assembly overview - cylinder bank 1	29
1.2 Assembly overview - cylinder bank 2	32
1.3 Removing and installing cylinder head cover (cylinder banks 1 and 2)	34
1.4 Removing and installing cylinder head (cylinder banks 1 and 2)	36
1.5 Checking compression	42
<b>2 Chain drive</b>	<b>45</b>
2.1 Assembly overview - parts of chain drive	45
2.2 Adjusting valve timing	48
<b>3 Valve gear</b>	<b>58</b>
3.1 Assembly overview - valve gear (cylinder banks 1 and 2)	58
3.2 Reworking valve seats	63
3.3 Removing and installing camshaft control valves	64
3.4 Removing and installing camshafts	66
3.5 Checking valve guides	75
3.6 Renewing valve stem seals	75
<b>17 - Lubrication</b>	<b>78</b>
<b>1 Parts of lubrication system</b>	<b>78</b>
1.1 Engine oil	78
1.2 Oil capacities	78
1.3 Checking engine oil level	79
1.4 Assembly overview - sump	79
1.5 Removing and installing lower part of sump	81
1.6 Removing and installing upper part of sump	83
1.7 Assembly overview - oil pump	86
1.8 Removing and installing oil pump	88
1.9 Assembly overview - oil filter housing	89
1.10 Checking oil pressure and oil pressure switch	90
<b>19 - Cooling</b>	<b>92</b>
<b>1 Parts of cooling system</b>	<b>92</b>
1.1 Assembly overview - radiator	93
1.2 Assembly overview - additional cooler	95



1.3	Assembly overview - radiator fan	96
1.4	Parts of cooling system - engine side, at top	96
1.5	Parts of cooling system - engine side, at upper front	98
1.6	Parts of cooling system - engine side, at front	98
1.7	Parts of cooling system - engine side, at rear	99
1.8	Assembly overview - water pump V36	101
1.9	Parts of cooling system - body side	101
1.10	Coolant hose schematic diagram	103
1.11	Draining and filling coolant	104
1.12	Removing and installing radiator	107
1.13	Removing and installing coolant pump	108
1.14	Removing and installing thermostat housing	109
1.15	Checking cooling system for leaks	110
<b>20</b>	<b>Fuel supply system</b>	<b>112</b>
<b>1</b>	<b>Parts of fuel supply system</b>	<b>112</b>
1.1	Safety precautions when working on fuel supply system	113
1.2	Rules for cleanliness	113
1.3	Assembly overview - fuel tank	113
1.4	Assembly overview - fuel filter	116
1.5	Schematic diagram of fuel lines and components in fuel tank	116
1.6	Renewing fuel filter	118
1.7	Emptying fuel tank	120
1.8	Removing and installing fuel delivery unit, fuel gauge sender and suction-jet pumps	123
1.9	Removing and installing fuel tank with attached components	125
1.10	Checking fuel pumps	129
1.11	Checking delivery rate of pumps	130
1.12	Checking non-return valve of right pump	133
1.13	Checking non-return valve of left pump	134
<b>2</b>	<b>Electronic power control (EPC)</b>	<b>137</b>
2.1	Function of EPC system	137
2.2	Assembly overview - accelerator mechanism	137
<b>3</b>	<b>Activated charcoal filter system</b>	<b>139</b>
3.1	Function	139
3.2	Assembly overview - activated charcoal filter system (vehicles up to 08.2006)	140
3.3	Assembly overview - activated charcoal filter system (vehicles from 08.2006)	141
3.4	Checking fuel system for leaks	142
3.5	Checking activated charcoal filter system breather	144
<b>24</b>	<b>Mixture preparation - injection</b>	<b>147</b>
<b>1</b>	<b>Injection system</b>	<b>147</b>
1.1	Safety precautions	147
1.2	Rules for cleanliness	148
1.3	Assembly overview - intake manifold upper part	148
1.4	Assembly overview - intake manifold lower part	150
1.5	Assembly overview - fuel rail	151
1.6	Assembly overview - air filter	151
1.7	Technical data	153
<b>2</b>	<b>Lambda probes</b>	<b>154</b>
2.1	Fitting locations of Lambda probes	154
2.2	Removing and installing Lambda probe G39 and Lambda probe 2 G108	155
2.3	Removing and installing Lambda probe 3 G285 and Lambda probe 4 G286	156
2.4	Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 2 after catalytic converter G131	157
2.5	Removing and installing Lambda probe 3 after catalytic converter G287 and Lambda probe 4 after catalytic converter G288	157



<b>3</b>	<b>Checking components</b> .....	<b>158</b>
3.1	Checking injectors .....	158
3.2	Checking fuel pressure regulator and holding pressure .....	161
<b>4</b>	<b>Engine control units</b> .....	<b>164</b>
4.1	Removing and installing engine control units .....	164
4.2	Removing and installing anti-theft engine control unit .....	164
<b>26</b>	<b>- Exhaust system</b> .....	<b>168</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b> .....	<b>168</b>
1.1	Assembly overview - exhaust manifold with catalytic converters and add-on parts, cylinder bank 1 .....	168
1.2	Assembly overview - exhaust manifold with catalytic converters and add-on parts, cylinder bank 2 .....	170
1.3	Assembly overview - silencers with mountings .....	172
<b>2</b>	<b>Secondary air system</b> .....	<b>175</b>
2.1	Parts of secondary air system - body side .....	175
2.2	Parts of secondary air system - engine side .....	177
<b>28</b>	<b>- Ignition system</b> .....	<b>179</b>
<b>1</b>	<b>Repairing ignition system</b> .....	<b>179</b>
1.1	Assembly overview - parts of ignition system .....	179
1.2	Safety precautions .....	181
1.3	Test data, spark plugs .....	181
1.4	Removing and installing ignition coils with output stage .....	182