



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	3
1.2 Removing engine from scissor-type assembly platform VAS 6131	14
1.3 Securing engine on engine and gearbox support VAS 6095	15
1.4 Notes on installing	16
13 - Crankshaft group	18
1 Dismantling and assembling engine	18
1.1 Assembly overview - components in the V space	18
1.2 Assembly overview - gear train assembly	20
1.3 Removing and installing gear train assembly	21
1.4 Removing and installing engine mounting and engine support (left and right)	24
1.5 Removing and installing drive plate	25
2 Balancer shaft	27
2.1 Assembly overview - balance shaft	27
3 Crankshaft	28
3.1 Assembly overview - crankshaft	28
3.2 Removing and installing bearing saddle for crankshaft	29
3.3 Crankshaft dimensions	31
4 Sealing flange, seals and vibration damper	32
4.1 Assembly overview - front sealing flange and vibration damper	32
4.2 Renewing crankshaft oil seal, vibration damper end	33
4.3 Renewing crankshaft oil seal - engine timing end	34
4.4 Renewing alternator shaft oil seal	36
5 Valve timing housing	39
5.1 Assembly overview - timing housing	39
6 Pistons and conrods	41
6.1 Assembly overview - pistons and conrods	41
6.2 Checking piston projection at TDC	42
6.3 Piston and cylinder dimensions	42
6.4 Piston rings, cylinder bore and piston installation position	43
15 - Cylinder head, valve gear	45
1 Cylinder head	45
1.1 Assembly overview - cylinder head	45
1.2 Removing and installing camshaft compensating gear and drive gear wheel	47
1.3 Checking valve timing	52
1.4 Adjusting valve timing	54
1.5 Removing and installing cylinder heads	56
1.6 Checking compression	58
2 Valve gear	62
2.1 Assembly overview - valve gear	62
2.2 Reworking valve seats	65
2.3 Checking valve guides	66
2.4 Renewing valve stem seals	67
2.5 Removing and installing camshaft	69



17 - Lubrication	71
1 Engine oil:	71
1.1 Oil capacities	71
1.2 Checking engine oil level	71
2 Oil pan	72
2.1 Assembly overview - sump	72
2.2 Applying sealant	75
3 Assembly overview - oil supply lines	76
3.1 Oil supply line for turbocharger, cylinder bank 1	76
3.2 Oil supply line for turbocharger, cylinder bank 2	77
4 Oil pump, oil filter housing and oil pressure	79
4.1 Assembly overview - oil pump	79
4.2 Assembly overview - oil filter housing	81
4.3 Removing and installing oil filter housing	82
4.4 Checking oil pressure and oil pressure switch	82
4.5 Checking oil pressure at front of engine	84
19 - Cooling	86
1 Parts of cooling system	86
1.1 Assembly overview - radiator	87
1.2 Assembly overview - fans	89
1.3 Parts of cooling system, body side	90
1.4 Parts of cooling system engine side and top	91
1.5 Parts of alternator and fuel cooling	92
1.6 Installation position of continued coolant circulation pump and fuel cooling pump	93
1.7 Assembly overview - thermostat housing	93
1.8 Assembly overview - coolant pump	95
1.9 Coolant hose schematic diagram (vehicles with engine codes AYH, BKW)	96
1.10 Coolant hose schematic diagram (vehicles with engine codes BLE and BWF)	97
1.11 Draining and adding coolant	98
1.12 Removing and installing fan support	100
1.13 Removing and installing radiator	101
1.14 Removing and installing coolant connection	102
1.15 Removing and installing coolant pump	103
20 - Fuel supply system	106
1 Parts of fuel supply system	106
1.1 Safety regulations for working on fuel supply	107
1.2 Rules for cleanliness	107
1.3 Assembly overview - fuel tank with attachments	107
1.4 Assembly overview - fuel filter (vehicles with engine codes AYH, BKW)	110
1.5 Assembly overview - fuel filter (vehicles with engine codes BLE and BWF)	111
1.6 Schematic diagram of fuel lines and components in fuel tank	113
1.7 Connection diagram of fuel hoses in engine compartment (vehicles with engine codes AYH, BKW)	114
1.8 Schematic diagram for fuel hoses in engine compartment (vehicles with engine codes BLE and BWF)	115
1.9 Emptying fuel tank	116
1.10 Removing and installing fuel delivery unit, fuel gauge sender and suction-jet pumps	119
1.11 Removing and installing fuel tank with attached components	121
1.12 Removing and installing fuel filter (vehicles with engine codes AYH, BKW)	125
1.13 Checking fuel pumps	127
1.14 Checking tandem pump and fuel pump	129
1.15 Removing and installing tandem pump and fuel pump	131
1.16 Assembly overview - accelerator mechanism	133



2	Additive tank (vehicles with engine code BLE)	135
2.1	Safety precautions when working on additive tank	135
2.2	Assembly overview - additive tank	135
2.3	Removing and installing additive tank	137
21	Turbocharging/supercharging	140
1	Charge air system with turbocharger	140
1.1	Safety precautions	140
1.2	Rules for cleanliness	140
1.3	Installing hose connections with plug-in connectors	141
1.4	Assembly overview - turbocharger	142
1.5	Assembly overview - parts of charge air cooling	144
1.6	Checking charge air system for leaks	145
23	Mixture preparation - injection	148
1	Repairing diesel direct injection system	148
1.1	Safety precautions	148
1.2	Rules for cleanliness	149
1.3	Removing and installing intake manifold	149
1.4	Assembly overview - intake connecting pipe (vehicles with engine codes AYH, BKW)	151
1.5	Assembly overview - intake manifold (vehicles with engine codes BLE and BWF)	152
1.6	Assembly overview - air filter	153
1.7	Assembly overview - unit injector	155
1.8	Removing and installing unit injector	156
1.9	Checking and adjusting position of pump plungers in unit injectors	158
1.10	Renewing O-rings for unit injectors	160
2	Engine control units	163
2.1	Reading and clearing fault memory of engine control units	163
2.2	Adapting functions and components	164
2.3	Engine control units	165
26	Exhaust system	169
1	Removing and installing parts of exhaust system	169
1.1	Assembly overview - exhaust manifold	170
1.2	Assembly overview - front exhaust pipe with catalytic converter and attachments (vehicles with engine codes AYH and BKW)	171
1.3	Assembly overview - front exhaust pipe with catalytic converter, particulate filter and attachments (vehicles with engine codes BLE and BWF)	172
1.4	Metering pumps for post-injection (engine code BWF)	174
1.5	Assembly overview - silencer with mountings (vehicles with engine codes AYH and BKW)	175
1.6	Assembly overview - silencer with mountings (vehicles with engine codes BLE and BWF)	177
2	Exhaust gas recirculation system	180
2.1	Safety precautions	180
2.2	Rules for cleanliness	180
2.3	Assembly overview - exhaust gas recirculation (vehicles with engine codes AYH, BKW)	181
2.4	Assembly overview - exhaust gas recirculation (vehicles with engine codes BLE and BWF)	182
2.5	Assembly overview - bypass flap with exhaust gas recirculation cooler (vehicles with engine codes BLE and BWF)	184
2.6	Removing and installing bypass flap with exhaust gas recirculation cooler	186
2.7	Vacuum hose schematic diagram (vehicles with engine codes AYH, BKW)	187
2.8	Vacuum hose schematic diagram (vehicles with engine codes BLE and BWF)	189
2.9	Checking exhaust gas recirculation valve (vehicles with engine codes AYH, BKW)	189



28 - Glow plug system	191
1 Glow plugs	191
1.1 Removing, installing and checking glow plugs (vehicles with engine code AYH)	191
1.2 Removing, installing and checking glow plugs (vehicles with engine codes BKW, BLE and BWF)	193