

001 - Climatronic 4-C	1-19
1. Climatronic 4-C	1-3
2. Climatronic control unit, high pressure sender, air conditioning system compressor regulating valve	4
3. Climatronic control unit, footwell flap and defroster flap control motor and potentiometer	5
4. Climatronic control unit, temperature flap and centre vent potentiometer and control motor	6
5. Climatronic control unit, defroster/torso vents shut-off flap and footwell flap potentiometer and control motor	7
6. Climatronic control unit, potentiometer and control motor for temperature flap and left defroster vent/torso vent shut-off flap	8
7. Climatronic control unit, potentiometer and control motor for fresh air/recirculated air and front left torso vent	9
8. Climatronic control unit, sunlight penetration photosensor, temperature sensor, refrigerant temperature sender	10
9. Climatronic control unit, footwell vent temperature sender, blower regulation	11
10. Circulation pump relay, circulation pump	12
11. Rear Climatronic control and display unit, control unit with display in dash panel insert	13
12. Rear Climatronic control and display unit, temperature flap potentiometer, temperature flap control motor	14
13. Rear Climatronic control and display unit, air quantity flap potentiometer and control motor	15
14. Rear Climatronic control and display unit, rear torso vent potentiometer and control motor	16
15. Rear Climatronic control and display unit, B-pillar and footwell shut-off flap potentiometer and control motor	17
16. Rear Climatronic controls and display unit, rear vent temperature sender, rear blower regulation senders and motor	18
17. Residual heat relay, coolant pump	19
002 - Basic equipment	20-43
1. Basic equipment	20-22
2. Onboard supply control unit	23
3. Onboard supply control unit	24
4. Onboard supply control unit, fog light bulb, side light and turn signal bulbs, left headlight dipped beam and main beam bulb	25
5. Onboard supply control unit, switch and instrument illumination regulator, side light and turn signal bulbs, right headlight dipped beam and main beam bulb	26
6. Onboard supply control unit, light switch, fog light switch, rear fog light switch	27
7. Onboard supply control unit, mirror adjustment switch, heater button for exterior mirror	28
8. Onboard supply control unit, interior light and reading light button	29
9. Onboard supply control unit, reading lights, illuminated vanity mirror	30
10. Onboard supply control unit, glove compartment light, engine compartment light, illumination for storage compartment, switch for illumination of storage compartment	31
11. Onboard supply control unit, illumination for dash panel vents and footwell vents	32
12. Onboard supply control unit, cigarette lighter, sockets, bulb for illumination of cigarette lighter and sockets	33
13. Onboard supply control unit, hazard warning light switch, reversing light switch, turn signal system indicator lamp	34
14. Onboard supply control unit, treble horn, bass horn, illumination for footwell vents	35
15. Onboard supply control unit, rain and light detector sensor, relay and pump for headlight washer system, windscreen wiper motor, windscreen and rear window washer pump, radio	36
16. Onboard supply control unit, alternator, brake fluid level warning contact, coolant shortage indicator sender, dash panel insert	37
17. Onboard supply control unit, data bus diagnostic interface, self-diagnosis connection, dash panel insert	38
18. Convenience system central control unit, brake light additional relay	39
19. Convenience system central control unit, bulbs for rear fog light, turn signal, brake lights, tail lights, reversing lights and number plate light	40
20. Convenience system central control unit, turn signal, reversing lights, brake and tail lights	41
21. Convenience system central control unit, rear window wiper motor, rear lid light	42
22. Convenience system central control unit, suppression filter, heated rear window relay, luggage compartment light	43
003 - 3.2 l / 162 kW, engine codes AZZ, BKJ	44-62
1. 3.2 l / 162 kW, engine codes AZZ, BKJ	44-46
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	47
3. Fuses	48
4. Motronic control unit, spark plug connector, spark plugs, ignition coil 1 - 3	49
5. Fuel pump relav. electric fuel pump 2 relav. Motronic control unit. injector. cvlinder 1 - 6	50

6. Motronic control unit, ignition system and spark plugs cylinder 4-6	51
7. Motronic control unit, knock sensors 1 and 2, engine speed sender	52
8. Motronic control unit, coolant temperature display sender, Hall sender, Hall sender 2, brake servo pressure sensor	53
9. Motronic control unit, variable intake manifold change-over valve, inlet camshaft control valve 1, secondary air inlet valve, heater element	54
10. Motronic control unit, lambda probe, lambda probe 2	55
11. Motronic control unit, lambda probe after catalytic converter	56
12. Motronic control unit, air mass meter, intake air temperature sender, brake light switch, clutch pedal switch, brake pedal switch	57
13. Motronic control unit, brake servo relay, high pressure sender, radiator fan control unit	58
14. Motronic control unit, secondary air pump relay and motor, accelerator position sender	59
15. Motronic control unit, throttle valve module, throttle valve drives angle sender 1 and 2	60
16. Control unit with display, data bus diagnostic interface, fuel pump relay, fuel gauge sender 3, self-diagnosis connection	61
17. Control unit with display, oil level and oil temperature sender, oil pressure switch	62
004 - 5.0l/230 kW TDI, engine code AYH	63-82
1. 5.0l/230 kW TDI, engine code AYH	63-65
2. Terminal 30 voltage supply relay, terminal 30 voltage supply relay 2, second battery, battery parallel circuit relay	66
3. Starter, alternator, voltage regulator, terminal 50 voltage supply relay	67
4. Engine control unit, glow plug relay, glow plugs 1 - 5	68
5. Engine control unit, unit injector valve, No. 1-5 cyl.	69
6. Engine control unit, fuel temperature and oil level and oil temperature sender, intake manifold flap motor	70
7. Engine control unit, engine speed sender, Hall sender, coolant temperature and fuel composition sender	71
8. Engine control unit, charge air pressure sender, intake air temperature and coolant temperature, radiator outlet, lambda probe	72
9. Engine control unit, brake light switch, cruise control system brake pedal switch, air mass meter	73
10. Engine control unit, radiator fan control unit, fuel pump relay, exhaust gas recirculation valve, tank circuit pressurisation relay, radiator fan	74
11. Engine control unit, kickdown switch, idling speed switch, accelerator position sender, continued coolant circulation pump and fuel cooling	75
12. Engine control unit, engine control unit 2	76
13. Engine control unit 2, air conditioner compressor regulating valve, intake manifold flap 2 motor, turbocharger 2 control motor	77
14. Engine control unit 2, fuel temperature sender 2, unit injector valve, No. 6 - 10 cyl.	78
15. Engine control unit 2, lambda probe 2, air mass meter 2, charge air pressure sender 2 and intake air temperature sender 2	79
16. Engine control unit 2, glow plugs relay 2, glow plugs 6-10, exhaust gas recirculation valve 2	80
17. Control unit with display, data bus diagnostic interface, fuel pump relay, fuel gauge sender 3, self-diagnosis connection	81
18. Display unit control unit, oil pressure switch	82
005 - Radio delta	83-92
1. Radio delta	83-85
2. Multi-function buttons on right of steering wheel, multi-function steering wheel control unit, steering column electronics control unit	86
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	87
4. Radio, rear right loudspeakers, onboard supply control unit	88
5. Radio, front right loudspeakers, rear left loudspeakers, onboard supply control unit	89
6. Radio and front left loudspeaker, CD changer, onboard supply control unit	90
7. Radio and CD changer, aerial selection control unit, onboard supply control unit	91
8. Aerial selection control unit, onboard supply control unit, aerials	92
006 - Radio and navigation system MFD2 DVD (system 10-passive loudspeaker)	93-102
1. Radio and navigation system MFD2 DVD (system 10-passive loudspeaker)	93-95
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	96
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	97
4. Control unit with display for radio and navigation system, rear right loudspeaker	98
5. Control unit with display for radio and navigation, front loudspeaker, rear loudspeaker, navigation system aerial GPS, onboard supply control unit	99
6. Control unit with display for radio and navigation system, front left loudspeaker, CD changer	100
7. Control unit with display for radio and navigation. aerial selection control unit. CD changer	101

8. Aerial selection control unit, onboard supply control unit, aerials	102
007 - Delta radio system and "Digital Sound Package" (8 channels)	103-114
1. Delta radio system and "Digital Sound Package" (8 channels)	103-105
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	106
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	107
4. Radio, CD changer, onboard supply control unit	108
5. Onboard supply control unit, radio	109
6. Onboard supply control unit, amplifier	110
7. Onboard supply control unit, amplifier, front left and front right door loudspeakers	111
8. Onboard supply control unit, amplifier, rear left and rear right loudspeakers	112
9. Amplifier, front left and front right loudspeakers, onboard supply control unit	113
10. Aerial selection control unit, onboard supply control unit, aerials, aerial amplifier	114
008 - Radio/navigation system MFD2 DVD with "Digital Sound Package" (12 channels)	115-126
1. Radio/navigation system MFD2 DVD with "Digital Sound Package" (12 channels)	115-117
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	118
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	119
4. Control unit with display for radio and navigation system, CD changer	120
5. Control unit with display for radio and navigation system, onboard supply control unit, CD changer, GPS aerial for navigation system	121
6. Amplifier, onboard supply control unit	122
7. Amplifier, front left and front right loudspeakers, onboard supply control unit	123
8. Amplifier, front left and front right loudspeakers, rear left and front right loudspeakers, onboard supply control unit	124
9. Amplifier, rear left and rear right loudspeakers, centre mid-range and treble loudspeaker, onboard supply control unit	125
10. Aerial selection control unit, onboard supply control unit, aerials, aerial amplifier	126
009 - Telephone system	127-131
1. Telephone system	127
2. Multi-function buttons on right of steering wheel, multi-function steering wheel control unit, steering column electronics control unit	128
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	129
4. Mobile telephone operating electronics control unit, mobile telephone, onboard supply control unit	130
5. Mobile telephone operating electronics control unit, onboard supply control unit, telephone aerial, mobile telephone amplifier	131
010 - Telephone system	132-136
1. Telephone system	132
2. Multi-function steering wheel control unit, multi-function buttons on right of steering wheel, steering column electronics control unit	133
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	134
4. Mobile telephone operating electronics control unit, mobile telephone, onboard supply control unit	135
5. Mobile telephone operating electronics control unit, onboard supply control unit, telephone aerial, mobile telephone amplifier	136
011 - Windscreen washer/wiper system, headlight washer system	137-144
1. Windscreen washer/wiper system, headlight washer system	137-139
2. Windscreen wiper switch, steering column electronics control unit	140
3. Onboard supply control unit, steering column electronics control unit, diagnosis connection	141
4. Wiper motor with control unit, rain and light detector sensor, control unit with display for radio and navigation system, onboard supply control unit, radio	142
5. Onboard supply control unit, rear window wiper, windscreen and rear window washer pump	143
6. Headlight washer system relay, headlight washer system pump, windscreen washer fluid level sender, heated washer jets	144
012 - Auxiliary coolant heater, with remote control receiver/ preselection clock	145-148
1. Auxiliary coolant heater, with remote control receiver/ preselection clock	145
2. Control unit in dash panel insert, Data bus diagnostic interface, Roof display unit, Dash panel insert, Diagnostic connection	146
3. Coolant temperature sender for heater, Heater control unit, Heater coolant shut-off valve, Glow plug with flame monitor, Combustion air blower, Metering pump	147
4. Circulation pump relay. Aerial. Remote control receiver for auxiliary coolant heater. Circulation	148

pump	
013 - Seat adjustment without memory, driver and front passenger side	149-155
1. Seat adjustment without memory, driver and front passenger side	149-151
2. Driver seat backrest adjustment switch, driver seat rake adjustment switch, driver side height adjustment switch, driver seat longitudinal adjustment switch	152
3. Front passenger side height adjustment switch, lumbar support height adjustment button, lumbar support longitudinal adjustment button	153
4. Front passenger seat longitudinal adjustment switch, backrest adjustment switch, rake adjustment button, lumbar support longitudinal adjustment button	154
5. Lumbar support height adjustment button, front passenger seat lumbar support height adjustment motor	155
014 - Seat adjustment with memory function, driver's and front passenger's side Steering column adjustment via memory function	156-168
1. Seat adjustment with memory function, driver's and front passenger's side Steering column adjustment via memory function	156-158
2. Seat/steering column adjustment control unit with memory, seat adjustment buttons	159
3. Seat adjustment and steering column adjustment control unit with memory, operating unit for memory, seat adjustment switch	160
4. Seat front height adjustment sender, seat longitudinal adjustment sender, seat height adjustment motor, seat longitudinal adjustment motor	161
5. Seat adjustment and steering column adjustment control unit with memory, lumbar support longitudinal adjustment, backrest adjustment and lumbar support height adjustment	162
6. Driver seat adjustment and steering column adjustment control unit with memory, seat belt height adjustment, steering column adjustment	163
7. Onboard supply control unit, front passenger seat memory operating unit, front passenger seat adjustment control unit with memory, seat adjustment buttons	164
8. Front passenger seat adjustment control unit with memory, front passenger seat memory operating unit, seat adjustment buttons, memory button	165
9. Front passenger seat adjustment control unit with memory, seat longitudinal adjustment sender, seat rear height adjustment sender, seat height adjustment motor	166
10. Front passenger seat adjustment control unit with memory, lumbar support adjustment, seat front height adjustment	167
11. Front passenger seat adjustment control unit with memory, seat belt height adjustment, backrest adjustment, lumbar support adjustment	168
015 - Fuse concept,1 battery	169-182
1. Fuse concept,1 battery	169-171
2. Fuses	172
3. Fuses	173
4. Fuses	174
5. Battery, starter, alternator, terminal 30 wiring junction, battery master/isolator switch	175
6. Fuses, self-diagnosis connection	176
7. Fuses	177
8. Fuses	178
9. Fuses	179
10. Fuses, terminal 15 voltage supply relay, self-diagnosis connection	180
11. Fuses	181
12. Fuses	182
016 - Climatronic 2-C	183-194
1. Climatronic 2-C	183-185
2. Climatronic control unit, high pressure sender, air conditioning system compressor regulating valve	186
3. Climatronic control unit, temperature and defroster flap potentiometer and control motor	187
4. Climatronic control unit, potentiometer and control motor for left temperature flap and design trim	188
5. Climatronic control unit, recirculated air flap and centre vent control motor potentiometer	189
6. Sunlight penetration photosensor 2, refrigerant temperature sender, footwell flap control motor potentiometer, Climatronic control unit	190
7. Climatronic control unit, temperature sensor, front blower regulation (Bitron) sender, front blower regulation (Bitron) motor	191
8. Climatronic control unit, footwell vent temperature sender, blower regulation	192
9. Circulation pump relay, Climatronic control unit, circulation pump	193
10. Residual heat relay, coolant pump	194
017 - Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) and brake wear indicator	195-202
1. Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) and brake wear indicator	195-197

2. ABS/ABS control unit with EDL, TCS and ESP button, brake light suppression relay	198
3. ABS control unit with EDL, speed sensor	199
4. ABS control unit with EDL, potentiometer for diaphragm movement, brake pressure solenoid trip switch, servotronic control unit, diagnosis connection	200
5. Brake pressure sender 1, ESP sensor unit, yaw rate sender and longitudinal acceleration sender, steering angle sender, parking brake contact switch	201
6. Control unit in dash panel insert, brake wear indicator, warning lamps	202
018 - Airbag systems	203-212
1. Airbag systems	203-205
2. Airbag control unit, crash sensor for side airbag and front airbag	206
3. Airbag control unit, key operated switch to deactivate front passenger side airbag, driver side airbag deactivated warning lamp, seat occupied sensor	207
4. Airbag control unit, driver side belt switch, driver seat belt inertia reel magnet, battery cut-off relay, battery master/isolator switch	208
5. Airbag control unit, driver seat belt tensioner igniter 2, front passenger side seat belt tensioner igniter 2, front passenger side belt switch, front passenger side seat inertia reel magnet	209
6. Airbag control unit, airbag igniter 1, rear belt tensioner and curtain airbag	210
7. Airbag control unit, airbag and side airbag igniter 2	211
8. Airbag control unit, control unit in dash panel insert, data bus diagnostic interface, driver side airbag igniter, airbag coil connector and return spring with slip ring	212
019 - Central locking, electric windows, anti-theft alarm system with interior monitoring, electric exterior mirrors with fold function and automatic anti-dazzle, automatic anti-dazzle interior mirror	213-238
1. Central locking, electric windows, anti-theft alarm system with interior monitoring, electric exterior mirrors with fold function and automatic anti-dazzle, automatic anti-dazzle interior mirror	213-215
2. Driver door control unit, electric window switch, driver door electric window motor	216
3. Driver door control unit, interior central locking button, rear lid and fuel tank flap remote release button, central locking warning lamp -SAFE-	217
4. Driver door control unit, door inner handle illumination, door warning lamp, entry light, central locking button, door exterior handle	218
5. Driver door control unit, mirror adjustment motors, heated exterior mirror, driver door automatic anti-dazzle exterior mirror	219
6. Driver door control unit, driver door contact switch, central locking motor, entry light in exterior mirror, central locking lock unit	220
7. Driver door control unit, driver side central locking switch	221
8. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, exterior mirror heating button, mirror fold system switch	222
9. Data bus diagnostic interface, diagnostic socket, onboard supply control unit, control unit with display in dash panel insert	223
10. Front passenger door control unit, front passenger electric window switch, front passenger electric window motor	224
11. Front passenger door control unit, front passenger door inner handle illumination, door warning lamp, entry light, central locking button, door exterior handle	225
12. Front passenger door control unit, interior mirror potentiometer, exterior mirror turn signal bulb, mirror adjustment motors, folding mirror motor, heated exterior mirror	226
13. Front passenger door control unit, central locking motor (Safe), central locking lock unit, central locking motor, entry light in exterior mirror, automatic anti-dazzle exterior mirror	227
14. Front passenger door control unit, automatic anti-dazzle interior mirror	228
15. Rear left door control unit, rear left electric window motor, rear left electric window switch, rear left interior button for central locking	229
16. Rear left door control unit, rear left central locking lock unit, interior door handle illumination, central locking motor (Safe), door warning lamp, entry light	230
17. Rear left door control unit, door contact switch, door exterior handle touch sensor, driver side aerial for entry and start authorisation	231
18. Rear right door control unit, rear right electric window motor, electric window switch, interior button for central locking	232
19. Rear right door control unit, rear right central locking lock unit, door interior handle illumination, central locking motor, entry light, door warning lamp	233
20. Rear right door control unit, door exterior handle touch sensor, door exterior handle central locking button, front passenger side aerial for entry and start authorisation	234
21. Convenience system central control unit, rear lid handle release button, rear lid lock unit, rear lid release motor, tank filler flap locking motor	235
22. Convenience system central control unit, anti-theft alarm system horn, rear window opening button, rear lid remote release blocking key switch, rear window release unit	236
23. Convenience system central control unit, vehicle inclination sender, interior monitoring sensor, onboard supply control unit	237
24. Bonnet contact switch. deactivation button for vehicle inclination sender	238

020 - 6-speed automatic gearbox 09D	239-246
1. 6-speed automatic gearbox 09D	239-241
2. Automatic gearbox control unit, multifunction switch	242
3. Automatic gearbox control unit, gearbox oil temperature sender and gearbox input speed sender, hydraulic pressure sender 1 and 2	243
4. Automatic gearbox control unit, Tiptronic switch, selector lever locked in position P switch, selector lever lock solenoid and selector lever position P	244
5. Automatic gearbox control unit, solenoid valve 1 - 6 and 9 - 10	245
6. Automatic gearbox control unit, control unit in dash panel insert, data bus diagnostic interface, Tiptronic switch in steering wheel, steering column electronics control unit, self-diagnosis connection	246
021 - Self-levelling suspension	247-255
1. Self-levelling suspension	247-249
2. Self-levelling suspension control unit, operating unit to control suspension height, damper adjustment and suspension levelling system buttons, self-levelling suspension compressor relay	250
3. Self-levelling suspension control unit, compressor temperature sender, self-levelling suspension system pressure sender, suspension strut valves	251
4. Self-levelling suspension control unit, vehicle level senders	252
5. Self-levelling suspension control unit, wheel acceleration sender, damper adjustment valves	253
6. Self-levelling suspension control unit, body acceleration sender, damper adjustment valve	254
7. Self-levelling suspension control unit, tyre inflation connection operating unit, control unit with display, data bus diagnostic interface	255
022 - Tyre pressure monitor system	256-260
1. Tyre pressure monitor system	256-258
2. Tyre pressure monitor control unit, tyre pressure sensors, tyre pressure monitor aerials	259
3. Data bus diagnostic interface, self-diagnosis connection, onboard power supply control unit, control unit with display in dash panel insert	260
023 - TV tuner	261-265
1. TV tuner	261
2. TV tuner, Diagnostic connection	262
3. Control unit with display for radio and navigation, TV tuner	263
4. Aerial selection control unit, TV tuner	264
5. Aerial selection control unit	265
024 - Parking aid (PDC)	266-275
1. Parking aid (PDC)	266-268
2. Front centre left parking aid sender, front left parking aid sender, front left inner parking aid sensor, parking aid control unit, onboard supply control unit	269
3. Front right parking aid sender, front centre right parking aid sender, front right inner parking aid sensor, parking aid control unit, onboard supply control unit	270
4. Rear centre right parking aid sender, rear right parking aid sender, rear right inner parking aid sensor, parking aid control unit, onboard supply control unit	271
5. Rear left parking aid sender, rear centre left parking aid sender, rear left inner parking aid sensor, rear left inner parking aid sender, parking aid control unit, onboard supply control unit	272
6. Parking aid control unit, onboard supply control unit, front left and right parking aid display, rear parking aid display	273
7. Parking aid button, parking aid control unit, onboard supply control unit, parking aid loudspeaker	274
8. Control unit with display in dash panel insert, parking aid control unit, onboard supply control unit, data bus diagnostic interface	275
025 - Trailer towing attachment 'Hella'	276-281
1. Trailer towing attachment 'Hella'	276-278
2. Trailer detector control unit, convenience system central control unit, onboard supply control unit, trailer socket	279
3. Data bus diagnostic interface, self-diagnosis connection, onboard supply control unit, control unit in dash panel insert	280
4. Brake light switch, ABS control unit, brake light additional relay	281
026 - Steering column adjustment	282-286
1. Steering column adjustment	282-284
2. Steering column adjustment switch, steering column/belt height adjustment control unit, onboard supply control unit, steering column electronics control unit	285
3. Steering column/belt height adjustment control unit, onboard supply control unit, steering column vertical adjustment motor, steering column axial adjustment motor	286
027 - Seat heating, driver and front passenger side seat heating	287-298
1. Seat heating, driver and front passenger side seat heating	287-289
2. driver seat temperature sensor, heated driver seat control unit, heated driver seat, driver seat cushion lateral support heater. heated driver seat backrest	290

3. Heated driver seat regulator, heated driver seat control unit, onboard supply control unit	291
4. Heated front passenger seat regulator, heated front passenger seat control unit, onboard supply control unit	292
5. Front passenger seat temperature sensor, heated front passenger seat control unit, onboard supply control unit, heated front passenger seat cushion	293
6. Rear left seat temperature sensor, heated rear left seat control unit, heated rear left seat	294
7. Heated rear left seat switch with regulator, heated rear left seat control unit, onboard supply control unit	295
8. Rear right seat temperature sensor, heated rear right seat control unit, heated rear right seat	296
9. Heated rear right seat switch with regulator, heated rear right seat control unit	297
10. Seat heater relay, entry and start authorisation control unit, fuses	298
028 - Garage door opener	299-302
1. Garage door opener	299-301
2. Garage door opener button 1, garage door opener button 2, garage door opener button 3, onboard supply control unit, garage door opener control unit	302
029 - Windscreen heater	303-306
1. Windscreen heater	303-305
2. Heated windscreen control unit, battery, heated windscreen	306
030 - Entry and start authorisation (Kessy)	307-316
1. Entry and start authorisation (Kessy)	307-309
2. Entry and start authorisation control unit, terminal 15 voltage supply relay	310
3. Entry and start authorisation control unit, immobilizer reading unit, entry and start authorisation switch, ignition key withdrawal lock solenoid	311
4. Entry and start authorisation control unit, entry and start authorisation button, steering column lock control element, clutch pedal switch for engine start	312
5. Entry and start authorisation control unit, driver door exterior handle touch sensor, driver side aerial	313
6. Entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial	314
7. Entry and start authorisation control unit, remote control aerial, aerials	315
8. Entry and start authorisation control unit, control unit with display, data bus diagnostic interface	316
031 - Fuse concept, 2 battery	317-331
1. Fuse concept, 2 battery	317-319
2. Fuses	320
3. Fuses	321
4. Fuses	322
5. Onboard supply control unit, battery, terminal 30 and 30a wiring junction, battery master/isolator switch	323
6. Onboard supply control unit, second battery, terminal 30 wiring junction, charger relay	324
7. Fuses, self-diagnosis connection	325
8. Fuses	326
9. Fuses	327
10. Fuses, terminal 15 voltage supply relay, self-diagnosis connection	328
11. Fuses	329
12. Fuses	330
13. Onboard supply control unit, voltage supply relay, battery parallel circuit relay, battery, wiring connectors	331
032 - Manually operated air conditioning system	332-340
1. Manually operated air conditioning system	332-334
2. Climatronic control unit, high pressure sender, air conditioning system compressor regulating valve	335
3. Air conditioning system control unit, temperature flap and defroster flap control motor potentiometer	336
4. Air conditioning system control unit, evaporator outflow temperature sender, refrigerant temperature sender, control motor potentiometer for front air distribution and fresh air/air recirculation flap	337
5. Air conditioning system control unit, footwell flap control motor potentiometer, blower regulation motor, fresh air blower series resistor	338
6. Circulation pump relay, air conditioning system control unit, circulation pump	339
7. Residual heat relay, coolant pump	340
033 - Transfer box (four-wheel drive centre differential), differential lock (rear axle transverse lock-up)	341-348
1. Transfer box (four-wheel drive centre differential), differential lock (rear axle transverse lock-up)	341-343
2. Transfer box control unit four-wheel. four-wheel warning lamps	344

3. Transfer box control unit, four-wheel, oil temperature sender, engine temperature sender, transfer box motor, four-wheel	345
4. Transfer box control unit, four-wheel, idling speed switch	346
5. axle differential lock control unit, differential lock, control unit in dash panel insert, data bus diagnostic interface, self-diagnosis connection	347
6. Axle differential lock control unit, differential lock, engine temperature sender, axle differential lock Hall senders, axle differential lock motor, differential lock	348
034 - Sliding/tilting sunroof	349-352
1. Sliding/tilting sunroof	349-351
2. Sliding sunroof switch, sliding sunroof adjustment regulator, sliding sunroof adjustment control unit, onboard supply control unit, sliding sunroof motor	352
035 - Multifunction steering wheel	353-361
1. Multifunction steering wheel	353-355
2. Control unit in dash panel insert, steering column electronics control unit, data bus diagnostic interface	356
3. Steering column adjustment switch, Tiptronic switches in steering wheel, automatic gearbox control unit, steering column electronics control unit	357
4. Multi-function buttons on left of steering wheel, multi-function steering wheel control unit, steering column electronics control unit	358
5. Multifunction buttons on left and right in steering wheel, airbag coil connector and return spring with slip ring multifunction steering wheel control unit, steering column electronics control unit	359
6. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	360
7. Airbag coil connector and return spring with slip ring, multifunction steering wheel control unit, steering column electronics control unit, heated steering wheel	361
036 - Gas discharge headlights with automatic headlight range control	362-367
1. Gas discharge headlights with automatic headlight range control	362
2. Onboard supply control unit, Left headlight range control unit, Front left headlight	363
3. Onboard supply control unit, Left headlight range control unit, Front left headlight, Left headlight range control motor	364
4. Headlight range control sender 1, Headlight range control sender 2, Onboard supply control unit	365
5. Onboard supply control unit, Right headlight range control unit, Front right headlight, Diagnostic connection	366
6. Right gas discharge bulb control unit, Onboard supply control unit, Right headlight range control unit, Front right headlight	367
037 - Boot lid power latching system	368-372
1. Boot lid power latching system	368-370
2. Convenience system central control unit, rear lid handle release button, rear lid lock unit, rear lid release motor	371
3. Convenience system central control unit, rear lid power latching relay, rear lid close button (in luggage compartment), rear right power latching motor	372
038 - Trailer towing attachment (WESTFALIA) electrically foldable ball trailer coupling (WESTFALIA)	373-379
1. Trailer towing attachment (WESTFALIA) electrically foldable ball trailer coupling (WESTFALIA)	373-375
2. Trailer coupling motor Hall sender, trailer detector control unit, trailer socket, hinged tow attachment ball head motor	376
3. Electric hinged tow coupling attachment button, trailer detector control unit, tow ball coupling warning lamp	377
4. Data bus diagnostic interface, self-diagnosis connection, onboard supply control unit, control unit in dash panel insert	378
5. Brake light switch, ABS control unit, brake light additional relay	379
039 - 2.5 l /128 kW TDI engine, engine code BAC	380-389
1. 2.5 l /128 kW TDI engine, engine code BAC	380
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, wiring junction	381
3. Engine control unit, terminal 30 voltage supply relay, glow plug relay, glow plugs	382
4. Engine control unit, unit injector valves for cylinders 1 - 5, additional coolant pump relay	383
5. Engine control unit, engine speed sender, Hall sender, coolant temperature sender, fuel temperature sender, radiator outlet coolant temperature sender	384
6. Engine control unit, charge air pressure sender, intake air temperature sender, kickdown switch, idling speed switch	385
7. Engine control unit, brake light switch, cruise control system (CCS) brake pedal switch, air mass meter, clutch pedal switch	386
8. Engine control unit, radiator fan control unit, fuel pump relay	387
9. Engine control unit, coolant continued circulation and fuel cooling pumps and relays, oil level/oil temperature sender, radiator fan	388
10. Control unit with displav. data bus diaanostic interface. fuel pump unit. fuel aauce sender 3.	389

oil pressure switch, self-diagnosis connection	
040 - 4.2l/228 kW, engine code AXQ, BHX	390-408
1. 4.2l/228 kW, engine code AXQ, BHX	390
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	391
3. Fuses	392
4. Motronic control unit, Motronic current supply relay, spark plug connector, spark plugs, ignition transformer	393
5. Fuel pump relay, electric fuel pump 2 relay, Motronic control unit, ignition system and spark plugs	394
6. Motronic control unit, ignition system and spark plugs	395
7. Motronic control unit, ignition system and spark plugs	396
8. Motronic control unit, injectors 1-8	397
9. Motronic control unit, engine speed sender, knock sensors	398
10. Motronic control unit, Hall sender, coolant temperature display sender, Hall sender 2, brake servo pressure sensor	399
11. Motronic control unit, secondary air inlet valve, inlet camshaft control valve, variable intake manifold change-over valve	400
12. Motronic control unit, lambda probe, lambda probe 2	401
13. Motronic control unit, lambda probe after catalytic converter	402
14. Motronic control unit, brake light switch, cruise control system brake pedal switch, intake air temperature sender, air mass meter	403
15. Motronic control unit, accelerator position and for coolant temperature sender, continued coolant circulation relay, secondary air pump motor and relay	404
16. Motronic control unit, brake servo relay, throttle valve module	405
17. Motronic control unit, high pressure sender, radiator fan control unit -2-	406
18. Motronic control unit, control unit in dash panel insert, data bus diagnostic interface, oil level and oil temperature sender	407
19. Control unit with display, oil pressure switch, fuel gauge sender, fuel pump, coolant shortage indicator sender	408
041 - Compass module with auxiliary coolant heater Thermo Top Z/C-D, for engines	409-413
1. Compass module with auxiliary coolant heater Thermo Top Z/C-D, for engines	409-411
2. Data bus diagnostic interface, diagnostic socket, onboard supply control unit, control unit in dash panel insert	412
3. Onboard supply control unit, vehicle position recognition control unit, roof display unit	413
042 - Compass module with auxiliary coolant heater Thermo Top Z/C-B and pre-selector clock, for petrol engines	414-418
1. Compass module with auxiliary coolant heater Thermo Top Z/C-B and pre-selector clock, for petrol engines	414-416
2. Data bus diagnostic interface, diagnostic socket, control unit in dash panel insert	417
3. Onboard supply control unit, vehicle position recognition control unit, roof display unit	418
043 - Basic equipment	419-439
1. Basic equipment	419
2. Onboard supply control unit	420
3. Onboard supply control unit, fog light bulbs, side light and turn signal bulbs, left headlight dipped beam and main beam bulb	421
4. Onboard supply control unit, switch and instrument illumination regulator, side light and turn signal bulbs, right headlight dipped beam and main beam bulb	422
5. Onboard supply control unit, light switch, fog light button, rear fog light button	423
6. Onboard supply control unit, mirror adjustment switch, exterior mirror heater button, mirror adjustment switch illumination bulb	424
7. Onboard supply control unit, front interior light button, buttons for driver and front passenger side reading lights, front interior light, driver and front passenger side reading lights	425
8. Onboard supply control unit, glove compartment light, engine compartment light, stowage compartment light, button for glove compartment light, switch for glove compartment light	426
9. Onboard supply control unit, lighting for dash panel vents and passenger compartment vents	427
10. Onboard supply control unit, cigarette lighter, rear cigarette lighter, cigarette lighter illumination bulb	428
11. Onboard supply control unit, cigarette lighter, rear cigarette lighter, cigarette lighter illumination bulb	429
12. Onboard supply control unit, hazard warning light switch, reversing light switch, indicator lamp for hazard warning light	430
13. Onboard supply control unit, treble horn, bass horn, footwell light	431
14. Rain and light detector sensor, onboard supply control unit, windscreen wiper motor	432
15. Onboard supply control unit, brake fluid level warning contact, coolant shortage indicator sender. dash panel insert. ambient temperature sensor	433

16. Onboard supply control unit, dash panel insert, data bus diagnostic interface, self-diagnosis connection	434
17. Steering column electronics control unit, airbag coil spring, turn signal switch, horn plate	435
18. Convenience system central control unit	436
19. Convenience system central control unit, bulbs for rear fog light, turn signal, brake lights, tail lights, reversing lights and number plate light	437
20. Convenience system central control unit, turn signal, reversing lights, brake and tail lights	438
21. Convenience system central control unit, suppression filter, heated rear window relay, luggage compartment light, high-level brake light bulb, heated rear window	439
044 - Anti-roll bar (can be uncoupled)	440-443
1. Anti-roll bar (can be uncoupled)	440
2. Anti-roll bar uncoupling control unit, self-diagnosis connection, control unit in dash panel	441
3. Front axle anti-roll bar uncoupling sensor, anti-roll bar uncoupling hydraulic unit pressure sensor, anti-roll bar uncoupling control unit	442
4. Anti-roll bar uncoupling button, rear axle anti-roll bar uncoupling sensor, anti-roll bar uncoupling control unit	443
045 - Climatronic 4-C	444-460
1. Climatronic 4-C	444
2. Climatronic control unit, high pressure sender, air conditioner compressor regulating valve	445
3. Climatronic control unit, footwell and defroster flap control motor and potentiometer	446
4. Climatronic control unit, temperature flap and central vents control motor and potentiometer	447
5. Climatronic control unit, potentiometer and control motor for footwell vent and defrost shut-off flap and chest vent	448
6. Climatronic control unit, potentiometer and control motor for temperature flap and defrost shut-off flap and left chest vent	449
7. Climatronic control unit, air recirculation flap control motor potentiometer, front left chest vent potentiometer	450
8. Climatronic control unit, sunlight penetration photosensor, temperature sensor, refrigerant temperature sender	451
9. Climatronic control unit, footwell vent temperature sender, blower regulation	452
10. Circulation pump relay, circulation pump	453
11. Operating and display unit for rear Climatronic, control unit with display in dash panel insert	454
12. Rear Climatronic operating and display unit, temperature flap potentiometer, temperature flap control motor	455
13. Rear Climatronic operating and display unit, air quantity flap potentiometer and control motor	456
14. Rear Climatronic operating and display unit, potentiometer for rear chest vent control motor	457
15. Operating and display unit for rear Climatronic, potentiometer for B-pillar and footwell shut-off flap control motor	458
16. Rear Climatronic operating and display unit, rear vent temperature sender, rear blower regulation sender and motor	459
17. Residual heat relay, water pump	460
046 - Climatronic 2-C	461-470
1. Climatronic 2-C	461
2. Climatronic control unit, high pressure sender, air conditioner compressor regulating valve	462
3. Climatronic control unit, potentiometer for defroster flap control motor, potentiometer for right temperature flap control motor	463
4. Climatronic control unit, potentiometer for left temperature flap control motor, side vent control motor potentiometer	464
5. Climatronic control unit, air recirculation flap control motor potentiometer, centre vent control motor potentiometer	465
6. Sunlight penetration photosensor 2, refrigerant temperature sender, footwell vent control motor potentiometer, Climatronic control unit	466
7. Climatronic control unit, temperature sensor, front blower Bitron regulation sender, front blower Bitron regulation motor	467
8. Climatronic control unit, footwell vent temperature sender, blower regulation	468
9. Residual heat relay, water pump	469
10. Circulation pump relay, circulation pump	470
047 - Air conditioning system manual	471-477
1. Air conditioning system manual	471
2. Climatronic control unit, high pressure sender, air conditioner compressor regulating valve	472
3. Air conditioning system control unit, temperature flap control motor potentiometer, defroster flap control motor potentiometer	473
4. Air conditioning system control unit, evaporator output temperature sender, refrigerant temperature sender, potentiometer for front air distribution control motor, fresh air/recirculated air flap control motor	474
5. Air conditioning system control unit, footwell vent control motor potentiometer, blower	475

regulation motor, fresh air blower series resistor	
6. Air conditioning system control unit, residual heat relay, water pump	476
7. Circulation pump relay, circulation pump	477
048 - 3.2 l/162 kW, engine code BAA, with fuel system diagnostic pump	478-495
1. 3.2 l/162 kW, engine code BAA, with fuel system diagnostic pump	478
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	479
3. Fuses	480
4. Motronic control unit, spark plug connector, spark plugs, ignition coil 1 - 3	481
5. Fuel pump relay, electric fuel pump 2 relay, Motronic control unit, injector, cylinder 1 - 6	482
6. Motronic control unit, ignition system and spark plugs cylinder 4-6	483
7. Motronic control unit, knock sensors 1 and 2, engine speed sender	484
8. Motronic control unit, coolant temperature display sender, Hall sender, Hall sender 2, brake servo pressure sensor	485
9. Motronic control unit, variable intake manifold change-over valve, inlet camshaft control valve 1, secondary air inlet valve, heater element	486
10. Motronic control unit, lambda probe, lambda probe 2,	487
11. Motronic control unit, lambda probe after catalytic converter	488
12. Motronic control unit, air mass meter, intake air temperature sender, brake light switch, clutch pedal switch, cruise control system brake pedal switch	489
13. Motronic control unit, radiator fan control unit -2-, fuel system diagnostic pump	490
14. Motronic control unit, brake servo relay, radiator fan control unit, active charcoal filter system solenoid valve	491
15. Motronic control unit, secondary air pump motor and relay, accelerator position sender, continued coolant circulation relay	492
16. Motronic control unit, throttle valve module, throttle valve drives angle sender 1 and 2	493
17. Control unit in dash panel insert, data bus diagnostic interface, fuel pump relay, fuel gauge sender 3, self-diagnosis connection	494
18. Control unit in dash panel insert, oil level and oil temperature sender, oil pressure switch	495
049 - 4.2l/228 kW, engine code AXQ, BHX	496-516
1. 4.2l/228 kW, engine code AXQ, BHX	496
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction, terminal 30 wiring junction 2	497
3. Fuses	498
4. Motronic control unit, Motronic current supply relay, spark plug connector, spark plugs, ignition coils 1 and 2 with output stage	499
5. Fuel pump relay, electric fuel pump 2 relay, Motronic control unit, ignition system and spark plugs	500
6. Motronic control unit, ignition system and spark plugs	501
7. Motronic control unit, ignition system and spark plugs	502
8. Motronic control unit, injectors 1-8	503
9. Motronic control unit, engine speed sender, knock sensors	504
10. Motronic control unit, Hall sender, coolant temperature display sender, Hall sender 2, brake servo pressure sensor	505
11. Motronic control unit, secondary air inlet valve, inlet camshaft control valve, variable intake manifold change-over valve	506
12. Motronic control unit, lambda probe, lambda probe 2	507
13. Motronic control unit, lambda probe after catalytic converter, lambda probe 2 upstream of catalytic converter	508
14. Motronic control unit, brake light switch, brake pedal switch, intake air temperature sender, air mass meter, air mass meter 2	509
15. Motronic control unit, accelerator position sender, accelerator position sender 2, radiator outlet coolant temperature sender, secondary air pump motor and relay	510
16. Motronic control unit, additional coolant pump relay, circulation pump	511
17. Motronic control unit, throttle valve module, throttle valve drive angle sender 1 for electric throttle, brake servo relay, vacuum pump for brakes	512
18. Motronic control unit, activated charcoal filter system solenoid valve 2, fuel system diagnostic pump, high pressure sender	513
19. Motronic control unit, radiator fan control unit, radiator fan control unit 2, activated charcoal filter system solenoid valve 1, radiator fan, radiator fan 2	514
20. Motronic control unit, data bus diagnostic interface, control unit in dash panel insert, oil level and oil temperature sender, self-diagnosis connection	515
21. Dash panel insert, control unit in dash panel insert, oil pressure switch, fuel gauge sender, fuel system pressurisation pump, coolant shortage indicator sender	516
050 - 2.5l diesel engine , BAC,BLK	517-531
1. 2.5l diesel engine . BAC.BLK	517

2. Starter, Alternator, Terminal 50 voltage supply relay	518
3. Terminal 30 voltage supply relay, Fuse in relay plate fuse holder	519
4. Glow plug relay, Additional coolant pump relay	520
5. Oil level and oil temperature sender, Fuel pump relay, Fuel cooling pump relay, Tank circuit pressurisation relay, Fuel cooling pump	521
6. Engine control unit	522
7. Engine control unit	523
8. Engine speed sender, Hall sender, Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine control unit	524
9. Kickdown switch, Idling speed switch, Intake air temperature sender, Accelerator position sender, Engine control unit	525
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	526
11. Air mass meter, Engine control unit, Radiator fan control unit 2	527
12. Engine control unit, Exhaust gas recirculation valve, Charge pressure control solenoid valve	528
13. Radiator fan control unit, Engine control unit, Diagnostic connection	529
14. Oil pressure switch, Coolant shortage indicator sender, Dash panel insert	530
15. Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert	531
051 - Driver side seat adjustment with memory function	532-538
1. Driver side seat adjustment with memory function	532
2. Seat adjustment and steering column with memory control unit, driver seat operating unit for memory	533
3. Seat adjustment and steering column adjustment control unit with memory, driver seat memory operating unit, seat adjustment button	534
4. Seat front height adjustment sender, seat longitudinal adjustment sender, seat height adjustment motor, seat longitudinal adjustment motor	535
5. Seat adjustment and steering column adjustment control unit with memory, lumbar support longitudinal adjustment, backrest adjustment, lumbar support height adjustment	536
6. Front passenger seat backrest adjustment switch, front passenger seat height adjustment switch, front passenger seat backrest adjustment motor, front passenger seat height adjustment motor	537
7. Front passenger seat longitudinal adjustment switch, rake adjustment button, lumbar support adjustment button	538
052 - Fuse concept, single battery	539-552
1. Fuse concept, single battery	539
2. Fuses	540
3. Fuses	541
4. Fuses	542
5. Fuses	543
6. Onboard supply control unit, battery, terminal 30 wiring junction, battery master/isolator switch	544
7. Fuses	545
8. Fuses, self-diagnosis connection	546
9. Fuses	547
10. Fuses	548
11. Fuses	549
12. Fuses, terminal 15 voltage supply relay, self-diagnosis connection	550
13. Fuses	551
14. Fuses	552
053 - Fuse concept, 2 battery	553-567
1. Fuse concept, 2 battery	553
2. Fuses	554
3. Fuses	555
4. Fuses	556
5. Fuses	557
6. Onboard supply control unit, battery, terminal 30 and 30a wiring junction, battery master/isolator switch	558
7. Onboard supply control unit, second battery, terminal 30 wiring junction, charger relay	559
8. Fuses, self-diagnosis connection	560
9. Fuses	561
10. Fuses	562
11. Fuses	563
12. Fuses, terminal 15 voltage supply relay, self-diagnosis connection	564
13. Fuses	565
14. Fuses	566
15. Onboard supply control unit, voltage supply relay, battery parallel circuit relay, battery, wiring connectors	567
054 - 5.0 l/230 kW TDI, engine code AYH	568-586
1. 5.0 l/230 kW TDI. engine code AYH	568

2. Terminal 30 voltage supply relay, terminal 30 voltage supply relay 2, second battery, battery parallel circuit relay	569
3. Starter, alternator, voltage regulator, terminal 50 voltage supply relay	570
4. Automatic glow period control unit	571
5. Automatic glow period control unit, engine control unit, glow plug 1-5	572
6. Engine control unit, unit injector valves for cylinders 1-5	573
7. Engine control unit, fuel temperature sender, oil level and oil temperature sender, intake manifold flap motor	574
8. Engine control unit, engine speed sender, Hall sender, coolant temperature, fuel composition sender	575
9. Engine control unit, senders for charge pressure, intake air temperature and coolant temperature at radiator outlet, Lambda probe	576
10. Engine control unit, brake light switch, brake pedal switch, air mass meter	577
11. Engine control unit, radiator fan control unit, fuel pump relay, exhaust gas recirculation valve, radiator fan	578
12. Engine control unit, kick-down switch, idling speed switch, accelerator position sender, pumps for continued coolant circulation and fuel cooling, turbocharger 1 control unit	579
13. Engine control unit, engine control unit 2	580
14. Engine control unit 2, air conditioning system compressor regulating valve, intake manifold 2 flap motor, turbocharger 2 control motor, turbocharger 2 control unit	581
15. Engine control unit 2, fuel temperature sender 2, unit injector valves for cylinders 6-10	582
16. Engine control unit 2, Lambda probe 2, air mass meter 2, charge air pressure sender 2, intake air temperature sender 2	583
17. Engine control unit 2, automatic glow period relay, glow plugs for cylinders 6-10, exhaust gas recirculation valve 2	584
18. Control unit in dash panel insert, data bus diagnostic interface, fuel pump unit, fuel gauge sender 3, self-diagnosis connection	585
19. Control unit in dash panel insert, oil pressure switch	586
055 - Adaptive suspension	587-593
1. Adaptive suspension	587
2. Adaptive suspension control unit, operating unit to regulate suspension height, shock absorber damping adjustment and adaptive suspension button, adaptive suspension compressor relay	588
3. Adaptive suspension control unit, compressor temperature sender, adaptive suspension pressure sender, suspension strut valve	589
4. Adaptive suspension control unit, vehicle inclination sender	590
5. Adaptive suspension control unit, shock absorber damper adjustment valves	591
6. Adaptive suspension control unit, body acceleration sender, tyre pressure operating unit	592
7. Adaptive suspension control unit, control unit in dash panel insert, data bus diagnostic interface	593
056 - Servotronic	594-595
1. Servotronic	594
2. Servotronic control unit, ABS and ESP control unit	595
057 - Fuse concept (1 battery)	596-608
1. Fuse concept (1 battery)	596
2. Fuses	597
3. Fuses	598
4. Fuses	599
5. Fuses	600
6. Onboard supply control unit, battery, terminal 30 wiring junction, battery master/isolator switch	601
7. Fuses	602
8. Fuses, self-diagnosis connection	603
9. Fuses	604
10. Fuses	605
11. Fuses	606
12. Fuses, terminal 15 voltage supply relay, self-diagnosis connection	607
13. Fuses	608
058 - Fuse concept (2 batteries)	609-625
1. Fuse concept (2 batteries)	609
2. Fuse holder C	610
3. Fuse holder C	611
4. Fuse holder C	612
5. Fuse holder C	613
6. Battery, Onboard supply control unit, Battery cut-off relay, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Terminal 30 wiring junction 3	614
7. Second battery, Onboard supply control unit, Second battery charging circuit relay, Fuse holder B, Terminal 30a wiring junction. Terminal 30 wiring junction 3. Terminal 30 wiring junction 4	615

8. Fuse holder B	616
9. Fuse holder B	617
10. Fuse holder B	618
11. Fuse holder B	619
12. Fuse holder B	620
13. Fuse holder B	621
14. Fuse holder C	622
15. Fuse holder C	623
16. Fuse holder C	624
17. Onboard supply control unit, Battery parallel circuit relay, Voltage supply relay 1, Voltage supply relay 2	625
059 - Auxiliary coolant heater	626-629
1. Auxiliary coolant heater	626
2. Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	627
3. Coolant temperature sender for heater, Heater control unit, Glow plug with flame monitor, Combustion air blower, Metering pump	628
4. Circulation pump relay, Circulation pump	629
060 - Convenience system	630-654
1. Convenience system	630
2. Driver door control unit, window regulator switch, driver side window regulator motor	631
3. Driver door control unit, interior locking button, remote release button for fuel filler flap and rear lid, central locking deadlock function warning lamp	632
4. Driver door control unit, inner handle illumination, door warning lamp, entry light, door exterior handle central locking button	633
5. Driver door control unit, driver side mirror adjustment motors, heated exterior mirror, driver side automatic anti-dazzle exterior mirror	634
6. Driver door control unit, driver door contact switch, central locking motor, entry light in exterior mirror, central locking lock unit	635
7. Driver door control unit, driver side central locking switch	636
8. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, exterior mirror heater button, mirror fold-in feature system switch	637
9. Data bus diagnostic interface, self-diagnosis connection, onboard supply control unit, control unit with display in dash panel insert	638
10. Front passenger door control unit, window regulator switch (front passenger side), front passenger side window regulator motor	639
11. Front passenger door control unit, inner handle illumination, door warning lamp, entry light, door exterior handle central locking button	640
12. Front passenger door control unit, front passenger side exterior mirror turn signal bulb, mirror adjustment motors, front passenger side heated exterior mirror	641
13. Front passenger door control unit, central deadlock function locking motor, central locking lock unit, central locking motor, entry light in exterior mirror, automatic anti-dazzle exterior mirror	642
14. Front passenger door control unit, automatic anti-dazzle interior mirror	643
15. Rear left door control unit, rear left window regulator motor, rear left window regulator switch, rear left interior locking button	644
16. Rear left door control unit, rear left central locking lock unit, door inner handle illumination, central locking deadlock function motor, door warning lamp, entry light	645
17. Rear left door control unit, door contact switch, exterior handle touch sensor, driver side aerial for entry and start authorisation	646
18. Rear right door control unit, rear right window regulator motor, window regulator switch, interior locking button	647
19. Rear right door control unit, rear right central locking lock unit, door inner handle illumination, central locking motor, entry light, door warning lamp	648
20. Rear right door control unit, door exterior handle touch sensor, door exterior handle central locking button, front passenger side aerial for entry and start authorisation	649
21. Convenience system central control unit, rear lid handle release button, rear lid release motor, tank filler flap locking motor, rear lid light	650
22. Button to open rear lid window, alarm horn, convenience system central control unit, rear lid window release unit, button to open rear lid window	651
23. Convenience system central control unit, vehicle inclination sender, interior monitoring sensor, onboard power supply control unit	652
24. Interior monitoring deactivation switch, deactivation button for vehicle inclination sender, bonnet contact switch	653
25. Central locking and anti-theft alarm system aerial, remote control aerial in front right wing	654
061 - Power latching system - Rear lid	655-657
1. Power latching system - Rear lid	655

2. Convenience system central control unit, rear lid handle release button, rear lid lock unit, rear lid release motor	656
3. Convenience system central control unit, power latching system relay, button to close rear lid in luggage compartment, rear right power latching motor	657
062 - Entry and start authorisation (Kessy)	658-665
1. Entry and start authorisation (Kessy)	658
2. Entry and start authorisation control unit, terminal 15 voltage supply relay	659
3. Entry and start authorisation control unit, immobilizer reading unit, entry and start authorisation switch, ignition key withdrawal lock solenoid	660
4. Entry and start authorisation control unit, entry and start authorisation button, steering column lock control element, clutch pedal switch for engine start	661
5. Entry and start authorisation control unit, driver door exterior handle touch sensor, driver side aerial	662
6. Entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial	663
7. Entry and start authorisation control unit, remote control aerial, aerials	664
8. Entry and start authorisation control unit, control unit with display, data bus diagnostic interface	665
063 - Climatronic 4-C	666-683
1. Climatronic 4-C	666
2. High pressure sender, air conditioning system compressor regulating valve	667
3. Climatronic control unit, high pressure sender, air conditioner compressor regulating valve	668
4. Climatronic control unit, footwell and defroster flap control motor and potentiometer	669
5. Climatronic control unit, temperature flap and central vents control motor and potentiometer	670
6. Climatronic control unit, potentiometer and control motor for footwell vent and defrost shut-off flap and chest vent	671
7. Climatronic control unit, potentiometer and control motor for temperature flap and defrost shut-off flap and left chest vent	672
8. Climatronic control unit, air recirculation flap control motor potentiometer, front left chest vent potentiometer	673
9. Climatronic control unit, sunlight penetration photosensor, temperature sensor, refrigerant temperature sender	674
10. Climatronic control unit, footwell vent temperature sender, blower regulation	675
11. Air quality sensor, circulation pump relay, circulation pump	676
12. Operating and display unit for rear Climatronic, control unit in dash panel insert	677
13. Rear Climatronic operating and display unit, temperature flap potentiometer, temperature flap control motor	678
14. Rear Climatronic operating and display unit, air quantity flap potentiometer and control motor	679
15. Rear Climatronic operating and display unit, potentiometer for rear chest vent control motor	680
16. Operating and display unit for rear Climatronic, potentiometer for left B-pillar and footwell shut-off flap control motor	681
17. Rear Climatronic operating and display unit, rear vent temperature sender, rear blower regulation sender and motor	682
18. Residual heat relay, water pump	683
064 - Climatronic 2-C	684-694
1. Climatronic 2-C	684
2. High pressure sender, air quality sensor, compressor regulating valve, air conditioner	685
3. Climatronic control unit, high pressure sender, air conditioner compressor regulating valve	686
4. Climatronic control unit, temperature and defroster flap control motor and potentiometer	687
5. Climatronic control unit, temperature and left design trim control motor and potentiometer	688
6. Climatronic control unit, air recirculation flap and central vents control motor and potentiometer	689
7. Sunlight penetration photosensor 2, refrigerant temperature sender, footwell vent control motor potentiometer, Climatronic control unit	690
8. Climatronic control unit, temperature sensor	691
9. Climatronic control unit, blower regulation	692
10. Residual heat relay, water pump	693
11. Circulation pump relay, circulation pump	694
065 - Air conditioning system manual	695-702
1. Air conditioning system manual	695
2. High pressure sender, air conditioning system compressor regulating valve	696
3. Climatronic control unit, high pressure sender, air conditioner compressor regulating valve	697
4. Air conditioning system control unit, temperature flap control motor potentiometer, defroster flap control motor potentiometer	698
5. Air conditioning system control unit, evaporator output temperature sender, refrigerant temperature sender	699

6. Air conditioning system control unit, footwell vent control motor potentiometer, blower regulation motor, fresh air blower series resistor	700
7. Air conditioning system control unit, residual heat relay, water pump	701
8. Circulation pump relay, circulation pump	702
066 - 5.0l diesel engine , BLE,BWF	703-727
1. 5.0l diesel engine , BLE,BWF	703
2. Starter, Alternator, Battery parallel circuit relay, Terminal 30 wiring junction	704
3. Terminal 50 voltage supply relay, Voltage supply relay 1	705
4. Terminal 30 voltage supply relay, Terminal 30 voltage supply relay 2, Fuses in fuse holder	706
5. Automatic glow period control unit, Fuses in fuse holder	707
6. Automatic glow period control unit, Engine/motor control unit	708
7. Fuel temperature sender, Engine/motor control unit	709
8. Map-controlled engine cooling system thermostat, Oil level and oil temperature sender, Engine/motor control unit, Particulate filter additive pump, Intake manifold flap motor	710
9. Engine speed sender, Hall sender, Coolant temperature sender, Engine/motor control unit	711
10. Exhaust gas recirculation potentiometer, Exhaust gas pressure sensor 1, Engine/motor control unit, Exhaust gas recirculation valve	712
11. Intake air temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Engine/motor control unit	713
12. Brake light switch, Brake pedal switch, Lambda probe, Engine/motor control unit	714
13. Kickdown switch, Idling speed switch, Accelerator position sender, Engine/motor control unit	715
14. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	716
15. Fuel pump relay, Additional coolant pump relay, Engine/motor control unit, Tank circuit pressurisation relay, Continued coolant circulation pump	717
16. Fuel cooling pump relay, Engine/motor control unit, Turbocharger 1 control unit, Turbocharger 2 control unit, Fuel cooling pump	718
17. Engine/motor control unit 2, Air conditioner compressor regulating valve, Intake manifold flap 2 motor	719
18. Engine/motor control unit 2	720
19. Lambda probe 2, Air mass meter 2, Charge pressure sender 2, Engine/motor control unit 2	721
20. Exhaust gas temperature sender 1 for bank 2, Exhaust gas recirculation potentiometer 2, Temperature sender 2 before particulate filter, Engine/motor control unit 2	722
21. Exhaust gas pressure sensor 2, Engine/motor control unit 2, Exhaust gas recirculation cooler changeover valve 2	723
22. Engine/motor control unit 2, Unit injector valve, No. 6 cyl., Unit injector valve, No. 7 cyl., Unit injector valve, No. 8 cyl., Unit injector valve, No. 9 cyl., Unit injector valve, No. 10 cyl.	724
23. Engine/motor control unit 2, Glow period control unit 2, Glow plug 6, Glow plug 7, Glow plug 8, Glow plug 9, Glow plug 10	725
24. Oil pressure switch, Control unit in dash panel insert, Data bus diagnostic interface	726
25. Fuel system pressurisation pump, Fuel pump, Coolant shortage indicator sender, Control unit in dash panel insert	727
067 - Electrically lockable spare wheel	728-730
1. Electrically lockable spare wheel	728
2. Spare wheel release button, convenience system central control unit, spare wheel lock motor	729
3. Convenience system central control unit, number plate light	730
068 - Prepared for DVD player	731-732
1. Prepared for DVD player	731
2. Prepared for DVD player, fuses	732
069 - CAN bus network	733-740
1. CAN bus network	733
2. Control unit in dash panel insert, onboard supply control unit, data bus diagnostic interface, diagnosis connection	734
3. Drive train CAN bus	735
4. Drive train CAN bus and convenience	736
5. Convenience CAN bus	737
6. Convenience CAN bus and infotainment	738
7. Infotainment CAN bus	739
8. Diagnosis	740
070 - Solar roof	741-744
1. Solar roof	741
2. Front blower Bitron regulation sender, solar cell isolation relay, fuses	742
3. Solar cells, roof temperature sensor, front blower Bitron regulation motor	743
4. Sunroof switch, sliding sunroof adjustment regulator, sunroof button, sliding sunroof adjustment control unit, sliding sunroof motor	744
071 - Telephone preparation (Bluetooth)	745-749
1. Telephone preparation (Bluetooth)	745

2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	746
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	747
4. Telephone transmitter and receiver unit, telephone microphone, aerial for Bluetooth, coupling point mobile telephone mounting	748
5. Telephone transmitter and receiver unit, telephone aerial, coupling point mobile telephone mounting	749
072 - 3.0 l/165 kW TDI, engine code BKS	750-766
1. 3.0 l/165 kW TDI, engine code BKS	750
2. Starter, alternator, terminal 50 voltage supply relay, terminal 30 wiring junction	751
3. Terminal 30 voltage supply relay, fuses	752
4. Automatic glow period control unit, diesel direct injection system control unit, glow plugs	753
5. Diesel direct injection system control unit, radiator fan control unit, radiator fan control unit 2	754
6. Fuel pump relay, diesel direct injection system control unit, tank circuit pressurisation relay	755
7. Charge air pressure sender, intake air temperature sender, exhaust gas pressure sensor 1, diesel direct injection system control unit	756
8. Hall sender, diesel direct injection system control unit, fuel pressure regulating valve, fuel metering valve, throttle valve module, residual heat relay	757
9. Diesel direct injection system control unit, throttle valve module, turbocharger 1 control unit, exhaust gas recirculation valve	758
10. Engine speed sender, diesel direct injection system control unit, intake manifold flap motor, intake manifold flap 2 motor	759
11. Lambda probe, bank 1 exhaust gas temperature sender 2, diesel direct injection system control unit, exhaust gas temperature sender 1	760
12. Accelerator position sender, accelerator position sender 2, fuel pressure sender, diesel direct injection system control unit, injector, cylinder 1	761
13. Diesel direct injection system control unit, injectors	762
14. Coolant temperature sender, air mass meter, fuel temperature sender, radiator outlet coolant temperature sender, diesel direct injection system control unit	763
15. Brake light switch, clutch pedal switch, brake pedal switch, diesel direct injection system control unit	764
16. Oil pressure switch, diesel direct injection system control unit, control unit in dash panel insert, diagnosis connection	765
17. Fuel system pressurisation pump, fuel pump, coolant shortage indicator sender, fuel gauge sender 3, oil level and oil temperature sender	766
073 - Windscreen heater	767-768
1. Windscreen heater	767
2. Heated windscreen relay for left and right side, heated windscreen	768
074 - 6.0 l/331 kW, engine code BJN	769-793
1. 6.0 l/331 kW, engine code BJN	769
2. Motronic current supply relay	770
3. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	771
4. Engine control unit, ignition system and spark plugs cylinder 1-3, fuel pump relay	772
5. Engine control unit, ignition system and spark plugs cylinder 4-6	773
6. Engine control unit, injectors for cylinders 1-6	774
7. Engine control unit, knock sensors 1 and 2	775
8. Engine control unit, brake light switch, brake pedal switch, map-controlled engine cooling system thermostat, inlet camshaft control valve 1, secondary air inlet valve	776
9. Engine control unit, lambda probe, lambda probe 2, lambda probe heater	777
10. Engine control unit, lambda probes after catalytic converter	778
11. Engine control unit, coolant temperature sender, engine speed sender, Hall sender, Hall sender 3	779
12. Engine control unit, air mass meter, accelerator position sender, intake air temperature sender	780
13. Engine control unit, secondary air pump relay and additional coolant pump, radiator fan, water pump	781
14. Engine control unit, throttle valve module, angle sender, brake servo, vacuum pump for brakes	782
15. Engine control unit, engine control unit 2	783
16. Engine control unit 2, ignition system and spark plugs cylinder 7-9, secondary air pump relay 2	784
17. Engine control unit 2, ignition system and spark plugs cylinder 10+12	785
18. Engine control unit 2, injectors for cylinders 7-12	786
19. Engine control unit 2, knock sensors 3 and 4	787
20. Engine control unit 2, Lambda probe 3, Lambda probe 3 after catalytic converter, Lambda probe heater 3	788
21. Engine control unit 2. Lambda probe 4. Lambda probe 4 after catalytic converter. Lambda probe	789

heater 4	
22. Engine control unit 2, Hall sender 2 and 4, air mass meter 2, intake air temperature sender 2	790
23. Engine control unit 2, fuel system diagnostic pump, throttle valve module 2	791
24. Engine control unit 2, inlet camshaft control valve 2, control unit in dash panel insert, oil level and oil temperature sender	792
25. Control unit in dash panel insert, data bus diagnostic interface, fuel pump relay, fuel gauge sender 3, oil pressure switch, self-diagnosis connection	793
075 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	794-799
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	794
2. Onboard supply control unit, Front left headlight	795
3. Onboard supply control unit, Front right headlight	796
4. Onboard supply control unit, Control unit for cornering light and headlight range control	797
5. Onboard supply control unit, Steering column electronics control unit	798
6. Light switch, Switch and instrument illumination regulator, Onboard supply control unit	799
076 - Seat heating, driver and front passenger side seat heating, (manual seat adjustment)	800-809
1. Seat heating, driver and front passenger side seat heating, (manual seat adjustment)	800
2. Fuses	801
3. Driver seat temperature sensor, heated driver seat control unit, heated driver seat cushion, heated driver seat backrest	802
4. Heated driver seat regulator, heated driver seat control unit, onboard supply control unit	803
5. Heated front passenger seat regulator, heated front passenger seat control unit, onboard supply control unit	804
6. Front passenger seat temperature sensor, heated front passenger seat control unit	805
7. Rear left seat temperature sensor, heated rear left seat control unit, onboard supply control unit, heated rear left seat	806
8. Heated rear left seat switch with regulator, heated rear left seat control unit, onboard supply control unit	807
9. Rear right seat temperature sensor, onboard supply control unit, heated rear right seat	808
10. Heated rear right seat switch with regulator, heated rear right seat control unit	809
077 - Seat heating, driver and front passenger side seat heating, (electrical seat adjustment)	810-819
1. Seat heating, driver and front passenger side seat heating, (electrical seat adjustment)	810
2. Fuses	811
3. Driver seat temperature sensor, heated driver seat control unit, heated driver seat cushion, heated driver seat backrest	812
4. Heated driver seat regulator, heated driver seat control unit, onboard supply control unit	813
5. Heated front passenger seat regulator, heated front passenger seat control unit, onboard supply control unit	814
6. Front passenger seat temperature sensor, heated front passenger seat control unit	815
7. Rear left seat temperature sensor, heated rear left seat control unit, onboard supply control unit, heated rear left seat	816
8. Heated rear left seat switch with regulator, heated rear left seat control unit, onboard supply control unit	817
9. Rear right seat temperature sensor, onboard supply control unit, heated rear right seat	818
10. Heated rear right seat switch with regulator, heated rear right seat control unit	819
078 - Radio and navigation system (models for Japan)	820-827
1. Radio and navigation system (models for Japan)	820
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	821
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	822
4. Control unit with display for radio and navigation system, rear right loudspeaker	823
5. Control unit with display for radio and navigation system, front loudspeaker, rear loudspeaker, navigation system aerial, onboard supply control unit	824
6. Control unit with display for radio and navigation system, front left loudspeaker, CD changer	825
7. Control unit with display for radio and navigation system, aerial selection control unit, CD changer	826
8. Aerial selection control unit, onboard supply control unit, aerials	827
079 - Auxiliary headlights, handling winch	828-830
1. Auxiliary headlights, handling winch	828
2. Headlight main beam relay, left additional main beam bulb, right additional main beam bulb	829
3. Charge relay for optional equipment, control relay for optional equipment, handling winch motor	830
080 - Multimedia system	831-837
1. Multimedia system	831
2. Voltage monitoring relay, fuses	832
3. Roof display unit, voltage monitoring relay, DVD player, digital TV tuner	833

4. TV tuner, digital TV tuner	834
5. TV aerial, TV aerial amplifier, digital TV tuner	835
6. Control unit with display for radio and navigation system, TV tuner	836
7. TV tuner	837
081 - 3.6l petrol engine , BHK	838-859
1. 3.6l petrol engine , BHK	838
2. Starter, Alternator, Main relay, Terminal 50 voltage supply relay, Terminal 30 wiring junction	839
3. Fuses in fuse holder	840
4. Electric fuel pump 2 relay, Motronic power supply relay 2	841
5. Motronic control unit	842
6. Motronic control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs	843
7. Motronic control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plugs	844
8. Motronic control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Heater element for crankcase breather, Circulation pump	845
9. Motronic control unit, Throttle valve module, Injector, cylinder 5, Injector, cylinder 6, Fuel pressure regulating valve	846
10. Motronic control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Intake manifold flap valve, Exhaust camshaft control valve 1, Suction jet pump valve	847
11. Hall sender, Coolant temperature sender, Fuel pressure sender, Hall sender 3, Fuel pressure sender for low pressure, Motronic control unit	848
12. Engine speed sender, Knock sensor 1, Knock sensor 2, Motronic control unit	849
13. Idling speed switch, Radiator outlet coolant temperature sender, Brake servo pressure sensor, Motronic control unit	850
14. Brake light switch, Clutch pedal switch, Brake pedal switch, Air mass meter, Motronic control unit	851
15. Lambda probe, Lambda probe 2, Motronic control unit	852
16. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Motronic control unit	853
17. Motronic control unit, Additional coolant pump relay, Brake servo relay, Vacuum pump for brakes	854
18. Circulation pump relay, Motronic control unit, Residual heat relay	855
19. Motronic control unit, Radiator fan control unit, Radiator fan control unit 2, Activated charcoal filter solenoid valve 2, Fuel system diagnostic pump	856
20. Fuel pump, Coolant shortage indicator sender, Fuel gauge sender 2, Motronic control unit, Fuel pump control unit, Dash panel insert	857
21. Oil pressure switch, Oil level and oil temperature sender, Dash panel insert	858
22. Dash panel insert, Diagnostic connection	859
082 - 4.2 l / 257 kW FSI, engine code BAR	860-882
1. 4.2 l / 257 kW FSI, engine code BAR	860
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction, terminal 30 wiring junction 2	861
3. Fuses	862
4. Engine control unit, Motronic current supply relay, ignition coils 1 to 3 with output stage, spark plug connector, spark plugs	863
5. Engine control unit, engine component current supply relay, ignition coils 4 to 6 with output stage, spark plug connector, spark plugs	864
6. Engine control unit, auxiliary heater control unit, ignition coil 7 with output stage, ignition coil 8 with output stage, spark plug connector, spark plugs	865
7. Engine control unit, map-controlled engine cooling system thermostat, inlet camshaft control valve 1 and 2, exhaust camshaft control valve 1 and 2	866
8. Engine control unit, knock sensor 1, knock sensor 2, intake manifold flap motor, variable intake manifold motor	867
9. Engine control unit, engine speed sender, knock sensors 3, knock sensors 4	868
10. Engine control unit, Hall sender, Hall sender 2, intake manifold flap potentiometer, intake manifold flap 2 potentiometer	869
11. Engine control unit, secondary air pump relay, coolant temperature sender, fuel pressure sender, fuel metering valve, secondary air pump motor	870
12. Engine control unit, injector, cylinder 1, injector, cylinder 2, injector, cylinder 6, injector, cylinder 8	871
13. Engine control unit, injector, cylinder 3, injector, cylinder 4, injector, cylinder 5, injector, cylinder 7	872
14. Engine control unit, air mass meter, air mass meter 2, activated charcoal filter system solenoid valve 1	873
15. Engine control unit, radiator outlet coolant temperature sender, brake servo pressure sensor, Hall sender 3	874

16. Engine control unit, throttle valve drive (electric power control), throttle valve drive angle sender 1 for electric throttle, Hall sender 4, throttle valve module	875
17. Engine control unit, accelerator position sender, accelerator position sender 2	876
18. Engine control unit, brake light switch, brake pedal switch, continued coolant circulation relay	877
19. Engine control unit, lambda probe, circulation pump, lambda probe 2	878
20. Engine control unit, lambda probe after catalytic converter, lambda probe 2 after catalytic converter, brake servo relay, vacuum pump for brakes	879
21. Engine control unit, radiator fan control unit, radiator fan control unit 2, radiator fan, radiator fan 2, fuel system diagnostic pump	880
22. Control unit in dash panel insert, fuel pump control unit, fuel gauge sender, coolant shortage indicator sender, fuel gauge sender 2, fuel system pressurisation pump	881
23. Control unit in dash panel insert, oil pressure switch, oil level and oil temperature sender, self-diagnosis connection	882
083 - Fuse concept (1 battery)	883-900
1. Fuse concept (1 battery)	883
2. SC-fuses	884
3. SC-fuses	885
4. SC-fuses	886
5. SC-fuses	887
6. SC-fuses	888
7. SC-fuses	889
8. Battery, battery master/isolator switch, battery cut-off relay, terminal 30 wiring junction, terminal 30 wiring junction 2 and 3	890
9. SB fuses	891
10. SB-fuses, self-diagnosis connection	892
11. SB fuses	893
12. SB fuses	894
13. SB fuses	895
14. SB fuses	896
15. SB-fuses, terminal 15 voltage supply relay, transport mode relay, self-diagnosis connection	897
16. SC-fuses	898
17. SC-fuses	899
18. SC-fuses	900
084 - Convenience system	901-925
1. Convenience system	901
2. Driver door control unit, window regulator switch, driver side window regulator motor	902
3. Driver door control unit, driver side interior locking button for central locking system, remote release button for fuel filler flap and rear lid, driver side interior locking warning lamp	903
4. Driver door control unit, driver side door interior handle illumination bulb, driver side door warning lamp, front left entry light, driver door exterior handle central locking button	904
5. Driver door control unit, mirror adjustment unit motor, heated exterior mirror, automatic anti-dazzle exterior mirror on driver side	905
6. Driver door control unit, driver door contact switch, driver door central locking motor, entrance light in exterior mirror, central locking lock unit	906
7. Driver door control unit, driver side central locking switch	907
8. Driver door control unit, mirror adjustment switch, mirror adjustment changeover switch, exterior mirror heater button, fold-in mirror switch	908
9. Data bus diagnostic interface, self-diagnosis connection, onboard supply control unit, control unit in dash panel insert	909
10. Front passenger door control unit, window regulator switch in front passenger door, front passenger side window regulator motor	910
11. Front passenger door control unit, front passenger door interior handle illumination bulb, front passenger side door warning lamp, entry light, front passenger door exterior handle central locking button	911
12. Front passenger door control unit, mirror adjustment potentiometer, mirror turn signal bulb, mirror adjustment motors, fold-in mirror motor, heated exterior mirror	912
13. Front passenger side door control unit, front passenger side central locking lock unit, front passenger side automatic anti-dazzle exterior mirror	913
14. Front passenger door control unit, automatic anti-dazzle interior mirror	914
15. Rear left door control unit, rear left window regulator motor, window regulator switch in rear left door, rear left button for interior locking	915
16. Rear left door control unit, rear left central locking lock unit, rear left childproof lock contact switch	916
17. Rear left door control unit, door contact switch, exterior handle touch sensor	917
18. Rear right door control unit, rear right window regulator switch in door, rear right window regulator motor	918

19. Rear right door control unit, rear right central locking lock unit, central locking motor, entry light, door warning lamp	919
20. Rear right door control unit, rear right door exterior handle central locking button	920
21. Convenience system central control unit, rear lid handle release button, rear lid release motor, tank filler flap locking motor, rear lid light	921
22. Button to open rear lid window, alarm horn, convenience system central control unit, rear lid window release unit, release unit for rear lid window	922
23. Convenience system central control unit, vehicle tilt angle sender, interior monitoring sensor, onboard supply control unit	923
24. Interior monitoring deactivation switch, deactivation button for vehicle inclination sender, bonnet contact switch	924
25. Central locking and anti-theft alarm system aerial, remote control aerial in front right wing	925
085 - Reversing camera (Rear Assist)	926-931
1. Reversing camera (Rear Assist)	926
2. Reversing camera system control unit, Diagnostic connection	927
3. Reversing camera system control unit, TV tuner, Digital TV tuner	928
4. Reversing camera system control unit, TV tuner	929
5. Control unit with display for radio and navigation, Reversing camera system control unit	930
6. Reversing camera system control unit, Reversing camera	931
086 - Entry and start authorisation	932-939
1. Entry and start authorisation	932
2. Control unit in dash panel insert, Terminal 15 voltage supply relay, Entry and start authorisation control unit, Diagnostic connection	933
3. Immobilizer reading unit, Entry and start authorisation switch, Entry and start authorisation control unit, Onboard supply control unit, Terminal 50 voltage supply relay, Ignition key withdrawal lock solenoid	934
4. Entry and start authorisation button, Multifunction switch, Clutch pedal switch for engine start, Entry and start authorisation control unit, Steering column lock control element	935
5. Driver door exterior handle contact sensor, Contact sensor for rear left exterior door handle, Driver door control unit, Rear left door control unit, Entry and start authorisation control unit, Driver side aerial for entry and start system	936
6. Front passenger door exterior handle contact sensor, Contact sensor for rear right exterior door handle, Front passenger door control unit, Rear right door control unit, Entry and start authorisation control unit, Passenger side aerial for entry and start system	937
7. Entry and start authorisation control unit, Central locking and anti-theft alarm system aerial, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	938
8. Brake light switch, Selector lever locked in position P switch, Air conditioning system relay, Control unit in dash panel insert, Entry and start authorisation control unit, Data bus diagnostic interface	939
087 - Auxiliary coolant heater with pre-selection clock, auxiliary coolant heater applies to diesel engines only	940-944
1. Auxiliary coolant heater with pre-selection clock, auxiliary coolant heater applies to diesel engines only	940
2. Control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, roof display unit	941
3. Heater control unit, metering pump, combustion air blower, glow plug with flame monitor, coolant temperature sender for heater, heater coolant shut-off valve	942
4. Heater control unit, remote control receiver for auxiliary coolant heater, onboard supply control unit	943
5. Circulation pump relay, circulation pump	944
088 - Air conditioner components in engine compartment	945-949
1. Air conditioner components in engine compartment	945
2. High pressure sender, air conditioner compressor regulating valve	946
3. High pressure sender, air conditioner compressor regulating valve	947
4. High pressure sender, air conditioner compressor regulating valve	948
5. High pressure sender, air conditioner compressor regulating valve	949
089 - Climatronic 4-C	950-966
1. Climatronic 4-C	950
2. Climatronic control unit	951
3. Climatronic control unit, potentiometer for defroster flap control motor, potentiometer for right footwell flap control motor	952
4. Climatronic control unit, potentiometer for right temperature flap control motor, potentiometer for front right chest vent	953
5. Climatronic control unit, potentiometer for left footwell flap control motor, potentiometer for front right defroster and chest vent shut-off flap control motor	954

6. Climatronic control unit, potentiometer for left temperature flap control motor, potentiometer for front left defroster and chest vent shut-off flap control motor	955
7. Climatronic control unit, potentiometer for air recirculation flap control motor, potentiometer for front left chest vent	956
8. Climatronic control unit, sunlight penetration photosensor 2, evaporator temperature sensor, refrigerant temperature sender	957
9. Climatronic control unit, footwell vent temperature sender, blower regulation	958
10. Air quality sensor, circulation pump relay, circulation pump	959
11. Operating and display unit for rear Climatronic, control unit in dash panel insert	960
12. Rear Climatronic operating and display unit, rear left temperature flap potentiometer, rear right temperature flap control motor	961
13. Rear Climatronic operating and display unit, potentiometer for rear left air quantity flap, potentiometer for rear right air quantity flap	962
14. Rear Climatronic operating and display unit, potentiometer for rear left chest vent, potentiometer for rear right chest vent	963
15. Operating and display unit for rear Climatronic, potentiometer for B-pillar and footwell shut-off flap control motor	964
16. Rear Climatronic operating and display unit, rear vent temperature sender, rear blower Bitron regulation motor	965
17. Residual heat relay, water pump	966
090 - Climatronic 2-C	967-976
1. Climatronic 2-C	967
2. Climatronic control unit	968
3. Climatronic control unit, potentiometer for defroster flap control motor, potentiometer for right temperature flap control motor	969
4. Climatronic control unit, potentiometer for left temperature flap control motor, potentiometer for side vent control motor	970
5. Climatronic control unit, potentiometer for air recirculation flap control motor, potentiometer for centre vent control motor	971
6. Sunlight penetration photosensor 2, refrigerant temperature sender, footwell vent control motor potentiometer, Climatronic control unit	972
7. Climatronic control unit, temperature sensor	973
8. Climatronic control unit, blower regulation	974
9. Residual heat relay, water pump	975
10. Air quality sensor, circulation pump relay, circulation pump	976
091 - Air conditioning system manual	977-983
1. Air conditioning system manual	977
2. Climatronic control unit	978
3. Air conditioning system control unit, potentiometer for temperature flap control motor, potentiometer for defroster flap control motor	979
4. Air conditioning system control unit, evaporator output temperature sender, potentiometer for footwell vent control motor, potentiometer for front air distribution control motor	980
5. Air conditioning system control unit, refrigerant temperature sender, front blower Bitron regulation motor	981
6. Circulation pump relay, circulation pump	982
7. Residual heat relay, water pump	983
092 - TV-Tuner	984-988
1. TV-Tuner	984
2. Steuergerät im Schalttafeleinsatz, Bordnetzsteuergerät, Diagnose-Interface für Datenbus, TV-Tuner	985
3. Steuergerät mit Anzeigeeinheit für Radio und Navigationssystem, Bordnetzsteuergerät, TV-Tuner, digitaler TV-Tuner	986
4. Steuergerät für Antennenauswahl, Bordnetzsteuergerät, TV-Tuner	987
5. Bordnetzsteuergerät, Steuergerät für Antennenauswahl, Antennen für TV, Antennenverstärker für TV	988
093 - Telephone preparation (Bluetooth)	989-993
1. Telephone preparation (Bluetooth)	989
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	990
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	991
4. Telephone transmitter and receiver unit, telephone microphone, aerial for Bluetooth, coupling point mobile telephone mounting	992
5. Telephone transmitter and receiver unit, telephone aerial, coupling point mobile telephone mounting	993
094 - Electric socket, 230 Volt	994-995
1. Electric socket, 230 Volt	994
2. Onboard supply control unit. fuse. transformer with socket. 12 V - 230 V	995

095 - 2.5l diesel engine , BPD,BPE	996-1012
1. 2.5l diesel engine , BPD,BPE	996
2. Starter, Alternator, Terminal 50 voltage supply relay	997
3. Terminal 30 voltage supply relay, Fuse in relay plate fuse holder	998
4. Automatic glow period control unit	999
5. Engine control unit	1000
6. Engine control unit, Unit injector valve, No. 1 cyl.	1001
7. Engine control unit	1002
8. Idling speed switch, Intake air temperature sender, Engine control unit	1003
9. Brake light switch, Clutch pedal switch, Brake pedal switch, Air mass meter, Engine control unit	1004
10. Exhaust gas recirculation potentiometer, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Temperature sender after particulate filter, Engine control unit	1005
11. Lambda probe, Engine control unit, Intake manifold flap motor	1006
12. Exhaust gas pressure sensor 1, Engine control unit, Radiator fan control unit 2	1007
13. Fuel pump relay, Radiator fan control unit, Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve	1008
14. Fuel cooling pump relay, Additional coolant pump relay, Engine control unit, Tank circuit pressurisation relay, Fuel cooling pump	1009
15. Circulation pump relay, Engine control unit	1010
16. Oil pressure switch, Oil level and oil temperature sender, Dash panel insert, Diagnostic connection	1011
17. Fuel system pressurisation pump, Fuel pump, Coolant shortage indicator sender, Dash panel insert	1012
096 - Sockets (12V) and cigarette lighter	1013-1015
1. Sockets (12V) and cigarette lighter	1013
2. Relay for power sockets, cigarette lighter, rear cigarette lighter, cigarette lighter illumination bulb	1014
3. Onboard supply control unit, 12 V sockets, cigarette lighter illumination bulb, socket illumination bulb	1015
097 - Radio and navigation system MFD2 DVD with "digital sound package" (8 channel)	1016-1025
1. Radio and navigation system MFD2 DVD with "digital sound package" (8 channel)	1016
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit	1017
3. Onboard supply control unit, steering column electronics control unit, data bus diagnostic interface	1018
4. Control unit with display for radio and navigation system, CD changer	1019
5. Control unit with display for radio and navigation system, onboard supply control unit, CD changer, navigation system aerial	1020
6. Onboard supply control unit, amplifier	1021
7. Onboard power supply control unit, amplifier, loudspeaker front left door and front right door	1022
8. Onboard power supply control unit, amplifier, rear left and rear right loudspeaker	1023
9. Onboard power supply control unit, amplifier, front left and front right loudspeaker	1024
10. Aerial selection control unit, onboard supply control unit, aerials	1025
098 - Fuse concept (1 battery)	1026-1045
1. Fuse concept (1 battery)	1026
2. Fuses SC1 - SC8	1027
3. Fuses SC14 - SC19	1028
4. Fuses SC27, SC29, SC30, SC53, SC54, SC56, SC57	1029
5. Fuses SC20 - SC25	1030
6. Fuses SC31 - SC36	1031
7. Fuses S333, S343, SC9 - SC12	1032
8. Battery, battery master/isolator switch, battery cut-off relay, terminal 30 wiring junction, terminal 30 wiring junction 2 and 3	1033
9. Fuses SB1, SB2, SB28 - SB30	1034
10. Fuses SB7 - SB12, self-diagnosis connection	1035
11. Fuses SB14 - SB19, SB22 - SB25	1036
12. Fuse SB26	1037
13. Fuses SB33 - SB36, SB38, SB39, SB41	1038
14. Fuses SB41, SB42, SB44, SB45, SB55 - SB57	1039
15. Fuses SB47, SB49 - SB52, terminal 15 voltage supply relay, self-diagnosis connection	1040
16. Fuses SB53, SB54	1041
17. Fuses SC38 - SC41	1042
18. Fuses SC42 - SC44	1043
19. Fuses SC48, SC49	1044
20. Fuses SC50 - SC52	1045
099 - Fuse concept (2 batteries)	1046-1069

1. Fuse concept (2 batteries)	1046
2. Fuse holder C	1047
3. Fuse holder C	1048
4. Fuse holder C	1049
5. Fuse holder C	1050
6. Fuse holder C	1051
7. Fuse holder C	1052
8. Fuse holder C	1053
9. Battery, Terminal 30 wiring junction 3	1054
10. Second battery, Terminal 30 wiring junction 3	1055
11. Fuse holder B	1056
12. Fuse holder B	1057
13. Fuse holder B	1058
14. Fuse holder B	1059
15. Fuse holder B	1060
16. Fuse holder B	1061
17. Terminal 15 voltage supply relay, Fuse holder B	1062
18. Fuse holder B	1063
19. Fuse holder B	1064
20. Fuse holder C	1065
21. Fuse holder C	1066
22. Fuse holder C	1067
23. Battery parallel circuit relay, Fuse holder C, Fuse 16 on fuse holder D	1068
24. Onboard supply control unit, Voltage supply relay 1, Fuse 10 on fuse holder D, Wiring connector	1069
100 - Rear lid, electric	1070-1072
1. Rear lid, electric	1070
2. Rear lid control unit, rear lid closed switch	1071
3. Rear lid control unit, rear lid angle sender, rear lid hydraulics motor	1072
101 - 3.0 l/165 kW TDI, engine code BKS	1073-1089
1. 3.0 l/165 kW TDI, engine code BKS	1073
2. Starter, alternator, terminal 50 voltage supply relay, terminal 30 wiring junction	1074
3. Terminal 30 voltage supply relay, fuses	1075
4. Automatic glow period control unit, diesel direct injection system control unit, glow plugs 1-6	1076
5. Diesel direct injection system control unit, radiator fan control unit, radiator fan control unit 2, radiator fan, radiator fan 2	1077
6. Fuel pump relay, diesel direct injection system control unit, tank circuit pressurisation relay, air conditioning system compressor regulating valve	1078
7. Charge air pressure sender, intake air temperature sender, exhaust gas pressure sensor 1, diesel direct injection system control unit, high pressure sender, additional coolant pump relay	1079
8. Hall sender, diesel direct injection system control unit, throttle valve module, residual heat relay, circulation pump	1080
9. Diesel direct injection system control unit, fuel pressure regulating valve, fuel metering valve, exhaust gas recirculation valve, fuel cooling pump	1081
10. Engine speed sender, diesel direct injection system control unit, intake manifold flap motor, intake manifold flap 2 motor	1082
11. Lambda probe, bank 1 exhaust gas temperature sender 2, diesel direct injection system control unit, exhaust gas temperature sender 1, gearbox input speed sender, lambda probe heater	1083
12. Accelerator position sender, accelerator position sender 2, fuel pressure sender, diesel direct injection system control unit, injector, cylinder 1	1084
13. Diesel direct injection system control unit, injectors 2-6	1085
14. Coolant temperature sender, air mass meter, fuel temperature sender, radiator outlet coolant temperature sender, diesel direct injection system control unit	1086
15. Brake light switch, diesel direct injection system control unit, clutch pedal switch, brake pedal switch	1087
16. Oil pressure switch, diesel direct injection system control unit, control unit in dash panel insert, self-diagnosis connection	1088
17. Fuel system pressurisation pump, fuel pump, coolant shortage indicator sender, fuel gauge sender 2, oil level and oil temperature sender, fuel gauge sender	1089
102 - 2.5 l/120 kW TDI, engine code BPD	1090-1104
1. 2.5 l/120 kW TDI, engine code BPD	1090
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	1091
3. Terminal 30 voltage supply relay, fuses	1092
4. Automatic glow period control unit, engine control unit, glow plug 1-5, additional coolant pump relay	1093
5. Engine control unit, lambda probe, circulation pump, lambda probe heater, residual heat relay	1094

6. Engine control unit, unit injector valves, No. 1-5 cyl.	1095
7. Engine control unit, exhaust gas recirculation potentiometer, exhaust gas pressure sensor 1, exhaust gas recirculation valve, intake manifold flap motor	1096
8. Engine control unit, coolant temperature sender, fuel temperature sender, radiator outlet coolant temperature sender, temperature sender before particulate filter, temperature sender before turbocharger	1097
9. Engine control unit, charge air pressure sender, intake air temperature sender, Hall sender, engine speed sender	1098
10. Engine control unit, brake light switch, brake pedal switch, accelerator position sender, accelerator position sender 2	1099
11. Engine control unit, clutch pedal switch, air mass meter, radiator fan control unit, radiator fan	1100
12. Engine control unit, high pressure sender, fuel pump relay, heater element for crankcase breather, exhaust gas recirculation cooler change-over valve	1101
13. Engine control unit, fuel cooling pump relay, tank circuit pressurisation relay, radiator fan control unit 2, radiator fan 2	1102
14. Engine control unit, oil level and oil temperature sender, control unit in dash panel insert, fuel cooling pump, self-diagnosis connection	1103
15. Control unit in dash panel insert, fuel system pressurisation pump, fuel pump, coolant shortage indicator sender, fuel gauge sender 2, oil pressure switch	1104
103 - Seat heating, driver and front passenger side seat heating	1105-1111
1. Seat heating, driver and front passenger side seat heating	1105
2. Heated front seats control unit, driver seat temperature sensor, driver seat cushion lateral support heater, heated driver seat cushion, heated driver seat backrest	1106
3. Heated front seats control unit, heated driver seat regulator, heated front passenger seat regulator, seat heating switch illumination bulb, onboard supply control unit	1107
4. Heated front seats control unit, front passenger seat temperature sensor, front passenger seat cushion lateral support heater, heated front passenger seat cushion, heated front passenger seat backrest, onboard supply control unit	1108
5. Control unit for heated rear seats, rear left seat temperature sensor, heated rear left seat, heated rear left seat backrest	1109
6. Control unit for heated rear seats, heated rear left seat switch with regulator, seat heating switch illumination bulb	1110
7. Control unit for heated rear seats, heated rear right seat switch with regulator, seat heating switch illumination bulb, rear right seat temperature sensor	1111
104 - Sockets (12V) and cigarette lighter	1112-1115
1. Sockets (12V) and cigarette lighter	1112
2. Cigarette lighter illumination bulb, cigarette lighter, rear cigarette lighter	1113
3. 12 V socket 2, 12 V socket 4, socket illumination bulb	1114
4. Onboard supply control unit, 12 V socket, 12 V socket 3, socket illumination bulb	1115
105 - Multimedia system	1116-1121
1. Multimedia system	1116
2. Voltage monitoring relay, fuses	1117
3. Roof display unit, voltage monitoring relay, DVD player, digital TV tuner	1118
4. TV tuner, digital TV tuner	1119
5. Aerial selection control unit, aerials for TV, aerial amplifier for TV	1120
6. Aerial selection control unit, aerials for TV, aerial amplifier for TV	1121
201 - Earth points - 3	1122-1137
1. Earth points	1122-1137
1.1 Overview of all earth points in engine compartment	1122
1.2 Earth points, in engine compartment	1123-1126
1.3 Overview of all earth points in passenger's compartment	1127
1.4 Earth points in vehicle interior	1128-1132
1.5 Overview of all earth points in luggage compartment	1133
1.6 Earth points in luggage compartment	1134-1137
202 - - Fitting locations: Relay and fuse assignment - 3	1138-1169
1. Relay and fuse assignment	1138-1169
1.1 Fuse assignment in fuse box, left dash panel	1138-1141
1.1.1 Fuse colours	1138
1.1.2 Fuses:	1139-1141
1.2 Fuse assignment in fuse box, right dash panel	1142-1144
1.2.1 Fuse colours	1142
1.2.2 Fuses:	1143-1144
1.3 Fuses and relay position assignment in pre-fuse box, under driver seat	1145-1147
1.3.1 Fuses:	1145
1.3.2 Relay assignment:	1146-1147

1.4 Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models with 5.0 l (V10) TDI engine	1148-1151
1.4.1 Fuse colours	1148
1.4.2 Fuses:	1149
1.4.3 Relay assignment:	1150-1151
1.5 Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models with 3.2 l (V6) petrol engine	1152-1155
1.5.1 Fuse colours	1152
1.5.2 Fuses:	1153
1.5.3 Relay assignment:	1154-1155
1.6 Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models with 4.2 l (V8) petrol engine	1156-1159
1.6.1 Fuse colours	1156
1.6.2 Fuses:	1157
1.6.3 Relay assignment:	1158-1159
1.7 Fuse assignment and relay locations in E-box on left in plenum chamber, applies only to models with 2.5 l (R5) diesel engine	1160-1163
1.7.1 Fuse colours	1160
1.7.2 Fuses:	1161
1.7.3 Relay assignment:	1162-1163
1.8 Fuse assignment and relay locations in E-box on left in plenum chamber, applies only to models with 3.0 l (V6) diesel engine	1164-1167
1.8.1 Fuse colours	1164
1.8.2 Fuses:	1165
1.8.3 Relay assignment:	1166-1167
1.9 Relay locations for E-box on left under dash panel near centre console	1168-1169
1.9.1 Relay assignment:	1168
1.9.2 Relay assignment:	1169
203 - -Fitting locations: control units - 3	1170-1230
1. Control units	1170-1230
1.1 Overview of all control units	1170-1173
1.2 Mobile telephone operating electronics control unit - J412	1174-1175
1.3 Engine control unit 2 - J624 applies only to models fitted with 5.0 l (V10) TDI engine	1176
1.4 Engine control unit 2 - J624 applies only to models fitted with 6.0l (W12) petrol engine	1177-1178
1.5 Engine control unit - J220 (only models with 3.2 l V6 and 4.2 l V8 petrol engines)	1179
1.6 Engine control unit (Master) - J623 (5.0 l V10, 2.5 l R5 TDI-engine and 6.0 l W12 petrol engine)	1180-1181
Diesel direct injection system control unit - J248 (3.0 l V6 TDI-engine) Motronic control unit - J220 (3.6 l V6 petrol engine)	
1.7 ABS control unit with EDL - J104	1182-1183
1.8 Automatic gearbox control unit - J217	1184-1185
1.9 Control unit for front passenger seat adjustment with memory function - J521	1186-1187
1.9.1 Connectors:	1186-1187
1.10 Transfer box control unit - J646	1188-1189
1.11 Telematics control unit - J499	1190-1191
1.12 Transformer with socket, 12 V-230 V - U13	1192
1.13 Reversing camera system control unit - J772	1193-1194
1.14 Trailer detector control unit - J345 (Hella)	1195
1.15 Trailer detector control unit - J345 (Westfalia)	1196-1197
1.16 Convenience system central control unit - J393	1198-1199
1.17 Vehicle inclination sender - G384	1200-1201
1.18 TV tuner - R78	1202-1203
1.19 Adaptive suspension control unit - J197	1204-1205
1.20 Anti-roll bar uncoupling control unit - J742	1206-1207
1.21 Parking aid control unit - J446	1208-1209
1.22 Axle differential lock control unit - J647	1210-1211
1.23 Garage door operation control unit - J530	1212
1.24 Airbag control unit - J234	1213-1214
1.25 Control unit for seat and steering column adjustment with memory function - J136	1215-1216
1.25.1 Connectors:	1215-1216
1.26 Heated windscreen control unit - J505	1217-1218
1.27 Cornering light and headlight range control unit - J745	1219-1220
1.28 Steering column electronics control unit - J527	1221-1224
1.28.1 Connectors:	1221
1.28.2 A = Tiptronic mounting:	1221-1222
1.28.3 C = Electronic unit mounting:	1223
1.28.4 D = Steering column adjustment mounting:	1224

1.29 Entry and start authorisation control unit - J518	1225-1226
1.30 Tyre Pressure Monitoring System control unit -J502-	1227-1228
1.31 Onboard supply control unit - J519	1229-1230
1.31.1 Connectors:	1229-1230
204 - -Fitting locations: Connections for high current (one battery concept) - 3	1231-1240
1. Connections for high current (one battery concept)	1231-1240
1.1 Overview	1231
1.2 Earth point, on right in engine compartment - 13	1232
1.3 Earth point on engine block - 18	1232-1233
1.4 Screw connection (30), on starter	1234
1.5 Screw connection in electronics box left, under the seat on front left	1235-1236
1.6 Earth point, under driver seat - 34	1237
1.7 Wiring connector - TV15, in electronics box	1237
1.8 Terminal 30 wiring junction - TV2, starting aid point	1238
1.9 Terminal 30 wiring junction - TV2, starting aid point	1239
1.10 Screw connection (B+), on alternator	1240
205 - -Fitting locations: Connections for high current (two battery and second battery concept) - 3	1241-1253
1. Connections for high current (two battery and second battery concept)	1241-1253
1.1 Overview	1241-1242
1.2 Earth point, on right in engine compartment - 13	1243
1.3 Earth point on engine block - 18	1243
1.4 Screw connection (30), on starter	1244
1.5 Battery parallel circuit relay - J581	1245
1.6 Earth point, near second battery - 49	1245
1.7 2nd battery fuse - S65	1246
1.8 Screw connection in electronics box left, under the seat on front left	1247-1248
1.9 Earth point, under driver seat - 34	1249
1.10 Wiring connector - TV15, in electronics box	1250
1.11 Terminal 30 wiring junction - TV2, starting aid point	1251
1.12 Terminal 30 wiring junction - TV2, starting aid point	1252
1.13 Screw connection (B+), on alternator	1253
206 - Locations: Fuse holder B on the dash panel on left, fuses SB, from November 2005 - 3	1254-1261
1. Fuse holder B on the dash panel on left, fuses SB	1254-1261
1.1 From November 2005	1254-1261
1.1.1 Fuse colours	1254-1261
207 - Locations: Fuse holder C on the dash panel on right, fuses SC, from November 2005 - 3	1262-1267
1. Fuse holder C on the dash panel on right, fuses SC	1262-1267
1.1 From November 2005	1262-1267
1.1.1 Fuse colours	1262-1267
208 - -Fitting locations: Position of relays and fuses, fuses SD, electronics box under driver seat, from November 2005 - 3	1268-1271
1. Position of relays and fuses, fuses SD, electronics box under driver seat	1268-1271
1.1 from November 2005	1268-1270
1.1.1 Torque settings	1268
1.1.2 Fuse colours	1269-1270
1.2 Relay locations on electronics box, under driver seat	1271
209 - -Fitting locations: Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 2.5 l (V5) TDI engine, from November 2005 - 3	1272-1277
1. Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 2.5l (V5) TDI engine	1272-1277
1.1 from November 2005	1273-1275
1.1.1 Fuse colours	1273-1275
1.2 Relay positions:	1276-1277
210 - -Fitting locations: Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 3.0l (V6) diesel engine, from November 2005 - 3	1278-1283
1. Fuse assignment and relay locations in E-box, on left in plenum chamber, only models with 3.0 l (V6) diesel engine	1278-1283
1.1 from November 2005	1279-1281
1.1.1 Fuse colours	1279-1281
1.2 Relay positions:	1282-1283
211 - Fitting location: fuse assignment and relay locations of E-box, on left in plenum chamber, applies only to models fitted with 5.0l (V10) TDI engine, from November 2005 - 3	1284-1289
1. Fuse and relay assignment in E-box on left in plenum chamber, applies only to models with 5.0 l (V10) TDI engine	1284-1289
1.1 From November 2005	1285-1287
1.1.1 Fuse colours	1285-1287

1.2 Relay positions:	1288-1289
212 - -Fitting locations: Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 3.2 l (V6) petrol engine, from November 2005 - 3	1290-1295
1. Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 3.2 l (V6) petrol engine	1290-1295
1.1 from November 2005	1291-1293
1.1.1 Fuse colours	1291-1293
1.2 Relay positions:	1294-1295
213 - -Fitting locations: Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 3.6l (V6 FSI) petrol engine, from November 2005 - 3	1296-1301
1. Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 3.6l (V6 FSI) petrol engine	1296-1301
1.1 from November 2005	1297-1299
1.1.1 Fuse colours	1297-1299
1.2 Relay positions:	1300-1301
214 - -Fitting locations: Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 4.2 l (V8) petrol engine, from November 2005 - 3	1302-1307
1. Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 4.2 l (V8) petrol engine	1302-1307
1.1 Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 4.2 l (V8) petrol engine	1303
1.2 from November 2005	1303-1305
1.2.1 Fuse colours	1303-1305
1.3 Relay positions:	1306-1307
215 - -Fitting locations: Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 6.0 l (W12) petrol engine, from November 2005 - 3	1308-1315
1. Fuse assignment and relay locations in E-box, on left in plenum chamber, applies only to models fitted with 6.0 l (W12) petrol engine	1308-1315
1.1 from November 2005	1309-1313
1.1.1 Fuse colours	1309-1313
1.2 Relay positions:	1314-1315
216 - -Fitting locations: Relay locations for E-box on left under dash panel near centre console, from November 2005 - 3	1316-1317
1. Relay locations for E-box on left under dash panel near centre console	1316-1317
1.1 from November 2005	1316-1317
1.1.1 Relay positions:	1316
1.1.2 Relay positions:	1317
217 - -Fitting locations: Additional fuses S333, S343 and relay J813, in interior, from November 2005 - 3	1318-1320
1. Additional fuses S333, S343 and relay J813, in interior	1318-1320
1.1 from November 2005	1318
1.2 Battery parallel circuit relay - J581	1319
1.3 2nd battery fuse - S65	1320
218 - -Fitting locations: Fuse holder B on the dash panel on left - 3	1321-1328
1. Fuse holder B on the dash panel on left	1321-1328
1.1 Fuse holder B on the dash panel on left	1322-1328
1.1.1 from May 2006	1322
1.1.2 Fuse colours	1322-1328
219 - -Fitting locations: Fuse holder C on the dash panel on right - 3	1329-1335
1. Fuse holder C on the dash panel on right	1329-1335
1.1 Fuse holder C on the dash panel on right	1330-1335
1.1.1 from May 2006	1330
1.1.2 Fuse colours	1330-1335
401 - -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1336-1346
1. Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1336
2. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1337
3. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1338
4. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1339
5. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1340
6. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1341

7. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1342
8. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1343
9. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1344
10. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1345
11. -Fault Finding Program: Starter does not turn (models with a 10-cylinder diesel engine, engine code AYH)	1346
402 - -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1347-1357
1. Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1347
2. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1348
3. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1349
4. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1350
5. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1351
6. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1352
7. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1353
8. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1354
9. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1355
10. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1356
11. -Fault Finding Program: Starter does not turn (models with a 6-cylinder petrol engine, engine code AZZ and BAA)	1357