

|  |       |
|--|-------|
| 010 - Basic equipment  | 1-22  |
| 1. Basic equipment   | 1     |
| 2. Onboard supply control unit   | 2     |
| 3. Onboard supply control unit, Left fog light bulb, Right fog light bulb  | 3     |
| 4. Onboard supply control unit, Front left headlight, Front right headlight  | 4     |
| 5. Light switch, Onboard supply control unit   | 5     |
| 6. Switch and instrument illumination regulator, Mirror adjustment switch, Onboard supply control unit   | 6     |
| 7. Front interior light button, Onboard supply control unit, Front interior light  | 7     |
| 8. Onboard supply control unit, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror   | 8     |
| 9. Glove compartment button, Storage compartment illumination switch, Interior light switch-off delay blocking diode, Onboard supply control unit, Storage compartment illumination bulb, Radio, Glove compartment light, Engine compartment light   | 9     |
| 10. Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel central vent illumination, Central rear vent illumination bulb, Rear left vent illumination bulb   | 10    |
| 11. Onboard supply control unit, 12 V socket, Rear cigarette lighter, 12 V socket 3  | 11    |
| 12. Onboard supply control unit, Cigarette lighter, 12 V socket 2, 12 V socket 4   | 12    |
| 13. Hazard warning light switch, Reversing light switch, Onboard supply control unit, Dash panel right vent illumination bulb, Rear right vent illumination bulb   | 13    |
| 14. Anti-theft alarm and vermin repellent system contact switch, Treble horn, Bass horn, Onboard supply control unit, Rear left footwell illumination bulb, Rear right footwell illumination bulb, Front left footwell illumination bulb, Front right footwell illumination bulb   | 14    |
| 15. Rain and light sensor, Headlight washer system relay, Onboard supply control unit, Radio, Windscreen wiper motor, Headlight washer system pump, Windscreen and rear window washer pump   | 15    |
| 16. Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Dash panel insert   | 16    |
| 17. Onboard supply control unit, Dash panel insert, Diagnostic connection  | 17    |
| 18. Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Steering column electronics control unit  | 18    |
| 19. Convenience system central control unit, Onboard supply control unit   | 19    |
| 20. Convenience system central control unit, Onboard supply control unit, Rear left turn signal bulb, Left brake and tail light bulb, Rear window wiper motor  | 20    |
| 21. Convenience system central control unit, Onboard supply control unit, Rear right turn signal bulb, Right brake and tail light bulb, Left tail light bulb 2, Right tail light bulb 2  | 21    |
| 22. Suppression filter, Heated rear window relay, Convenience system central control unit, Onboard supply control unit, High-level brake light bulb, Rear lid light, Heated rear window  | 22    |
| 043 - Powertrain CAN bus network, convenience system and infotainment  | 23-30 |
| 1. Powertrain CAN bus network, convenience system and infotainment   | 23    |
| 2. ABS control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection  | 24    |
| 3. ABS control unit, Automatic gearbox control unit, Airbag control unit, Convenience system central control unit, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Left headlight range control unit, Right headlight range control unit, Transfer box control unit, Axle differential lock control unit, Anti-roll bar uncoupling control unit | 25-26 |
| 4. Adaptive suspension control unit, Automatic gearbox control unit, Steering column and belt height adjustment control unit, Driver door control unit, Parking aid control unit, Onboard supply control unit, Steering column electronics control unit, Transfer box control unit   | 27    |
| 5. Climatronic control unit, Front passenger door control unit, Rear right door control unit, Tyre Pressure Monitoring System control unit, Entry and start authorisation control unit, Front passenger seat adjustment with memory control unit   | 28    |
| 6. Seat and steering column adjustment control unit with memory, Trailer detector control unit, Rear left door control unit, Convenience system central control unit, Amplifier  | 29    |
| 7. Wiper motor control unit, Mobile telephone operating electronics control unit, Telematics control unit, Control unit with display for radio and navigation, Vehicle position recognition control unit, Roof display unit, Radio   | 30    |
| 059 - Fuse concept (1 battery)   | 31-59 |
| 1. Fuse concept (1 battery)  | 31    |
| 2. Fuse holder C   | 32    |
| 3. Fuse holder C   | 33    |
| 4. Fuse holder C   | 34    |
| 5. Fuse holder C   | 35    |
| 6. Fuse holder C   | 36    |
| 7. Fuse holder C   | 37    |

|   |       |
|---|-------|
| 8. Fuse holder C  | 38    |
| 9. Fuse holder C  | 39    |
| 10. Battery, Starter, Alternator, Battery master/isolator switch, Onboard supply control unit,<br>Terminal 30 wiring junction, Terminal 30 wiring junction 2, Terminal 30 wiring junction 3   | 40    |
| 11. Relay for power sockets, Fuse holder B  | 41    |
| 12. Fuse holder B   | 42    |
| 13. Fuse holder B   | 43    |
| 14. Fuse holder B   | 44    |
| 15. Fuse holder B   | 45    |
| 16. Fuse holder B   | 46    |
| 17. Fuse holder B   | 47    |
| 18. Fuse holder B   | 48    |
| 19. Fuse holder B   | 49    |
| 20. Fuse holder B   | 50    |
| 21. Fuse holder B   | 51    |
| 22. Terminal 15 voltage supply relay, Fuse holder B   | 52    |
| 23. Fuse holder B   | 53    |
| 24. Fuse holder B   | 54    |
| 25. Fuse holder C   | 55    |
| 26. Fuse holder C   | 56    |
| 27. Fuse holder C   | 57    |
| 28. Fuse holder C   | 58    |
| 29. Fuse holder C   | 59    |
| 075 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering<br>light   | 60-65 |
| 1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light   | 60    |
| 2. Onboard supply control unit, Front left headlight  | 61    |
| 3. Onboard supply control unit, Front right headlight   | 62    |
| 4. Onboard supply control unit, Control unit for cornering light and headlight range control  | 63    |
| 5. Onboard supply control unit, Steering column electronics control unit  | 64    |
| 6. Light switch, Switch and instrument illumination regulator, Onboard supply control unit  | 65    |
| 081 - Entry and start authorisation (USA, Canada)   | 66-73 |
| 1. Entry and start authorisation (USA, Canada)  | 66    |
| 2. Control unit in dash panel insert, Terminal 15 voltage supply relay, Entry and start<br>authorisation control unit, Diagnostic connection  | 67    |
| 3. Immobilizer reading unit, Entry and start authorisation switch, Entry and start authorisation<br>control unit, Onboard supply control unit, Terminal 50 voltage supply relay, Ignition key withdrawal<br>lock solenoid   | 68    |
| 4. Entry and start authorisation button, Multifunction switch, Entry and start authorisation control<br>unit, Steering column lock control element  | 69    |
| 5. Driver door exterior handle central locking button, Rear left door exterior handle central<br>locking button, Driver door exterior handle contact sensor, Contact sensor for rear left exterior<br>door handle, Driver door control unit, Rear left door control u it, Entry and start authorisation<br>control unit, Driver side aerial for entry and start system                                  | 70    |
| 6. Front passenger door exterior handle central locking button, Rear right door exterior handle<br>central locking button, Front passenger door exterior handle contact sensor, Contact sensor for rear<br>right exterior door handle, Front passenger door control u it, Rear right door control unit, Entry<br>and start authorisation control unit, Passenger side aerial for entry and start system | 71    |
| 7. Entry and start authorisation control unit, Central locking and anti-theft alarm system aerial,<br>Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system,<br>Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system   | 72    |
| 8. Brake light switch, Selector lever locked in position P switch, Air conditioning system relay,<br>Control unit in dash panel insert, Entry and start authorisation control unit, Data bus diagnostic<br>interface  | 73    |
| 100 - Seat heating (US equipment)   | 74-82 |
| 1. Seat heating (US equipment)  | 74    |
| 2. Driver seat temperature sensor, Heated driver seat control unit, Heated seat cushion for driver<br>seat, Heated backrest for driver seat, Driver seat cushion lateral support heater, Driver seat<br>backrest lateral support heater   | 75    |
| 3. Heated driver seat regulator, Heated driver seat control unit, Onboard supply control unit   | 76    |
| 4. Heated front passenger seat regulator, Heated front passenger seat control unit  | 77    |
| 5. Front passenger seat temperature sensor, Heated front passenger seat control unit, Heated seat<br>cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat<br>lateral support heater, Front passenger seat backrest lateral support heater   | 78    |
| 6. Rear left seat temperature sensor, Heated rear left seat control unit, Heated bench seat cushion<br>for rear left seat. Heated backrest for rear left seat. Rear left seat lateral support heater. Left  | 79    |

|   |    |
|---|----|
| rear seat lateral support heating   |    |
| 7. Heated rear left seat switch with regulator, Heated rear left seat control unit  | 80 |
| 8. Rear right seat temperature sensor, Heated rear right seat control unit, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat, Rear right seat lateral support heater, Right rear seat lateral support heating | 81 |
| 9. Heated rear right seat switch with regulator, Heated rear right seat control unit  | 82 |