

001 - Basic equipment	1-28
1. Basic equipment	1
2. Onboard supply control unit	2
3. Left headlight range control motor, left side light and turn signal bulb, left headlight dipped beam and main beam bulb	3
4. Right headlight range control motor, right side light and turn signal bulb, right headlight dipped beam and main beam bulb	4
5. Onboard supply control unit, switches and instruments illumination regulator, headlight range control regulator, left and right fog light bulb	5
6. Onboard supply control unit, light switch, fog light button, rear fog light button, light switch illumination bulb	6
7. Onboard supply control unit, mirror adjustment switch, exterior mirror heater button, fold-in mirror switch, mirror adjustment switch illumination bulb	7
8. Onboard supply control unit, front interior light button, front interior light, driver and front passenger side reading light, driver and front passenger side reading light button	8
9. Onboard supply control unit, glove compartment button, glove compartment light	9
10. Onboard supply control unit, rear left and right reading light, front passenger and driver side illuminated vanity mirror, dash panel left vent illumination bulb	10
11. Onboard supply control unit, dash panel central and right vent illumination bulb, central, left and right rear vent illumination bulb	11
12. Onboard supply control unit, cigarette lighter illumination bulb, socket illumination bulb, cigarette lighter, 12 V socket	12
13. Onboard supply control unit, cigarette lighter illumination bulb, rear cigarette lighter, 12 V socket 2 - 4, socket illumination bulb	13
14. Onboard supply control unit, hazard warning light switch, indicator lamp for hazard warning light, reversing switch	14
15. Onboard supply control unit, rear left and right footwell illumination bulb, front left and right footwell illumination bulb	15
16. Onboard supply control unit, bonnet contact switch, treble horn, bass horn, anti-theft alarm system horn	16
17. Onboard supply control unit, headlight washer system relay, headlight washer system pump	17
18. Onboard supply control unit, rain and light detector sensor, windscreen wiper motor, radio, windscreen and rear window washer pump	18
19. Dash panel insert, control unit in dash panel insert, ambient temperature sensor, coolant shortage indicator sender, washer fluid level sender, speedometer	19
20. Dash panel insert, control unit in dash panel insert, parking brake contact switch	20
21. Dash panel insert, control unit in dash panel insert, speedometer, buzzer and gong, multifunction display, main beam and side light warning lamp, trip counter display	21
22. Dash panel insert, control unit in dash panel insert, data bus diagnostic interface, brake fluid level warning contact, self-diagnosis connection	22
23. Steering column electronics control unit, airbag coil spring, turn signal switch, horn plate	23
24. Convenience system central control unit	24
25. Convenience system central control unit, rear left turn signal bulb, left brake and tail light bulb, rear left fog light bulb, left reversing light bulb	25
26. Convenience system central control unit, rear right fog light bulb, right reversing light bulb, right tail light bulb 2, left and right number plate light	26
27. Convenience system central control unit, rear right turn signal bulb, right brake and tail light bulb, luggage compartment light	27
28. Convenience system central control unit, suppression filter, heated rear window relay, high-level brake light bulb, rear window wiper motor, rear lid light, heated rear window	28
002 - Fuse concept, 1 battery	29-54
1. Fuse concept, 1 battery	29
2. SB fuse, relay for power sockets	30
3. SB fuses, self-diagnosis connection	31
4. SB fuses	32
5. SB fuses	33
6. SB fuse	34
7. SB fuse	35
8. SB fuses	36
9. SB fuses	37
10. SB fuses	38
11. SB fuse, terminal 15 voltage supply relay	39
12. SB fuses, self-diagnosis connection	40
13. SB fuses	41
14. SB fuses	42
15. SC fuses	43

16. SC fuses	44
17. SC fuses	45
18. SC fuses	46
19. SC fuses	47
20. SC fuses	48
21. SC fuses	49
22. SC fuses	50
23. SC fuses	51
24. SC fuses	52
25. SC fuses	53
26. Battery, battery master/isolator switch, battery cut-off relay, terminal 30 wiring junction, terminal 30 wiring junction 2 and 3	54
003 - Fuse concept, 2 battery	55-83
1. Fuse concept, 2 battery	55
2. SB fuses	56
3. SB fuses, self-diagnosis connection	57
4. SB fuses	58
5. SB fuses	59
6. SB fuse	60
7. SB fuse	61
8. SB fuses	62
9. SB fuses	63
10. SB fuses	64
11. SB fuse, terminal 15 voltage supply relay	65
12. SB fuses, self-diagnosis connection	66
13. SB fuses	67
14. SB fuses	68
15. SC fuses	69
16. SC fuses	70
17. SC fuses	71
18. SC fuses	72
19. SC fuses	73
20. SC fuses	74
21. SC fuses	75
22. SC fuses	76
23. SC fuses	77
24. SC fuses	78
25. SC fuses	79
26. Battery master/isolator switch, battery cut-off relay, terminal 30 wiring junction, terminal 30 wiring junction 2 and 3	80
27. Battery, second battery, terminal 30 wiring junctions 3 and 4, second battery charging circuit relay	81
28. Onboard supply control unit, voltage supply relay 1, wiring connector	82
29. Battery parallel circuit relay, voltage supply relay 2	83
004 - Convenience system	84-110
1. Convenience system	84
2. Driver door control unit, window regulator switch, driver side window regulator motor, childproof lock switch, front right window regulator switch in driver door	85
3. Driver door control unit, driver side interior locking button for central locking system, remote release button for fuel filler flap and rear lid, driver side interior locking warning lamp, button illumination bulb	86
4. Driver door control unit, driver side door interior handle illumination bulb, driver side door exterior handle central locking button, driver side aerial for entry and start authorisation, front left entry light	87
5. Driver door control unit, mirror adjustment motors, heated exterior mirror on driver side, potentiometer for horizontal and vertical adjustment of driver side mirror, driver side automatic anti-dazzle exterior mirror	88
6. Driver door control unit, driver door contact switch, driver door central locking motor, entrance light in exterior mirror, central locking lock unit, turn signal light bulb in exterior mirror	89
7. Driver door control unit, driver side central locking switch	90
8. Onboard supply control unit, mirror adjustment switch, mirror adjustment changeover switch, exterior mirror heater button, fold-in mirror switch	91
9. Onboard supply control unit, control unit in dash panel insert, data bus diagnostic interface, self-diagnosis connection	92-110
005 - 6-speed automatic gearbox 09D	111-118
1. 6-speed automatic gearbox 09D	111

2. Automatic gearbox control unit, multifunction switch	112
3. Automatic gearbox control unit, gearbox oil temperature sender, gearbox input speed sender	113
4. Automatic gearbox control unit, Tiptronic switch	114
5. Automatic gearbox control unit, selector lever lock solenoid and selector lever position P	115
6. Automatic gearbox control unit, solenoid valve 1 - 6 and 9 - 10	116
7. Automatic gearbox control unit, Tiptronic switch in steering wheel, steering column electronics control unit, self-diagnosis connection	117
8. Control unit in dash panel insert, data bus diagnostic interface	118
006 - 2.5l diesel engine , BPD,BPE	119-135
1. 2.5l diesel engine , BPD,BPE	119
2. Starter, Alternator, Terminal 50 voltage supply relay, Terminal 30 wiring junction	120
3. Terminal 30 voltage supply relay, Fuse in relay plate fuse holder	121
4. Automatic glow period control unit	122
5. Engine control unit	123
6. Engine control unit, Unit injector valve, No. 1 cyl.	124
7. Intake air temperature sender, Exhaust gas recirculation potentiometer, Exhaust gas pressure sensor 1, Engine control unit	125
8. Lambda probe, Engine control unit, Intake manifold flap motor	126
9. Coolant temperature sender, Radiator outlet coolant temperature sender, Temperature sender after particulate filter, Engine control unit	127
10. Engine speed sender, Hall sender, Accelerator position sender, Accelerator position sender 2, Engine control unit	128
11. Clutch pedal switch, Air mass meter, Engine control unit	129
12. High-pressure sender, Radiator fan control unit, Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve	130
13. Fuel pump relay, Engine control unit, Radiator fan control unit 2, Air conditioner compressor regulating valve	131
14. Fuel cooling pump relay, Additional coolant pump relay, Engine control unit, Tank circuit pressurisation relay	132
15. Engine control unit, Residual heat relay, Circulation pump	133
16. Oil pressure switch, Oil level and oil temperature sender, Dash panel insert, Diagnostic connection, Fuel cooling pump	134
17. Fuel system pressurisation pump, Fuel pump, Coolant shortage indicator sender, Dash panel insert	135
007 - 3.0 l/165 kW - TDI, engine code BKS	136-152
1. 3.0 l/165 kW - TDI, engine code BKS	136
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	137
3. Terminal 30 voltage supply relay, fuses	138
4. Automatic glow period control unit, diesel direct injection system control unit, glow plugs 1-6	139
5. Diesel direct injection system control unit, radiator fan control unit, radiator fan control unit 2, radiator fan, radiator fan 2, alternator cut-in relay	140
6. Fuel pump relay, diesel direct injection system control unit, tank circuit pressurisation relay, air conditioning system compressor regulating valve	141
7. Charge air pressure sender, intake air temperature sender, exhaust gas pressure sensor 1, diesel direct injection system control unit, high pressure sender, additional coolant pump relay	142
8. Hall sender, diesel direct injection system control unit, throttle valve module, residual heat relay, circulation pump	143
9. Diesel direct injection system control unit, fuel pressure regulating valve, fuel metering valve, exhaust gas recirculation valve, fuel cooling pump relay	144
10. Engine speed sender, diesel direct injection system control unit, intake manifold flap motor, intake manifold flap 2 motor	145
11. Lambda probe, exhaust gas temperature sender 2 for cylinder bank 1, diesel direct injection system control unit, exhaust gas temperature sender 1, gearbox input speed sender, Lambda probe heater	146
12. Accelerator position sender, accelerator position sender 2, fuel pressure sender, diesel direct injection system control unit, injector, cylinder 1	147
13. Diesel direct injection system control unit, injectors 2-6	148
14. Coolant temperature sender, air mass meter, fuel temperature sender, radiator outlet coolant temperature sender, diesel direct injection system control unit	149
15. Diesel direct injection system control unit, clutch pedal switch	150
16. Oil pressure switch, oil level and oil temperature sender, control unit in dash panel insert, data bus diagnostic interface, fuel gauge, coolant temperature gauge, multifunction display, self-diagnosis connection	151
17. Fuel system pressurisation pump, fuel pump, coolant shortage indicator sender, fuel gauge sender	152
2. fuel gauge sender	

008 - 5.0l diesel engine , BLE	153-177
1. 5.0l diesel engine , BLE	153
2. Starter, Alternator, Battery parallel circuit relay, Terminal 30 wiring junction	154
3. Terminal 50 voltage supply relay, Voltage supply relay 1	155
4. Terminal 30 voltage supply relay, Terminal 30 voltage supply relay 2, Fuses in fuse holder	156
5. Automatic glow period control unit, Fuses in fuse holder	157
6. Automatic glow period control unit, Engine/motor control unit	158
7. Fuel temperature sender, Engine/motor control unit	159
8. Map-controlled engine cooling system thermostat, Oil level and oil temperature sender, Engine/motor control unit, Particulate filter additive pump, Intake manifold flap motor	160
9. Engine speed sender, Hall sender, Coolant temperature sender, Engine/motor control unit	161
10. Exhaust gas recirculation potentiometer, Exhaust gas pressure sensor 1, Engine/motor control unit, Exhaust gas recirculation valve	162
11. Intake air temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 3 for bank 2, Temperature sender before turbocharger, Engine/motor control unit	163
12. Lambda probe, Engine/motor control unit	164
13. Kickdown switch, Idling speed switch, Accelerator position sender, Engine/motor control unit	165
14. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	166
15. Fuel pump relay, Additional coolant pump relay, Engine/motor control unit, Tank circuit pressurisation relay	167
16. Fuel cooling pump relay, Engine/motor control unit, Turbocharger 1 control unit, Turbocharger 2 control unit, Fuel cooling pump	168
17. Engine/motor control unit 2, Air conditioner compressor regulating valve, Intake manifold flap 2 motor	169
18. Engine/motor control unit 2	170
19. Lambda probe 2, Air mass meter 2, Charge pressure sender 2, Engine/motor control unit 2	171
20. Exhaust gas temperature sender 1 for bank 2, Exhaust gas recirculation potentiometer 2, Temperature sender 2 before particulate filter, Temperature sender 2 before turbocharger, Engine/motor control unit 2	172
21. Exhaust gas pressure sensor 2, Engine/motor control unit 2, Exhaust gas recirculation cooler changeover valve 2	173
22. Engine/motor control unit 2, Unit injector valve, No. 6 cyl., Unit injector valve, No. 7 cyl., Unit injector valve, No. 8 cyl., Unit injector valve, No. 9 cyl., Unit injector valve, No. 10 cyl.	174
23. Automatic glow period relay 2, Engine/motor control unit 2, Glow plug 6, Glow plug 7, Glow plug 8, Glow plug 9, Glow plug 10	175
24. Oil pressure switch, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	176
25. Fuel system pressurisation pump, Fuel pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	177
009 - 3.6 l/206 kW - engine codes BHK and BHL	178-197
1. 3.6 l/206 kW - engine codes BHK and BHL	178
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	179
3. Fuses	180
4. Engine control unit, ignition coils 1-3 with output stage, spark plug, spark plug connector, Motronic current supply relay	181
5. Engine control unit, ignition coils 4-6 with output stage, spark plug, spark plug connector, Motronic current supply relay 2	182
6. Engine control unit, injector, cylinder 1-4, circulation pump, crankcase breather heater element	183
7. Engine control unit, throttle valve module, injector, cylinder 5 and 6, fuel pressure regulating valve	184
8. Engine control unit, alternator cut-in relay, air conditioning system compressor regulating valve	185
9. Engine control unit, inlet camshaft control valve 1, exhaust camshaft control valve 1, activated charcoal filter system solenoid valve 1, intake manifold flap valve	186
10. Engine control unit, fuel pressure sender, fuel pressure sender for low pressure, Hall sender, coolant temperature sender, Hall sender 2	187
11. Engine control unit, engine speed sender, knock sensors 1 and 2	188
12. Engine control unit, accelerator position sender, accelerator position sender 2	189
13. Engine control unit, clutch pedal switch, air mass meter	190
14. Engine control unit, Lambda probe, Lambda probe 2, Lambda probe heater, Lambda probe 2 heater	191
15. Engine control unit, additional coolant pump relay, Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Lambda probe 1 heater after catalytic converter, Lambda probe 2 heater after catalytic converter	192
16. Engine control unit, radiator outlet coolant temperature sender, residual heat relay	193
17. Engine control unit, fuel system diagnostic pump, radiator fan control unit 2, radiator fan 2	194
18. Engine control unit. radiator fan control unit. radiator fan. high-pressure sender	195

19. Dash panel insert, control unit in dash panel insert, fuel pump control unit, fuel gauge, coolant temperature gauge, fuel pump, fuel gauge sender	196
20. Control unit in dash panel insert, oil pressure switch, oil level and oil temperature sender, multifunction display, electronic power control fault lamp, self-diagnosis connection	197
010 - 4.2 l/257 kW FSI, engine code BAR	198-221
1. 4.2 l/257 kW FSI, engine code BAR	198
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction, terminal 30 wiring junction 2	199
3. Fuses	200
4. Engine control unit, Motronic current supply relay, ignition coils 1 to 3 with output stage, spark plug connector, spark plugs	201
5. Engine control unit, engine component current supply relay, ignition coils 4 to 6 with output stage, spark plug connector, spark plugs	202
6. Engine control unit, ignition coil 7 with output stage, ignition coil 8 with output stage, spark plug connector, spark plug	203
7. Engine control unit, map-controlled engine cooling system thermostat, inlet camshaft control valve 1 and 2, exhaust camshaft control valve 1 and 2	204
8. Engine control unit, knock sensor 1, knock sensor 2, intake manifold flap motor, variable intake manifold motor	205
9. Engine control unit, engine speed sender, knock sensors 3, knock sensors 4	206
10. Engine control unit, Hall sender, Hall sender 2, intake manifold flap potentiometer, intake manifold flap 2 potentiometer	207
11. Engine control unit, secondary air pump relay, coolant temperature sender, fuel pressure sender, fuel metering valve, secondary air pump motor	208
12. Engine control unit, injector, cylinder 1, injector, cylinder 2, injector, cylinder 6, injector, cylinder 8	209
13. Engine control unit, injector, cylinder 3, injector, cylinder 4, injector, cylinder 5, injector, cylinder 7	210
14. Engine control unit, air mass meter, air mass meter 2, activated charcoal filter system solenoid valve 1	211
15. Engine control unit, radiator outlet coolant temperature sender, brake servo pressure sensor, Hall sender 3	212
16. Engine control unit, throttle valve drive (electric power control), throttle valve drive angle sender 1 for electric throttle, Hall sender 4, throttle valve module	213
17. Engine control unit, accelerator position sender, accelerator position sender 2, alternator cut-in relay	214
18. Engine control unit, continued coolant circulation relay, residual heat relay, circulation pump	215
19. Engine control unit, Lambda probe, Lambda probe 2	216
20. Engine control unit, Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, brake servo relay, vacuum pump for brakes	217
21. Engine control unit, fuel system diagnostic pump, air conditioning system compressor regulating valve	218
22. Engine control unit, radiator fan control unit, radiator fan, radiator fan control unit 2, radiator fan 2	219
23. Control unit in dash panel insert, fuel pump control unit, fuel gauge sender, coolant shortage indicator sender, fuel gauge sender 2, fuel pump, multifunction display	220
24. Control unit in dash panel insert, oil pressure switch, oil level and oil temperature sender, buzzer and gong, electronic power control fault lamp, self-diagnosis connection	221
011 - 6.0 l - 331 kW engine code BJN	222-249
1. 6.0 l - 331 kW engine code BJN	222
2. Motronic current supply relay	223
3. Fuses	224
4. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	225
5. Engine control unit, ignition coil 1-3 with output stage, fuel pump relay, electric fuel pump 2 relay	226
6. Engine control unit, ignition coils 4-6 with output stage, spark plug connector, spark plug	227
7. Engine control unit, injectors for cylinders 1-6	228
8. Engine control unit, knock sensors 1 and 2, radiator outlet coolant temperature sender	229
9. Engine control unit, inlet camshaft control valve 1, exhaust camshaft control valve 1, alternator cut-in relay	230
10. Engine control unit, Lambda probe, Lambda probe 2, Lambda probe heater, Lambda probe 2 heater	231
11. Engine control unit, Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Lambda probe 1 and 2 heater after catalytic converter	232
12. Engine control unit, coolant temperature sender, engine speed sender, Hall sender, Hall sender 2	233
13. Engine control unit. air mass meter. accelerator position sender. intake air temperature sender.	234

brake servo pressure sensor	
14. Engine control unit, additional coolant pump relay, radiator fan control unit 2, radiator fan 2, continued coolant circulation pump, secondary air pump motor	235
15. Engine control unit, high-pressure sender, brake servo relay, vacuum pump for brakes	236
16. Engine control unit, throttle valve module, angle sender, secondary air pump relay, radiator fan, radiator fan control unit	237
17. Engine control unit, engine control unit 2	238
18. Engine control unit 2, ignition coils 7-9 with output stage, secondary air pump relay 2, secondary air pump motor 2	239
19. Engine control unit 2, spark plug connector, spark plug, ignition coils 10-12 with output stage	240
20. Engine control unit 2, injectors for cylinders 7-12	241
21. Engine control unit 2, knock sensors 3 and 4	242
22. Engine control unit 2, Lambda probe 3, Lambda probe 3 after catalytic converter, Lambda probe 3 heater, Lambda probe heater 3, after catalytic converter	243
23. Engine control unit 2, Lambda probe 4, Lambda probe 4 after catalytic converter, Lambda probe 4 heater, Lambda probe heater 4, after catalytic converter	244
24. Engine control unit 2, Hall sender 3 and 4, air mass meter 2, intake air temperature sender 2	245
25. Engine control unit 2, throttle valve drive 2, fuel system diagnostic pump, throttle valve module 2, angle sender 1 and 2 for throttle valve drive 2	246
26. Engine control unit 2, activated charcoal filter system solenoid valve 1, inlet camshaft control valve 2, air conditioner compressor regulating valve, exhaust camshaft control valve 2	247
27. Dash panel insert, control unit in dash panel insert, oil level and oil temperature sender, multifunction display	248
28. Control unit in dash panel insert, fuel system pressurisation pump, fuel pump, coolant shortage indicator sender, fuel gauge sender 2, fuel gauge, coolant temperature gauge, self-diagnosis connection	249
012 - 5.0 I/230 kW TDI - engine code BWF	250-272
1. 5.0 I/230 kW TDI - engine code BWF	250
2. Fuses, terminal 30 voltage supply relay	251
3. Terminal 30 voltage supply relay 2, second battery, battery parallel circuit relay	252
4. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	253
5. Battery, voltage supply relay 1, high-pressure sender, terminal 30 wiring junction 2, wiring connector	254
6. Automatic glow period control unit, glow plug 1-5, fuses	255
7. Engine control unit, unit injector valves for cylinders 1 - 5	256
8. Engine control unit, fuel temperature sender, map-controlled engine cooling system thermostat, intake manifold flap motor	257
9. Engine control unit, oil level and oil temperature sender, engine speed sender, Hall sender, coolant temperature sender	258
10. Engine control unit, exhaust gas pressure sensor 2, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	259
11. Engine control unit, exhaust gas temperature sender 1, temperature sender before particulate filter, radiator outlet coolant temperature sender	260
12. Engine control unit, charge air pressure sender, intake air temperature sender, lambda probe, lambda probe heater	261
13. Engine control unit, air mass meter, radiator fan control unit 2, exhaust gas recirculation cooler changeover valve, radiator fan 2	262
14. Engine control unit, radiator fan control unit, fuel pump relay, radiator fan, kickdown switch, idling speed switch, accelerator pedal position sender, metering pump for pilot injection in particulate filter of cylinder bank 1 and 2	263
15. Engine control unit, fuel cooling pump relay, additional coolant pump relay, turbocharger 1 control unit, fuel cooling pump, turbocharger 1 control motor	264
16. Engine control unit, engine control unit 2	265
17. Engine control unit 2, air conditioning system compressor regulating valve, intake manifold 2 flap motor, turbocharger 2 control motor, turbocharger 2 control unit	266
18. Engine control unit 2, exhaust gas temperature sender 1 for bank 2, unit injector valve of cylinder 6-10	267
19. Engine control unit 2, Lambda probe 2, air mass meter 2, charge air pressure sender 2, intake air temperature sender 2	268
20. Engine control unit 2, exhaust gas pressure sensor 1, exhaust gas recirculation potentiometer 2, temperature sender 2 before particulate filter, exhaust gas recirculation valve 2	269
21. Engine control unit 2, glow period control unit 2, glow plugs 6-10, exhaust gas recirculation cooler changeover valve 2	270
22. Control unit in dash panel insert, data bus diagnosis interface, fuel pump, fuel gauge sender 2, fuel gauge, warning lamp for glow period and diesel particulate filter, self-diagnosis connection	271

23. Dash panel insert, control unit in dash panel insert, oil pressure switch, fuel gauge sender, fuel system pressurisation pump, coolant low warning sender, buzzer and gong, multifunction display	272
013 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS), electronic stabilisation program (ESP), brake wear indicator, servotronic	273-279
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS), electronic stabilisation program (ESP), brake wear indicator, servotronic	273
2. ABS control unit, operating unit to regulate suspension height, TCS and ESP button	274
3. ABS control unit, speed sensor	275
4. ABS control unit, brake pressure solenoid trip switch, lateral acceleration sender, yaw rate sender, longitudinal acceleration sender, ESP sensor unit, self-diagnosis connection	276
5. ABS control unit, steering angle sender, parking brake contact switch, control unit in dash panel insert, data bus diagnostic interface	277
6. Control unit in dash panel insert, brake wear indicator, transfer box differential lock warning lamp, ESP and TCS warning lamp	278
7. Control unit in dash panel insert, brake wear indicator, ABS warning lamp, brake system warning lamp	279
014 - Transfer box (central differential, all-wheel drive), differential lock (lateral lock, rear axle drive)	280-286
1. Transfer box (central differential, all-wheel drive), differential lock (lateral lock, rear axle drive)	280
2. Transfer box control unit, longitudinal and transverse lock-up warning lamp, transfer box operating unit, switch illumination bulb	281
3. Transfer box control unit, engine temperature sender, oil temperature sender, transfer box motor	282
4. Transfer box control unit, idling speed switch, reversing switch	283
5. Transfer box control unit, dash panel insert, control unit in dash panel insert, data bus diagnosis interface, self-diagnosis connection	284
6. Axle differential lock control unit	285
7. Axle differential lock control unit, engine temperature sender, axle differential lock Hall senders 1 and 2, axle differential lock motor	286
015 - Airbag systems	287-294
1. Airbag systems	287
2. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	288
3. Key operated switch to deactivate front passenger side airbag, Seat occupied sensor, front passenger side, Airbag control unit, Front passenger side airbag deactivated warning lamp	289
4. Driver side belt switch, Battery master/isolator switch, Airbag control unit, Battery cut-off relay, Driver seat belt tensioner igniter 1, Driver seat belt inertia reel magnet	290
5. Front passenger side belt switch, Airbag control unit, Front passenger seat belt tensioner igniter 1, Front passenger side seat inertia reel magnet	291
6. Airbag control unit, Front passenger side airbag igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	292
7. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	293
8. Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit, Dash panel insert, Driver side airbag igniter, Driver side airbag igniter 2	294
016 - Adaptive suspension	295-301
1. Adaptive suspension	295
2. Operating unit to regulate suspension height, shock absorber damping adjustment button, off-road operation switch	296
3. Adaptive suspension control unit, compressor temperature sender for adaptive suspension, pressure sender for adaptive suspension, front left and front right suspension strut valve, rear left and rear right suspension strut valve	297
4. Adaptive suspension control unit, rear left and rear right vehicle level sender, front left and front right vehicle level sender	298
5. Adaptive suspension control unit, front left and front right shock absorber damper adjustment valve, rear left and rear right shock absorber damper adjustment valve	299
6. Adaptive suspension control unit, Front left and front right body acceleration sender, rear body acceleration sender, tyre pressure operating unit	300
7. Adaptive suspension control unit, dash panel insert, control unit in dash panel insert, data bus diagnostic interface	301
017 - CAN bus network	302-310
1. CAN bus network	302

2. Onboard supply control unit, control unit in dash panel insert, data bus diagnostic interface	303
3. Onboard supply control unit, dash panel insert, data bus diagnostic interface, self-diagnosis connection	304
4. Powertrain CAN bus	305
5. Convenience CAN bus	306
6. Convenience CAN bus	307
7. Convenience and infotainment CAN bus	308
8. Infotainment CAN bus	309
9. Diagnosis	310
018 - Supplementary coolant heater with preselection clock	311-316
1. Supplementary coolant heater with preselection clock	311
2. Onboard supply control unit, roof display unit, control unit in dash panel insert, data bus diagnostic interface, self-diagnosis connection	312
3. Heater control unit, metering pump, combustion air blower, glow plug with flame monitor, coolant temperature sender for heater, heater coolant shut-off valve	313
4. Heater control unit, remote control receiver for supplementary coolant heater, aerial	314
5. Residual heat relay	315
6. Circulation pump relay, circulation pump	316
019 - air conditioning system manual	317-324
1. air conditioning system manual	317
2. Air conditioning system control unit	318
3. Air conditioning system control unit, potentiometer for temperature flap control motor, potentiometer for defroster flap control motor	319
4. Air conditioning system control unit, evaporator output temperature sender, potentiometer for footwell vent control motor, potentiometer for front air distribution control motor, fresh air and air recirculation flap control motor	320
5. Air conditioning system control unit, air conditioning system relay, fresh air blower relay, 2nd speed, refrigerant temperature sender	321
6. Air conditioning system control unit, motor for front Bitron blower regulation, fresh air blower series resistor with overheating fuse	322
7. Residual heat relay	323
8. Circulation pump relay, circulation pump	324
020 - Climatronic 2-C	325-335
1. Climatronic 2-C	325
2. Climatronic control unit	326
3. Climatronic control unit, potentiometer for defroster flap control motor, potentiometer for right temperature flap control motor, defroster flap control motor, right temperature flap control motor	327
4. Climatronic control unit, potentiometer for left temperature flap control motor, potentiometer for side vent control motor, left temperature flap control motor, side vent control motor	328
5. Climatronic control unit, potentiometer for air recirculation flap control motor, potentiometer for centre vent control motor, centre vent control motor, fresh air and air recirculation flap control motor	329
6. Climatronic control unit, sunlight penetration photosensor 2, potentiometer for footwell vent control motor, footwell flap control motor	330
7. Climatronic control unit, refrigerant temperature sender	331
8. Climatronic control unit, fresh air intake duct temperature sensor, left and right footwell vent temperature sender, evaporator temperature sensor, front left and front right chest vent temperature sensor	332
9. Climatronic control unit, sender for front Bitron blower regulation, motor for front Bitron blower regulation	333
10. Residual heat relay, air quality sensor	334
11. Circulation pump relay, circulation pump	335
021 - Climatronic 4-C	336-353
1. Climatronic 4-C	336
2. Climatronic control unit	337
3. Climatronic control unit, potentiometer for defroster flap control motor, potentiometer for right footwell flap control motor, defroster flap control motor, right footwell flap control motor	338
4. Climatronic control unit, potentiometer for right temperature flap control motor, potentiometer for front right chest vent, right central vents control motor, right temperature flap control motor	339
5. Climatronic control unit, potentiometer for left footwell flap control motor, potentiometer for front right defroster and chest vent shut-off flap control motor, left footwell flap control motor	340
6. Climatronic control unit, potentiometer for left temperature flap control motor, potentiometer for front left defroster and chest vent shut-off flap control motor, left side vent control motor	341
7. Climatronic control unit, potentiometer for air recirculation flap control motor, potentiometer for front left chest vent, left centre vent control motor, fresh air and air recirculation flap control motor	342

8. Climatronic control unit, sunlight penetration photosensor 2, refrigerant temperature sender	343
9. Climatronic control unit, fresh air intake duct temperature sensor, left and right footwell vent temperature sender, evaporator temperature sensor, front left and front right chest vent temperature sensor	344
10. Climatronic control unit, sender for front Bitron blower regulation, motor for front Bitron blower regulation	345
11. Residual heat relay, air quality sensor	346
12. Circulation pump	347
13. Rear Climatronic operating and display unit, dash panel insert, control unit in dash panel insert, data bus diagnostic interface	348
14. Rear Climatronic operating and display unit, rear left temperature flap potentiometer, rear right temperature flap potentiometer, rear left and rear right temperature flap control motor	349
15. Rear Climatronic operating and display unit, potentiometer for rear left air quantity flap, potentiometer for rear right air quantity flap	350
16. Rear Climatronic operating and display unit, potentiometer for rear left chest vent, potentiometer for rear right chest vent	351
17. Operating and display unit for rear Climatronic, potentiometer for right and left B-pillar and footwell shut-off flap control motor	352
18. Rear Climatronic operating and display unit, rear vent temperature sender, motor for rear Bitron blower regulation	353
022 - Solar roof	354-357
1. Solar roof	354
2. Front blower Bitron regulation sender, Climatronic control unit, solar cell isolation relay	355
3. Solar cells, roof temperature sensor, motor for front Bitron blower regulation, sender for front Bitron blower regulation, solar operation control unit	356
4. Sunroof switch, sliding sunroof adjustment regulator, sliding sunroof adjustment control unit, onboard supply control unit, sliding sunroof motor	357
023 - 3.0l diesel engine , CASA,CASC	358-378
1. 3.0l diesel engine , CASA,CASC	358
2. Starter, Alternator, Entry and start authorisation control unit, Terminal 50 voltage supply relay, Terminal 30 wiring junction	359
3. Terminal 30 voltage supply relay, Fuse in relay plate fuse holder	360
4. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	361
5. Radiator fan control unit, Alternator cut-in relay, Onboard supply control unit, Engine control unit, Radiator fan control unit 2	362
6. High-pressure sender, Fuel pump relay, Engine control unit, Tank circuit pressurisation relay	363
7. Exhaust gas recirculation potentiometer, Engine control unit, Air conditioner compressor regulating valve	364
8. Intake air temperature sender, Exhaust gas pressure sensor 1, Engine control unit	365
9. Additional coolant pump relay, Engine control unit, Residual heat relay	366
10. Throttle valve module, Engine control unit, Relay for supplementary fuel pump, Fuel pressure regulating valve, Fuel metering valve, Supplementary fuel pump	367
11. Fuel cooling pump relay, Engine control unit, Exhaust gas recirculation cooler changeover valve, Fuel cooling pump, Pump for exhaust gas recirculation cooler	368
12. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	369
13. Engine speed sender, Engine control unit	370
14. Radiator outlet coolant temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine control unit	371
15. Position sender for charge pressure positioner, Engine control unit	372
16. Accelerator position sender, Gearbox input speed sender, Accelerator position sender 2, Fuel pressure sender, Engine control unit	373
17. Hall sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	374
18. Coolant temperature sender, Fuel temperature sender, Engine control unit, Injector, cylinder 5, Injector, cylinder 6	375
19. Clutch pedal switch, Air mass meter, Engine control unit	376
20. Fuel gauge sender, Coolant shortage indicator sender, Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	377
21. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	378
024 - Radio Delta (system 10-passive loudspeaker)	379-388
1. Radio Delta (system 10-passive loudspeaker)	379
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	380

3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	381
4. Radio, rear right bass loudspeaker, rear right mid-range and treble loudspeaker	382
5. Radio, rear left bass loudspeaker, front right treble loudspeaker, front right bass loudspeaker, rear left mid-range and treble loudspeaker, front right mid-range loudspeaker	383
6. Radio, front left treble loudspeaker, front left bass loudspeaker, CD changer, front left mid-range loudspeaker	384
7. Radio, CD changer, connection for external audio source	385
8. Radio, CD changer, digital satellite radio tuner	386
9. CD changer, satellite tuner aerial, digital satellite radio tuner	387
10. Aerial selection control unit, aerial, aerial amplifier, radio aerial 2, aerial amplifier 2	388
025 - Radio and navigation system RNS2 DVD (10-passive loudspeakers)	389-396
1. Radio and navigation system RNS2 DVD (10-passive loudspeakers)	389
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	390
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	391
4. Control unit with display for radio and navigation, rear right bass loudspeaker, rear right mid-range and treble loudspeaker	392
5. Control unit with display for radio and navigation, rear left bass loudspeaker and mid-range and treble loudspeaker, front right bass loudspeaker, aerials	393
6. Control unit with display for radio and navigation, front left treble loudspeaker, front left bass loudspeaker, CD changer, front left mid-range loudspeaker	394
7. Control unit with display for radio and navigation, CD changer, aerial, aerial amplifier, radio aerial 2, connection for external audio sources	395
8. Control unit with display for radio and navigation system, CD changer	396
026 - Delta radio system and "Volkswagen Sound Package" (8 channel)	397-408
1. Delta radio system and "Volkswagen Sound Package" (8 channel)	397
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	398
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	399
4. Radio, CD changer, connection for external audio source	400
5. Radio	401
6. Radio, CD changer, satellite digital radio tuner	402
7. CD changer, satellite tuner aerial, satellite digital radio tuner	403
8. Amplifier	404
9. Amplifier, front left and front right door loudspeakers	405
10. Amplifier, rear left and rear right loudspeakers	406
11. Amplifier, front left and front right loudspeakers	407
12. Aerial selection control unit, aerial, aerial amplifier, radio aerial 2	408
027 - Radio/navigation system RNS2 DVD with "Volkswagen Sound Package" (8 channel)	409-419
1. Radio/navigation system RNS2 DVD with "Volkswagen Sound Package" (8 channel)	409
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	410
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	411
4. Control unit with display for radio and navigation system, CD changer	412
5. Control unit with display for radio and navigation, CD changer, aerial, aerial amplifier, radio aerial 2, connection for external audio sources	413
6. Control unit with display for radio and navigation system, CD changer, telephone aerial, navigation system aerial	414
7. Control unit with display for radio and navigation system, CD changer, digital satellite radio tuner	415
8. Amplifier	416
9. Amplifier, front left and front right door loudspeakers	417
10. Amplifier, rear left and rear right loudspeakers	418
11. Amplifier, front left and front right loudspeakers, centre mid-range loudspeaker	419
028 - Delta radio system and "Dynaudio Sound Package" (10 channel)	420-431
1. Delta radio system and "Dynaudio Sound Package" (10 channel)	420
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	421

3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	422
4. Radio, CD changer, connection for external audio source	423
5. Radio	424
6. Radio, CD changer, digital satellite radio tuner	425
7. CD changer, satellite tuner aerial, digital satellite radio tuner	426
8. Amplifier	427
9. Amplifier, front left and front right door loudspeakers	428
10. Amplifier, rear left and rear right loudspeakers	429
11. Amplifier, front left and front right loudspeakers	430
12. Aerial selection control unit, aerial, aerial amplifier, radio aerial 2	431
029 - Radio/navigation system RNS2 DVD with "Digital Sound Package" (10 channel)	432-442
1. Radio/navigation system RNS2 DVD with "Digital Sound Package" (10 channel)	432
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	433
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	434
4. Control unit with display for radio and navigation system, CD changer	435
5. Control unit with display for radio and navigation, CD changer, aerial, aerial amplifier, radio aerial 2, connection for external audio sources	436
6. Control unit with display for radio and navigation system, CD changer, telephone aerial, navigation system aerial	437
7. Control unit with display for radio and navigation system, CD changer, satellite digital radio tuner	438
8. Amplifier	439
9. Amplifier, front left and front right door loudspeakers	440
10. Amplifier, rear left and rear right loudspeakers	441
11. Amplifier, front left and front right loudspeakers	442
030 - Preparation for mobile telephone	443-447
1. Preparation for mobile telephone	443
2. Multifunction buttons on right in steering wheel, airbag coil connector and return ring with slip ring, multifunction steering wheel control unit, steering column electronics control unit	444
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	445
4. Mobile telephone operating electronics control unit, telephone microphone, mobile telephone, telephone holder	446
5. Mobile telephone operating electronics control unit, telephone holder, control unit with display for radio and navigation, radio, aerial	447
031 - Telephone preparation Premium (Bluetooth)	448-452
1. Telephone preparation Premium (Bluetooth)	448
2. Multifunction buttons on right in steering wheel, airbag coil connector and return ring with slip ring, multifunction steering wheel control unit, steering column electronics control unit	449
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	450
4. Mobile telephone operating electronics control unit, telephone microphone, mobile telephone, telephone holder, aerial for Bluetooth	451
5. Mobile telephone operating electronics control unit, control unit with display for radio and navigation, radio, aerial	452
032 - Preparation for radio and navigation system (models for Japan)	453-456
1. Preparation for radio and navigation system (models for Japan)	453
2. Rear right bass loudspeaker, rear right mid-range and treble loudspeaker	454
3. Rear left bass loudspeaker, front right treble loudspeaker, front right bass loudspeaker, rear left mid-range and treble loudspeaker, front right mid-range loudspeaker, navigation system, telephone aerial	455
4. Front left treble loudspeaker, front left treble loudspeaker, front right mid-range loudspeaker, TV aerial 1 and 2, radio aerial 2, left and right aerial module	456
033 - TV tuner	457-461
1. TV tuner	457
2. Control unit in dash panel insert, data bus diagnostic interface, reversing camera system control unit, TV tuner	458
3. Control unit with display for radio and navigation system, TV tuner	459
4. Control unit with display for radio and navigation system, TV tuner	460
5. TV tuner, aerial, aerial amplifier, radio aerial 2, aerial amplifier 2, TV card reader	461
034 - Lane change assist	462-467
1. Lane change assist	462

2. Lane change assist control unit	463
3. Lane change assist control unit 2, lane change assist warning lamp in driver side exterior mirror, lane change assist warning lamp in front passenger side exterior mirror	464
4. Steering column electronics control unit, dash panel insert, control unit in dash panel insert, data bus diagnostic interface, multifunction display, button for driver assistance systems, turn signal switch	465
5. Control unit with display for radio and navigation, wiper motor control unit, radio	466
6. Control units	467
035 - Seat heating, driver and front passenger side seat heating	468-474
1. Seat heating, driver and front passenger side seat heating	468
2. Heated front seat control unit, driver seat temperature sensor, driver seat side support heater, heated driver seat, heated driver seat backrest, driver seat backrest side support heater	469
3. Heated front seats control unit, heated driver seat regulator, heated front passenger seat regulator, seat heating switch illumination bulb, onboard supply control unit	470
4. Heated front seat control unit, front passenger seat temperature sensor, front passenger seat side support heater, heated front passenger seat, heated front passenger seat backrest, onboard supply control unit	471
5. Heated backrest control unit, rear left seat temperature sensor, heated rear left seat, heated rear left seat backrest	472
6. Control unit for heated rear seats, heated rear left seat switch with regulator, seat heating switch illumination bulb, onboard supply control unit	473
7. Heated backrest control unit, heated rear right seat switch with regulator, seat heating switch illumination bulb, rear right seat temperature sensor, heated bench seat cushion for rear right seat	474
036 - Driver and front passenger seat adjustment without memory function, driver side for USA, mechanical adjustment on front passenger side for USA	475-479
1. Driver and front passenger seat adjustment without memory function, driver side for USA, mechanical adjustment on front passenger side for USA	475
2. Driver seat backrest adjustment switch, driver seat rake adjustment switch, driver side height adjustment switch, driver seat backrest adjustment and height adjustment motors, driver seat rake adjustment motor	476
3. Driver seat adjustment operating unit, lumbar support height adjustment and longitudinal adjustment button, driver seat longitudinal adjustment switch, driver seat lumbar support height adjustment and longitudinal adjustment motors	477
4. Front passenger seat adjustment operating unit, front passenger seat backrest and height adjustment switch, front passenger seat backrest adjustment button, front passenger seat backrest and height adjustment motors	478
5. Front passenger seat adjustment operating unit, front passenger seat lumbar support height adjustment and longitudinal adjustment motors, lumbar support height adjustment and longitudinal adjustment button	479
037 - reversing camera	480-485
1. reversing camera	480
2. Control unit in dash panel insert, data bus diagnostic interface, reversing camera system control unit	481
3. Control unit for reversing camera system, TV tuner	482
4. Reversing camera system control unit, TV tuner, reversing camera	483
5. Reversing camera system control unit, control unit with display for radio and navigation	484
6. Reversing camera system control unit, control unit with display for radio and navigation	485
038 - Electrically lockable spare wheel	486-489
1. Electrically lockable spare wheel	486
2. Convenience system central control unit, spare wheel lock motor, spare wheel release button	487
3. Convenience system central control unit, left number plate light , right number plate light, self-diagnosis connection	488
4. Convenience system central control unit	489
039 - Tyre pressure monitor	490-492
1. Tyre pressure monitor	490
2. Tyre pressure monitor control unit, tyre pressure monitor sender unit in wheel housing, front left and front right tyre pressure sensor, rear left rear right tyre pressure sensor	491
3. Tyre pressure monitor control unit, tyre pressure monitor aerial, control unit in dash panel insert, self-diagnosis connection	492
040 - Adaptive cruise control ACC	493-497
1. Adaptive cruise control ACC	493
2. sensor for automatic distance control, dash panel insert, control unit in dash panel insert, data bus diagnostic interface, multifunction display	494
3. Steering column electronics control unit, button for lane change assist, button for driver assistant system	495
4. Multifunction buttons on left in steering wheel. multifunction steering wheel control unit.	496

steering column electronics control unit	
5. Multifunction buttons on left and right in steering wheel, airbag coil connector and return ring with slip ring, multifunction steering wheel control unit, steering column electronics control unit	497
041 - Camera and display system in mirror, Japan	498-499
1. Camera and display system in mirror, Japan	498
2. Camera in exterior mirror, automatic anti-dazzle interior mirror	499
042 - Seat adjustment with memory function, driver side	500-506
1. Seat adjustment with memory function, driver side	500
2. Driver seat adjustment control unit, driver seat memory operating unit, lumbar support height adjustment and longitudinal adjustment button, seat longitudinal adjustment button, seat height adjustment button	501
3. Driver seat adjustment control unit, driver seat operating unit with memory function, seat position button with memory setting 1-4, seat belt height adjustment button, tilt angle adjustment button, backrest adjustment button	502
4. Driver seat position control unit, longitudinal adjustment and height adjustment sender for driver seat, rake adjustment sender for driver seat, driver seat longitudinal adjustment and height adjustment motor	503
5. Driver seat adjustment control unit, backrest adjustment sender for driver seat, lumbar support height adjustment and longitudinal adjustment sender, driver seat lumbar support height adjustment and longitudinal adjustment motor	504
6. Front passenger seat adjustment operating unit, front passenger seat backrest and height adjustment switch, front passenger seat backrest and height adjustment motor	505
7. Front passenger seat adjustment operating unit, buttons and motors for height and longitudinal adjustment of front passenger seat lumbar support, switches and motor for longitudinal adjustment of front passenger seat	506
043 - Seat adjustment with memory, driver and front passenger side	507-519
1. Seat adjustment with memory, driver and front passenger side	507
2. Seat and steering column adjustment control unit with memory, driver seat memory operating unit, lumbar support height adjustment and longitudinal adjustment button, seat longitudinal adjustment button	508
3. Seat and steering column adjustment control unit with memory, driver seat memory operating unit, seat memory position button 1-4, seat belt height adjustment button, rake adjustment button	509
4. Seat and steering column adjustment control unit with memory, longitudinal adjustment and height adjustment sender for driver seat, rake adjustment sender for driver seat, driver seat longitudinal adjustment and height adjustment motor	510
5. Seat and steering column adjustment control unit with memory, backrest adjustment sender and motor for driver seat, lumbar support height adjustment and longitudinal adjustment sender and motors	511
6. Seat and steering column adjustment control unit with memory, steering column vertical adjustment sender and motor, steering column axial adjustment sender and motor, seat belt height adjustment potentiometer and motor	512
7. Seat and steering column adjustment control unit with memory	513
8. Front passenger seat adjustment with memory control unit, front passenger seat memory operating unit, lumbar support height adjustment and longitudinal adjustment button, seat longitudinal adjustment button, seat height adjustment button	514
9. Front passenger seat adjustment with memory control unit, front passenger seat memory operating unit, seat memory position button 1-4, seat belt height adjustment button, rake adjustment button	515
10. Front passenger seat adjustment with memory control unit, front passenger seat longitudinal adjustment sender and motor, front passenger seat height adjustment sender and motor	516
11. Front passenger seat adjustment with memory control unit, front passenger seat rake adjustment sender and motor, lumbar support longitudinal adjustment sender and motor	517
12. Front passenger seat adjustment with memory control unit, front passenger seat backrest adjustment sender and motor, motor and potentiometer for seat belt height adjustment, lumbar support height adjustment sender and motor	518
13. Front passenger seat adjustment with memory control unit	519
044 - Windscreen wash/wipe system	520-526
1. Windscreen wash/wipe system	520
2. Steering column electronics control unit, windscreen wiper switch, intermittent wiper switch, rear wiper switch, intermittent wipe regulator	521
3. Onboard supply control unit, steering column electronics control unit, dash panel insert, control unit in dash panel insert, multifunction display, washer fluid level sender, self-diagnosis connection	522
4. Wiper motor control unit, control unit with display for radio and navigation, onboard supply control unit, radio, windscreen wiper motor	523
5. Rain and light sensor, onboard supply control unit, windscreen and rear window washer pump	524
6. Convenience system central control unit. onboard supply control unit. rear window wiper motor	525

7. Headlight washer system relay, headlight washer system pump, left and right washer jet heater element	526
045 - Parking aid (PDC)	527-534
1. Parking aid (PDC)	527
2. Parking aid control unit, front left parking aid sender	528
3. Parking aid control unit, front right parking aid sender	529
4. Parking aid control unit, rear right parking aid sender	530
5. Parking aid control unit, rear left parking aid sender	531
6. Parking aid control unit, front left parking aid display, front right parking aid display, rear parking aid display	532
7. Parking aid control unit, parking aid loudspeaker, parking aid button, parking aid switch illumination bulb	533
8. Parking aid control unit, onboard supply control unit, control unit in dash panel insert, data bus diagnostic interface, self-diagnosis connection	534
046 - Trailer towing coupling (WESTFALIA)	535-539
1. Trailer towing coupling (WESTFALIA)	535
2. Trailer detector control unit, trailer coupling motor Hall sender, electric socket for trailer coupling, hinged tow attachment ball head motor	536
3. Trailer detector control unit	537
4. Trailer detector control unit, electric hinged tow coupling attachment button, extending tow ball coupling warning lamp, retracting tow ball coupling warning lamp, button illumination bulb	538
5. Trailer detector control unit, onboard supply control unit, control unit in dash panel insert, data bus diagnostic interface, multifunction display, self-diagnosis connection	539
047 - Steering column adjustment	540-542
1. Steering column adjustment	540
2. Steering column adjustment switch, steering column and belt height adjustment control unit, steering column electronics control unit	541
3. Steering column and belt height adjustment control unit, steering column vertical adjustment motor, steering column axial adjustment motor	542
048 - Garage door opener	543-544
1. Garage door opener	543
2. Garage door opener button 1, garage door opener button 2, garage door opener button 3, onboard supply control unit, garage door operation control unit, garage door operating unit	544
049 - Windscreen heater	545-546
1. Windscreen heater	545
2. Heated windscreen relay for left and right side, heated windscreen	546
050 - Entry and start authorisation (Kessy)	547-555
1. Entry and start authorisation (Kessy)	547
2. Entry and start authorisation control unit, terminal 15 voltage supply relay, self-diagnosis connection	548
3. Entry and start authorisation control unit, steering column lock control element	549
4. Control unit for access and start authorisation, onboard supply control unit, immobiliser reading unit, switch for access and start authorisation, solenoid for ignition key withdrawal lock	550
5. Control unit for access and start authorisation, button for access and start authorisation, clutch pedal switch for engine start	551
6. Entry and start authorisation control unit, driver door exterior handle touch sensor, rear left door exterior handle touch sensor, driver side aerial for entry and start authorisation	552
7. Entry and start authorisation control unit, front passenger door exterior handle touch sensor, rear right door exterior handle touch sensor, front passenger side aerial for entry and start authorisation	553
8. Entry and start authorisation control unit, aerial for remote control, central locking and anti-theft alarm system aerial, aerial amplifier 4	554
9. Entry and start authorisation control unit, control unit in dash panel insert, data bus diagnostic interface	555
051 - Multifunction steering wheel	556-562
1. Multifunction steering wheel	556
2. Dash panel insert, control unit in dash panel insert, steering column electronics control unit, data bus diagnostic interface, multifunction display, self-diagnosis connection	557
3. Steering column adjustment switch, Tiptronic switch in steering wheel, automatic gearbox control unit, steering column electronics control unit	558
4. Steering column electronics control unit, multifunction buttons on left in steering wheel, multifunction steering wheel control unit, turn signal switch, button for lane change assist, button for driver assistance systems	559
5. Multifunction buttons on left and right in steering wheel, airbag coil connector and return ring with slip ring, multifunction steering wheel control unit, steering column electronics control unit	560
6. Multifunction buttons on right in steering wheel. multifunction steering wheel control unit.	561

steering column electronics control unit	
7. Airbag coil connector and return ring with slip ring, multifunction steering wheel control unit, steering column electronics control unit, heated steering wheel	562
052 - Gas discharge headlights (Bi/Xenon), gas discharge headlights with automatic - dynamic headlight range control and cornering light (Bi-Xenon)	563-568
1. Gas discharge headlights (Bi/Xenon), gas discharge headlights with automatic - dynamic headlight range control and cornering light (Bi-Xenon)	563
2. Left headlight, left gas discharge bulb control unit, power output module for left headlight, left gas discharge bulb, left dynamic cornering light control motor	564
3. Right headlight, right gas discharge bulb control unit, power output module for right headlight, right gas discharge bulb, right dynamic cornering light control motor	565
4. Cornering light and headlight range control unit, rear left vehicle level sender, front left vehicle level sender	566
5. Cornering light and headlight range control unit, steering angle sender, steering column electronics control unit	567
6. Light switch, switches and instruments illumination regulator, rear fog light button, fog light button	568
053 - Compass module	569-571
1. Compass module	569
2. Control unit in dash panel insert, data bus diagnostic interface, vehicle position recognition control unit, self-diagnosis connection	570
3. Vehicle position recognition control unit, roof display unit	571
054 - Servotronic	572-573
1. Servotronic	572
2. Servotronic control unit, Servotronic solenoid valve	573
055 - Rear lid, electric	574-576
1. Rear lid, electric	574
2. Rear lid control unit, rear lid closed switch	575
3. Rear lid control unit, rear lid angle sender, rear lid hydraulics motor	576
056 - Power latching system, rear lid	577-580
1. Power latching system, rear lid	577
2. Convenience system central control unit, rear lid handle release button, rear lid lock unit, rear lid release motor	578
3. Convenience system central control unit	579
4. Convenience system central control unit, button to close rear lid in luggage compartment, power latching motor, power latching system relay, self-diagnosis connection	580
057 - Sockets (12V) and cigarette lighter	581-583
1. Sockets (12V) and cigarette lighter	581
2. Relay for power sockets, cigarette lighter, rear cigarette lighter, cigarette lighter illumination bulb	582
3. Onboard supply control unit, 12 V sockets, cigarette lighter illumination bulb, socket illumination bulb	583
058 - Electric socket, 150 Volt, electric socket, 230 Volt	584-585
1. Electric socket, 150 Volt, electric socket, 230 Volt	584
2. Onboard supply control unit, AC/DC converter with socket, 12 V - 115 V, AC/DC converter with socket, 12 V - 230 V	585
059 - Sliding/tilting sunroof	586-587
1. Sliding/tilting sunroof	586
2. Sunroof switch, sliding sunroof adjustment regulator, sliding sunroof adjustment control unit, sliding sunroof motor, sliding sunroof switch illumination bulb	587
060 - Radio/navigation system RNS 500/510 Midline (10 passive loudspeakers)	588-594
1. Radio/navigation system RNS 500/510 Midline (10 passive loudspeakers)	588
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	589
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	590
4. Control unit with display for TV, radio and navigation, rear right bass loudspeaker, rear right mid-range loudspeaker	591
5. Control unit with display for TV, radio and navigation, rear left bass loudspeaker and mid-range loudspeaker, front right bass loudspeaker, aerials	592
6. Control unit with display for TV, radio and navigation, front left treble loudspeaker, front left bass loudspeaker, CD changer, front left mid-range loudspeaker	593
7. Control unit with display for TV, radio and navigation, CD changer, aerial, aerial amplifier, radio aerial 2, connection for external audio sources, digital radio aerial	594
061 - Radio-navigation system (Japan)	595-603

1. Radio-navigation system (Japan)	595
2. Multifunction buttons on right in steering wheel, airbag coil connector and return ring with slip ring, multifunction steering wheel control unit, steering column electronics control unit	596
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	597
4. Control unit with display for radio and navigation, rear right bass loudspeaker, rear right mid-range and treble loudspeaker	598
5. Control unit with display for radio and navigation, rear left bass loudspeaker and mid-range and treble loudspeaker, front right bass loudspeaker, telephone aerial	599
6. Control unit with display for radio and navigation, front left treble loudspeaker, front left bass loudspeaker, CD changer, front left mid-range loudspeaker	600
7. Control unit with display for radio and navigation system, aerial selection control unit, CD changer	601
8. Aerial selection control unit, aerial , TV aerial 1 and 2, TV aerial amplifier 1 and 2, radio aerial 2, left and right aerial module	602
9. Control unit with display for TV, radio, navigation system, chip card reader control unit, traffic data aerial	603
062 - Sockets (12V) and cigarette lighter	604-607
1. Sockets (12V) and cigarette lighter	604
2. Cigarette lighter illumination bulb, cigarette lighter, rear cigarette lighter	605
3. 12 V socket 2, 12 V socket 4, socket illumination bulb	606
4. Onboard supply control unit, 12 V socket, 12 V socket 3, socket illumination bulb	607
063 - Airbag systems (US equipment)	608-616
1. Airbag systems (US equipment)	608
2. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	609
3. Pressure sensor for seat occupied recognition, Seat belt force sensor for seat occupied recognition, Airbag control unit, Seat occupied recognition control unit	610
4. Battery master/isolator switch, Airbag control unit, Battery cut-off relay, Front passenger side airbag deactivated warning lamp	611
5. Driver side belt switch, Airbag control unit, Driver seat belt tensioner igniter 1, Driver seat belt inertia reel magnet	612
6. Front passenger side belt switch, Airbag control unit, Front passenger seat belt tensioner igniter 1, Front passenger side seat inertia reel magnet	613
7. Airbag control unit, Front passenger side airbag igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	614
8. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	615
9. Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit, Dash panel insert, Driver side airbag igniter, Driver side airbag igniter 2	616
064 - Radio/navigation system RNS 500/510 Midline with "Volkswagen Sound Package" (8 channel)	617-626
1. Radio/navigation system RNS 500/510 Midline with "Volkswagen Sound Package" (8 channel)	617
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	618
3. Steering column electronics control unit, control unit in dash panel insert, data bus diagnostic interface, onboard supply control unit, self-diagnosis connection	619
4. Control unit with display for TV, radio and navigation system, CD changer	620
5. Control unit with display for TV, radio and navigation, CD changer, aerial, aerial amplifier, radio aerial 2, connection for external audio sources, digital radio aerial	621
6. Control unit with display for TV, radio navigation, telephone microphone, navigation system aerial, telephone aerial	622
7. Amplifier	623
8. Amplifier, front left and front right door loudspeakers	624
9. Amplifier, rear left and rear right loudspeakers	625
10. Amplifier, front left and front right loudspeakers, centre mid-range loudspeaker	626
065 - Radio/navigation system RNS 500/510 Midline with "Digital Sound Package" (10 channel)	627-636
1. Radio/navigation system RNS 500/510 Midline with "Digital Sound Package" (10 channel)	627
2. Multifunction buttons on right in steering wheel, multifunction steering wheel control unit, steering column electronics control unit, increase volume button, airbag coil connector and return ring with slip ring	628
3. Steering column electronics control unit. control unit in dash panel insert. data bus diagnostic	629

interface, onboard supply control unit, self-diagnosis connection	
4. Control unit with display for TV, radio and navigation system, CD changer	630
5. Control unit with display for TV, radio and navigation, CD changer, aerial, aerial amplifier, radio aerial 2, connection for external audio sources, digital radio aerial	631
6. Control unit with display for TV, radio navigation, telephone microphone, navigation system aerial, telephone aerial	632
7. Amplifier	633
8. Amplifier, front left and front right door loudspeakers	634
9. Amplifier, rear left and rear right loudspeakers	635
10. Amplifier, front left and front right loudspeakers	636
066 - 5.0 l / 251 kW TDI, engine code CBWA	637-659
1. 5.0 l / 251 kW TDI, engine code CBWA	637
2. Fuses, terminal 30 voltage supply relay	638
3. Terminal 30 voltage supply relay 2, second battery, battery parallel circuit relay	639
4. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	640
5. Voltage supply relay 1, high-pressure sender, terminal 30 wiring junction 2, wiring connector	641
6. Automatic glow period control unit, glow plug 1-5, fuses	642
7. Engine control unit, unit injector valves for cylinders 1 - 5	643
8. Engine control unit, fuel temperature sender, map-controlled engine cooling system thermostat, particulate filter additive pump, intake manifold flap motor	644
9. Engine control unit, oil level and oil temperature sender, engine speed sender, Hall sender, coolant temperature sender	645
10. Engine control unit, exhaust gas pressure sensor 2, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	646
11. Engine control unit, temperature sender, fuel additive tank sender, exhaust gas temperature sender 1, temperature sender before particulate filter, radiator outlet coolant temperature sender, empty fuel additive sender	647
12. Engine control unit, charge air pressure sender, intake air temperature sender, Lambda probe	648
13. Engine control unit, air mass meter, radiator fan control unit 2, exhaust gas recirculation cooler changeover valve, radiator fan 2	649
14. Engine control unit, radiator fan control unit, fuel pump relay, tank circuit pressurisation relay, radiator fan, kickdown switch, idling speed switch, accelerator position sender	650
15. Engine control unit, fuel cooling pump relay, additional coolant pump relay, turbocharger 1 control unit, fuel cooling pump, turbocharger 1 control motor	651
16. Engine control unit, engine control unit 2	652
17. Engine control unit 2, air conditioning system compressor regulating valve, intake manifold 2 flap motor, turbocharger 2 control motor, turbocharger 2 control unit	653
18. Engine control unit 2, bank 1 exhaust gas temperature sender 2, unit injector valve, No. 6-10 cyl.	654
19. Engine control unit 2, Lambda probe 2, air mass meter 2, charge air pressure sender 2, intake air temperature sender 2	655
20. Engine control unit 2, exhaust gas pressure sensor 1, exhaust gas recirculation potentiometer 2, temperature sender 2 before particulate filter, exhaust gas recirculation valve 2	656
21. Engine control unit 2, glow period control unit 2, glow plugs 6-10, exhaust gas recirculation cooler changeover valves 2	657
22. Dash panel insert, data bus diagnostic interface, fuel pump, fuel gauge, glow period and diesel particulate filter warning lamp, self-diagnosis connection	658
23. Dash panel insert, oil pressure switch, fuel gauge sender, fuel system pressurisation pump, coolant low warning, buzzer and gong, multifunction display	659
067 - Illuminated entry moulding	660-661
1. Illuminated entry moulding	660
2. Front left and right entry mouldings	661
068 - 3.0l diesel engine , CASB	662-682
1. 3.0l diesel engine , CASB	662
2. Starter, Alternator, Entry and start authorisation control unit, Terminal 50 voltage supply relay, Terminal 30 wiring junction	663
3. Terminal 30 voltage supply relay, Fuse in relay plate fuse holder	664
4. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	665
5. Radiator fan control unit, Alternator cut-in relay, Onboard supply control unit, Engine control unit, Radiator fan control unit 2	666
6. High-pressure sender, Fuel pump relay, Engine control unit, Tank circuit pressurisation relay	667
7. Exhaust gas recirculation potentiometer, Engine control unit, Air conditioner compressor regulating valve	668
8. Intake air temperature sender. Exhaust gas pressure sensor 1. Engine control unit	669

9. Additional coolant pump relay, Engine control unit, Residual heat relay	670
10. Throttle valve module, Engine control unit, Relay for supplementary fuel pump, Fuel pressure regulating valve, Fuel metering valve, Supplementary fuel pump	671
11. Fuel cooling pump relay, Engine control unit, Exhaust gas recirculation cooler changeover valve, Fuel cooling pump, Pump for exhaust gas recirculation cooler	672
12. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	673
13. Engine speed sender, Engine control unit	674
14. Radiator outlet coolant temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine control unit	675
15. Position sender for charge pressure positioner, Engine control unit	676
16. Accelerator position sender, Gearbox input speed sender, Accelerator position sender 2, Fuel pressure sender, Engine control unit	677
17. Hall sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	678
18. Coolant temperature sender, Fuel temperature sender, Engine control unit, Injector, cylinder 5, Injector, cylinder 6	679
19. Clutch pedal switch, Air mass meter, Engine control unit	680
20. Fuel gauge sender, Coolant shortage indicator sender, Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	681
21. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	682
069 - 3.6 l/206 kW - engine codes BHK and BHL	683-702
1. 3.6 l/206 kW - engine codes BHK and BHL	683
2. Starter, alternator, voltage regulator, terminal 50 voltage supply relay, terminal 30 wiring junction	684
3. Fuses	685
4. Engine control unit, ignition coils 1-3 with output stage, spark plug, spark plug connector, Motronic current supply relay	686
5. Engine control unit, ignition coils 4-6 with output stage, spark plugs, spark plug connectors	687
6. Engine control unit, injector, cylinder 1-4, circulation pump, crankcase breather heater element	688
7. Engine control unit, throttle valve module, injector, cylinder 5 and 6, fuel pressure regulating valve	689
8. Engine control unit, alternator cut-in relay, air conditioning system compressor regulating valve	690
9. Engine control unit, inlet camshaft control valve 1, exhaust camshaft control valve 1, activated charcoal filter system solenoid valve 1, intake manifold flap valve	691
10. Engine control unit, fuel pressure sender, fuel pressure sender for low pressure, Hall sender, coolant temperature sender, Hall sender 2	692
11. Engine control unit, engine speed sender, knock sensors 1 and 2	693
12. Engine control unit, accelerator position sender, accelerator position sender 2	694
13. Engine control unit, clutch pedal switch, air mass meter	695
14. Engine control unit, Lambda probe, Lambda probe 2, Lambda probe heater, Lambda probe 2 heater	696
15. Engine control unit, additional coolant pump relay, Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Lambda probe 1 heater after catalytic converter, Lambda probe 2 heater after catalytic converter	697
16. Engine control unit, radiator outlet coolant temperature sender, residual heat relay	698
17. Engine control unit, fuel system diagnostic pump, radiator fan control unit 2, radiator fan 2	699
18. Engine control unit, radiator fan control unit, radiator fan, high-pressure sender	700
19. Dash panel insert, control unit in dash panel insert, fuel pump control unit, fuel gauge, coolant temperature gauge, fuel pump, fuel gauge sender	701
20. Control unit in dash panel insert, oil pressure switch, oil level and oil temperature sender, multifunction display, electronic power control fault lamp, self-diagnosis connection	702
070 - 3.0l diesel engine , CATA	703-728
1. 3.0l diesel engine , CATA	703
2. Starter, Alternator, Voltage regulator, Entry and start authorisation control unit, Terminal 50 voltage supply relay, Terminal 30 wiring junction	704
3. Terminal 30 voltage supply relay, Fuses in fuse holder	705
4. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3	706
5. Cylinder 5 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 4, Glow plug 5, Glow plug 6	707
6. Radiator fan control unit, Alternator cut-in relay, Onboard supply control unit, Engine/motor control unit, Radiator fan control unit 2, Radiator fan, Radiator fan 2	708
7. High-pressure sender, Fuel pump relay, Electric fuel pump 2 relay, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Supplementary fuel pump	709
8. Exhaust gas recirculation potentiometer, Low heat output relay, High heat output relay, Engine/motor control unit. Exhaust gas recirculation valve. Air conditioner compressor regulating	710

valve	
9. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Additional coolant pump relay, Engine/motor control unit	711
10. Throttle valve module, Engine/motor control unit, Residual heat relay	712
11. Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent tank (heater circuit 1)	713
12. Reducing agent level sender, Evaluation unit for reducing agent level, Engine/motor control unit, Pump for reducing agent, Heater for reducing agent pump (heater circuit 2)	714
13. Engine/motor control unit, Control unit for charge air cooler bypass, Reversing valve for reducing agent, Heater for reducing agent line (heater circuit 2)	715
14. Fuel cooling pump relay, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooler changeover valve 2, Valve for oil pressure control, Fuel cooling pump, Pump for exhaust gas recirculation cooler	716
15. Engine speed sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine/motor control unit, Intake manifold flap motor, Intake manifold flap 2 motor	717
16. Catalytic converter temperature sensor 1, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	718
17. Lambda probe, Position sender for charge pressure positioner, Engine/motor control unit, Turbocharger 1 control unit, Turbocharger 1 control motor, Lambda probe heater	719
18. Hall sender, Accelerator position sender, Accelerator position sender 2, Fuel pressure sender, Engine/motor control unit	720
19. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	721
20. Charge pressure sender, Intake air temperature sender, Fuel temperature sender, Engine/motor control unit, Injector, cylinder 6	722
21. Air mass meter, Engine/motor control unit, Injector for reducing agent	723
22. NOx sender, Control unit for NOx sender, Engine/motor control unit	724
23. NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2	725
24. Steering column electronics control unit, Engine/motor control unit	726
25. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	727
26. Fuel gauge sender, Coolant shortage indicator sender, Fuel gauge sender 2, Control unit in dash panel insert, Dash panel insert, Glow period warning lamp, Electronic power control fault lamp, Diesel particulate filter warning lamp, Fuel pump 1	728
071 - Multimedia system	729-735
1. Multimedia system	729
2. Voltage monitoring relay, fuses	730
3. Roof display unit, voltage monitoring relay, DVD player, digital TV tuner	731
4. TV tuner, digital TV tuner	732
5. TV aerial, TV aerial amplifier, digital TV tuner	733
6. Control unit with display for radio and navigation system, TV tuner	734
7. TV tuner	735
072 - Multimedia socket MEDIA-IN	736-737
1. Multimedia socket MEDIA-IN	736
2. Data bus diagnostic interface, Multimedia system control unit, Radio, USB connection retainer, Connection for external audio sources	737
073 - 4.2l petrol engine , BAR	738-761
1. 4.2l petrol engine , BAR	738
2. Starter, Alternator, Terminal 50 voltage supply relay, Terminal 30 wiring junction, Terminal 30 wiring junction 2	739
3. Fuse in relay plate fuse holder	740
4. Main relay, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	741
5. Engine control unit, Engine component current supply relay, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug 4, Spark plug 5, Spark plug 6	742
6. Engine control unit, Ignition coil 7 with output stage, Ignition coil 8 with output stage, Spark plug 7, Spark plug 8	743
7. Map-controlled engine cooling system thermostat, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2	744
8. Knock sensor 1, Knock sensor 2, Alternator cut-in relay, Onboard supply control unit, Engine control unit, Intake manifold flap valve, Intake manifold flap valve 2	745
9. Engine speed sender. Knock sensor 3. Knock sensor 4. Engine control unit	746

10. Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	747
11. Secondary air pump relay, Engine control unit	748
12. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6, Injector, cylinder 8	749
13. Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 7	750
14. Air mass meter, Radiator outlet coolant temperature sender, Air mass meter 2, Brake servo pressure sensor, Engine control unit	751
15. Hall sender 3, Fuel pressure sender for low-pressure, Sender 1 for secondary air pressure, Engine control unit	752
16. Hall sender 4, Throttle valve module, Engine control unit	753
17. Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuse 26 on fuse holder B	754
18. Continued coolant circulation relay, Engine control unit, Residual heat relay, Fuse 2 on fuse holder B, Circulation pump	755
19. Lambda probe, Lambda probe 2, Engine control unit	756
20. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Brake servo relay, Engine control unit, Vacuum pump for brakes	757
21. Engine control unit, Fuel system diagnostic pump	758
22. Radiator fan control unit, Engine control unit, Radiator fan control unit 2, Radiator fan 2, Connection 3 (powertrain CAN bus, high), in main wiring harness, Connection 3 (powertrain CAN bus, low), in main wiring harness	759
23. Fuel gauge sender, Fuel gauge, Coolant temperature gauge, Multifunction indicator, Control unit in dash panel insert, Dash panel insert	760
24. Oil pressure switch, Oil level and oil temperature sender, Buzzer and gong, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, Electronic power control fault lamp	761
074 - Radio navigation system RNS 510, Japan only	762-770
1. Radio navigation system RNS 510, Japan only	762
2. Multifunction buttons on right in steering wheel, Airbag coil connector and return ring with slip ring, Multifunction steering wheel control unit, Steering column electronics control unit	763
3. Onboard supply control unit, Steering column electronics control unit, Dash panel insert	764
4. Control unit with display for radio and navigation, Rear right bass loudspeaker	765
5. Control unit with display for radio and navigation, Rear left bass loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right mid-range loudspeaker	766
6. Control unit with display for radio and navigation, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	767
7. Control unit with display for radio and navigation, CD changer	768
8. Control unit with display for radio and navigation, Traffic information control unit, Traffic data aerial, Data transmission aerial	769
9. Control unit with display for radio and navigation, Telephone aerial, Right aerial module	770
075 - 6.0l petrol engine , BJN,CFRA	771-798
1. 6.0l petrol engine , BJN,CFRA	771
2. Starter, Alternator, Entry and start authorisation control unit, Terminal 50 voltage supply relay, Terminal 30 wiring junction, Terminal 30 wiring junction 2	772
3. Fuses in fuse holder	773
4. Main relay, Fuses in fuse holder	774
5. Fuel pump relay, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	775
6. Electric fuel pump 2 relay, Engine control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug 4, Spark plug 5, Spark plug 6	776
7. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	777
8. Knock sensor 1, Knock sensor 2, Radiator outlet coolant temperature sender, Engine control unit	778
9. Alternator cut-in relay, Onboard supply control unit, Engine control unit, Camshaft control valve 1, Exhaust camshaft control valve 1	779
10. Lambda probe, Lambda probe 2, Engine control unit	780
11. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	781
12. Engine speed sender, Hall sender, Coolant temperature sender, Hall sender 2, Engine control unit	782
13. Air mass meter, Accelerator position sender, Brake servo pressure sensor, Engine control unit	783
14. Additional coolant pump relay, Brake servo relay, Engine control unit, Radiator fan control unit 2, Continued coolant circulation pump, Secondary air pump motor, Radiator fan 2	784
15. High-pressure sender, Radiator fan control unit, Engine control unit, Radiator fan, Vacuum pump for brakes	785
16. Throttle valve drive for electric throttle. Secondary air pump relay. Engine control unit	786

17. Engine control unit, Engine control unit 2	787
18. Secondary air pump 2 relay, Engine control unit 2, Ignition coil 7 with output stage, Ignition coil 8 with output stage, Ignition coil 9 with output stage, Spark plug 7, Spark plug 8, Spark plug 9, Secondary air pump motor 2	788
19. Engine control unit 2, Ignition coil 10 with output stage, Ignition coil 11 with output stage, Ignition coil 12 with output stage, Spark plug 10, Spark plug 11, Spark plug 12	789
20. Engine control unit 2, Injector, cylinder 7, Injector, cylinder 8, Injector, cylinder 9, Injector, cylinder 10, Injector, cylinder 11, Injector, cylinder 12	790
21. Knock sensor 3, Knock sensor 4, Engine control unit 2	791
22. Lambda probe 3, Lambda probe 3 after catalytic converter, Engine control unit 2	792
23. Lambda probe 4, Lambda probe 4 after catalytic converter, Engine control unit 2	793
24. Air mass meter 2, Intake air temperature sender 2, Hall sender 3, Hall sender 4, Engine control unit 2	794
25. Throttle valve drive 2, Engine control unit 2, Fuel system diagnostic pump	795
26. Engine control unit 2, Activated charcoal filter solenoid valve 1, Camshaft control valve 2, Air conditioner compressor regulating valve, Exhaust camshaft control valve 2	796
27. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump, Coolant shortage indicator sender, Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	797
28. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	798
076 - 3.0l diesel engine , CATA	799-818
1. 3.0l diesel engine , CATA	799
2. Starter, Alternator, Voltage regulator, Terminal 50 voltage supply relay, Terminal 30 wiring junction	800
3. Terminal 30 voltage supply relay, Fuses in fuse holder	801
4. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3	802
5. Cylinder 5 combustion chamber pressure sender, Automatic glow period control unit, Alternator cut-in relay, Onboard supply control unit, Engine control unit, Glow plug 4, Glow plug 5, Glow plug 6	803
6. Fuel pump relay, Radiator fan control unit, Auxiliary coolant heater relay, Engine control unit, Radiator fan control unit 2	804
7. High-pressure sender, Exhaust gas pressure sensor 1, Engine control unit	805
8. Intake air temperature sender, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine control unit	806
9. Additional coolant pump relay, Engine control unit, Residual heat relay, Circulation pump	807
10. Fuel temperature sender, Exhaust gas recirculation potentiometer, Engine control unit, Relay for supplementary fuel pump, Exhaust gas recirculation valve, Fuel pressure regulating valve, Fuel metering valve, Supplementary fuel pump	808
11. Fuel cooling pump relay, Engine control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooler changeover valve 2, Valve for oil pressure control, Fuel cooling pump, Pump for exhaust gas recirculation cooler	809
12. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit, Air conditioner compressor regulating valve	810
13. Engine speed sender, Throttle valve module, Engine control unit	811
14. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	812
15. Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit, Turbocharger 1 control unit	813
16. Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine control unit, Lambda probe heater	814
17. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	815
18. Oil pressure switch for reduced oil pressure, Air mass meter, Engine control unit	816
19. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	817
20. Fuel gauge sender, Coolant shortage indicator sender, Fuel gauge sender 2, Control unit in dash panel insert, Dash panel insert, Fuel pump 1	818
801 - - Fitting locations: Earth points - 3	819-837
1. Earth points	819-837
1.1 Overview of earth points in engine compartment	819-823
1.2 Overview of earth points in vehicle interior	824-831
1.3 Overview of earth points in luggage compartment	832-837
802 - -Fitting locations: Fuses - 3	838-866
1. Fuses	838-866

1.1 Overview of fuses	838
1.2 Fuse holder B on the dash panel on left	839-845
1.2.1 Fuse assignment (SB) on left of dash panel, from November 2006	840-842
1.2.2 Fuse assignment (SB) on left of dash panel, from November 2007	843-845
1.3 Fuses (S) in electronics box, on left in plenum chamber	846-857
1.3.1 Fuse assignment (S) for E-box 2.5l (R5) TDI engine, on left in plenum chamber	847
1.3.2 Fuse assignment (S) for E-box 3.0l (V6) diesel engine, on left in plenum chamber	848-849
1.3.3 Fuse assignment (S) for E-box 5.0l (V10) TDI engine, on left in plenum chamber	850
1.3.4 Fuse assignment (S) for E-box 3.2l (V6) petrol engine, on left in plenum chamber	851-852
1.3.5 Fuse assignment (S) for E-box 3.6l (V6) FSI engine, on left in plenum chamber	853
1.3.6 Fuse assignment (S) for E-box 4.2l (V8) FSI engine, on left in plenum chamber	854-855
1.3.7 Fuse assignment (S) for E-box 6.0l (W12) petrol engine, on left in plenum chamber	856-857
1.4 Fuse holder C on the dash panel on right	858-863
1.4.1 Fuse assignment (SC) on fuse holder C on right of dash panel, from November 2006	859-860
1.4.2 Fuse assignment (SC) on fuse holder C on right of dash panel, from November 2007	861-863
1.5 Fuse holder D, under driver seat	864-866
1.5.1 Fuse assignment (SD) for E-box under driver seat, from November 2006	865
1.5.2 Fuse assignment (SD) for E-box under driver seat, from November 2007	866
803 - - Fitting locations: Relays - 3	867-877
1. Relay	867-877
1.1 Overview of relay carriers	867
1.2 Relay assignment 2.5l (R5) TDI engine:	868
1.3 Relay assignment 3.0l (V6) diesel engine	869
1.4 Relay assignment 5.0l (R10) TDI engine:	870
1.5 Relay assignment 3.2 l (V6) petrol engine:	871
1.6 Relay assignment 3.6l (V6) FSI engine:	872
1.7 Relay assignment 4.2l (V8) FSI engine:	873
1.8 Relay assignment 6.0 l (W12) petrol engine:	874
1.9 Relay carrier on E-box on left under dash panel near centre console	875
1.10 Relay carrier on E-box on right under dash panel, near right A-pillar (only right-hand drive)	876
1.11 Relay carrier on E-box under driver seat	877
804 - - Fitting locations: Control units in engine compartment - 3	878-895
1. Control units in engine compartment	878-895
1.1 Overview of control units	878-879
1.2 Power output module for right headlight -J668- / Right gas discharge bulb control unit -J344-	880
1.2.1 Fitting location:	880
1.3 Engine control unit 2 -J624-	881-882
1.3.1 Fitting location:	881
1.3.2 Connector assignment:	882
1.4 Engine control units	883-886
1.4.1 Fitting location:	883
1.4.2 Connector assignment:	884
1.4.3 Motronic control unit -J220- / Diesel direct injection system control unit -J248-	885
1.4.4 Engine control unit -J623-	886
1.5 ABS control unit -J104-	887-888
1.5.1 Connector assignment:	888
1.6 Heater control unit -J162-	889-890
1.6.1 Connector assignment:	890
1.7 Power output module for left headlight -J667- / Left gas discharge bulb control unit -J343-	891
1.7.1 Fitting location:	891
1.8 Radiator fan control unit -J293-	892-893
1.8.1 Connector assignment:	893
1.9 Radiator fan control unit 2 -J671-	894-895
1.9.1 Connector assignment:	895
805 - -Fitting locations: control units in passenger compartment - 3	896-940
1. Control units in passenger compartment	896-940
1.1 Overview of control units	896-898
1.2 Heated front seats control unit -J774-	899-900
1.2.1 Fitting location:	899
1.2.2 Connector assignment:	899-900
1.3 Heated rear seats control unit -J786-	901-902
1.3.1 Fitting location:	901
1.3.2 Connector assignment:	901-902
1.4 Front passenger seat adjustment with memory control unit -J521-	903-904
1.4.1 Fitting location:	903
1.4.2 Connector assianment:	903-904

1.5 Automatic gearbox control unit -J217-	905-906
1.5.1 Fitting location:	905
1.5.2 Connector assignment:	905-906
1.6 Transfer box control unit -J646-	907-908
1.6.1 Fitting location:	907
1.6.2 Connector assignment:	907-908
1.7 Mobile telephone operating electronics control unit -J412-	909-910
1.7.1 Fitting location:	909
1.7.2 Connector assignment:	909-910
1.8 Front passenger door control unit -J387-	911-912
1.8.1 Fitting location:	911
1.8.2 Connector assignment:	911-912
1.9 Garage door operation control unit -J530-	913
1.9.1 Fitting location:	913
1.10 Rear right door control unit -J389-	913-914
1.10.1 Fitting location:	913
1.10.2 Connector assignment:	914
1.11 Rear left door control unit -J388-	915-916
1.11.1 Fitting location:	915
1.11.2 Connector assignment:	915-916
1.12 Airbag control unit -J234-	917-918
1.12.1 Fitting location:	917
1.12.2 Connector assignment:	917-918
1.13 Climatronic control unit -J255-/air conditioning system control unit -J301-	919-920
1.13.1 Fitting location:	919
1.13.2 Connector assignment:	919-920
1.14 Driver door control unit -J386-	921-922
1.14.1 Fitting location:	921
1.14.2 Connector assignment:	921-922
1.15 Seat and steering column adjustment control unit with memory -J136-	923-924
1.15.1 Fitting location:	923
1.15.2 Connectors:	923-924
1.16 Steering column and belt height adjustment control unit -J352-	925-926
1.16.1 Fitting location:	925
1.16.2 Connectors:	925-926
1.17 Control unit with display for radio and navigation -J503- / control unit with display for TV, radio, navigation -J506-	927-928
1.17.1 Fitting location:	927
1.17.2 Connector assignment:	927-928
1.18 Control unit for cornering light and headlight range control -J745-	929-930
1.18.1 Fitting location:	929
1.18.2 Connector assignment:	929-930
1.19 Multifunction steering wheel control unit -J453-	931
1.19.1 Fitting location:	931
1.19.2 Connector assignment:	931
1.20 Steering column electronics control unit -J527-	932-933
1.20.1 Connectors:	932-933
1.21 Tyre Pressure Monitoring System control unit -J502-	934
1.21.1 Fitting location:	934
1.21.2 Connector assignment:	934
1.22 Control unit in dash panel insert -J285- / data bus diagnostic interface -J533-	935-936
1.22.1 Connector assignment:	935-936
1.23 Onboard supply control unit -J519-	937-938
1.23.1 Fitting location:	937
1.23.2 Connectors:	937-938
1.24 Entry and start authorisation control unit -J518-	939-940
1.24.1 Fitting location:	939
1.24.2 Connector assignment:	939-940