



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Checklist for evaluating running gear of accident vehicles	1
2 General information	3
<b>40 - Front suspension</b>	<b>4</b>
1 Evaluating accident vehicles	4
2 Lifting front axle in unladen state	5
3 Overview - front axle	7
4 <b>Assembly overview: subframe</b>	<b>9</b>
4.1 Repairing thread in longitudinal member	10
4.2 Fixing subframe in position, vehicles with V6 engines	11
4.3 Fixing subframe in position, vehicles with V8 engines	12
4.4 Removing and installing subframe	14
4.5 Repairing subframe, bonded rubber bushes in direction of travel at front for V6 engines	22
4.6 Repairing subframe, bonded rubber bushes in direction of travel at front for V8 engines	28
4.7 Repairing subframe, bonded rubber bushes in direction of travel at rear for V6 engines	34
4.8 Repairing subframe, bonded rubber bushes in direction of travel at rear for V8 engines	38
5 <b>Assembly overview - front wheel suspension, lower suspension link, upper suspension link</b>	<b>44</b>
5.1 Removing and installing upper suspension link, vehicles with steel spring struts	46
5.2 Removing and installing upper suspension link, vehicles with air spring struts	48
5.3 Repairing upper suspension link	50
5.4 Checking swivel joint	53
5.5 Removing and installing lower suspension link	53
5.6 Repairing lower suspension link - pressing in and out bonded rubber bushes (camber adjuster screw connection)	56
5.7 Repairing lower suspension link - pressing in and out bonded rubber bushes (caster adjuster screw connection)	59
5.8 Repairing lower suspension link - pressing in and out bonded rubber bushes (spring strut connection)	62
5.9 Removing and installing wheel bearing housing	64
6 <b>Assembly overview - wheel bearing, 17" running gear</b>	<b>69</b>
6.1 Removing and installing wheel bearing for 17" running gear	70
7 <b>Assembly overview - wheel bearing, 18" running gear</b>	<b>75</b>
7.1 Removing and installing wheel bearing unit for 18"/19" running gear	77
7.2 Repairing wheel bearing unit	81
8 <b>Assembly overview: anti-roll bar</b>	<b>85</b>
8.1 Removing and installing anti-roll bar	86
8.2 Removing and installing coupling rod	88
8.3 Removing and installing bush for anti-roll bar	91
9 <b>Assembly overview - front steel spring strut</b>	<b>95</b>
9.1 Assignment of spacers	96
9.2 Installation position of spacers	97
9.3 Removing and installing steel spring strut	97
9.4 Repairing front steel spring strut	101
10 <b>Front air spring strut</b>	<b>107</b>
10.1 Instructions for repairing air spring struts	107
10.2 Air spring strut	107
10.3 Pressure retention valve	107
10.4 Gaskets and seals	108
10.5 Nuts and bolts	108
10.6 Front air spring strut components	108



10.7	Assembly overview - front air spring strut	110
10.8	Removing and installing air spring strut	111
10.9	Repairing front air spring strut	115
10.10	Removing and installing pressure retention valve	123
<b>11</b>	<b>Assembly overview: drive shaft</b>	<b>126</b>
11.1	Loosening and tightening 12-point nut securing drive shaft	127
11.2	Removing and installing drive shaft	128
11.3	Dismantling and assembling drive shaft	134
11.4	Checking outer joint	139
<b>42</b>	<b>Rear suspension</b>	<b>141</b>
<b>1</b>	<b>Evaluating accident vehicles</b>	<b>141</b>
<b>2</b>	<b>Raising rear axle in unladen state</b>	<b>142</b>
<b>3</b>	<b>Overview - rear axle</b>	<b>144</b>
<b>4</b>	<b>Assembly overview - subframe, stone-chip protection</b>	<b>146</b>
4.1	Repairing thread in rear longitudinal member	147
4.2	Fixing position of subframe	148
4.3	Removing and installing subframe	149
4.4	Repairing subframe, bonded rubber bushes in direction of travel at front	153
4.5	Repairing subframe, bonded rubber bushes in direction of travel at rear	157
<b>5</b>	<b>Assembly overview - suspension link, track rod</b>	<b>163</b>
5.1	Removing and installing front upper transverse link	165
5.2	Removing and installing upper rear transverse link	168
5.3	Removing and installing track rod	171
5.4	Removing and installing lower transverse link	174
<b>6</b>	<b>Assembly overview: wheel bearing</b>	<b>179</b>
6.1	Removing and installing wheel bearing housing	181
6.2	Repairing wheel bearing housing	190
6.3	Removing and installing wheel bearing unit	194
6.4	Repairing wheel bearing unit	200
<b>7</b>	<b>Assembly overview - rear suspension</b>	<b>204</b>
<b>8</b>	<b>Assembly overview: anti-roll bar</b>	<b>206</b>
8.1	Removing and installing anti-roll bar	207
8.2	Removing and installing anti-roll bar bush	208
8.3	Removing and installing coupling rod	210
<b>9</b>	<b>Assembly overview - steel spring strut</b>	<b>215</b>
9.1	Assignment of spacers	216
9.2	Installation position of spacers	217
9.3	Removing and installing steel spring strut	217
9.4	Repairing rear steel spring strut	220
<b>10</b>	<b>Rear air spring damper</b>	<b>226</b>
10.1	Instructions for repairing air spring struts	226
10.2	Air spring strut	226
10.3	Pressure retention valve	226
10.4	Gaskets and seals	227
10.5	Nuts and bolts	227
10.6	Rear air spring strut components	227
10.7	Assembly overview - rear air spring strut	229
10.8	Removing and installing air spring strut	229
10.9	Replacing bellows for air spring strut	233
10.10	Repairing rear air spring strut	235
10.11	Removing and installing pressure retention valve	243
<b>11</b>	<b>Assembly overview: drive shaft</b>	<b>246</b>
11.1	Loosening and tightening 12-point nut securing drive shaft	246



11.2	Removing and installing drive shaft	248
11.3	Dismantling and assembling drive shaft	255
<b>43</b>	<b>- Self-levelling suspension</b>	<b>258</b>
1	Evaluating accident vehicles	258
2	Jacking mode	259
3	Fault finding, air spring strut and self-levelling suspension	260
4	Self-levelling suspension components and fitting locations	263
4.1	Removing and installing adaptive suspension control unit J197	265
4.2	Removing and installing front left and right body acceleration senders G341/G342	265
4.3	Assembly overview - front left/right vehicle level senders G78/G289	266
4.4	Removing and installing front left/right vehicle level sender G78/G289	267
4.5	Assembly overview - rear left/right vehicle level senders G76/G77	268
4.6	Removing and installing rear left/right vehicle level sender G76/G77	269
4.7	Removing and installing accumulator	270
4.8	Filling the accumulator	271
4.9	Repairing air line	271
5	Assembly overview - compressor with adaptive suspension valve block NX7	274
5.1	Removing and installing compressor without adaptive suspension valve block NX7	275
5.2	Removing and installing compressor with adaptive suspension valve block NX7	277
5.3	Removing and installing adaptive suspension valve block NX7	281
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>284</b>
1	Evaluating accident vehicles	284
2	Specified torques for wheel bolts	285
3	Vehicle alignment check	286
3.1	General information	286
3.2	Conditions for testing	288
3.3	Test preparations	288
3.4	Wheel alignment specifications	289
3.5	Overview - wheel alignment procedure	290
3.6	Adjusting camber at front wheels	291
3.7	Adjusting camber on rear axle	292
3.8	Adjusting toe at rear axle	293
3.9	Adjusting caster on front axle	294
3.10	Adjusting front axle toe	295
4	Vehicle data sticker	297
5	Adaptive Cruise Control (ACC)	298
5.1	General information on Adaptive Cruise Control (ACC)	299
5.2	Adjusting the automatic distance regulation sensor	300
6	Lane departure warning	306
6.1	General information about lane departure warning	306
6.2	Calibrating the lane departure warning	306
<b>48</b>	<b>- Steering</b>	<b>314</b>
1	Evaluating accident vehicles	314
2	Assembly overview - airbag and steering wheel	315
2.1	Removing and installing airbag and steering wheel	315
3	Assembly overview: steering column, left-hand drive	318
3.1	Removing and installing steering column, left-hand drive vehicle	319
3.2	Basic setting for steering angle sensor G85 steering angle sender must be checked after the following repair work:	326
3.3	Checking steering column for damage	326
3.4	Removing and installing electronic steering column lock control unit J764	326



3.5	Removing and installing control unit for electrically adjustable steering column J866 . . . .	328
<b>4</b>	<b>Assembly overview: steering column, right-hand drive</b> . . . . .	<b>330</b>
4.1	Removing and installing steering steering column, right-hand drive vehicle . . . . .	331
4.2	Basic setting for steering angle sensor G85 steering angle sender must be checked after the following repair work: . . . . .	338
4.3	Checking steering column for damage . . . . .	338
4.4	Removing and installing electronic steering column lock control unit J764 . . . . .	338
4.5	Removing and installing control unit for electrically adjustable steering column J866 . . . .	340
<b>5</b>	<b>Assembly overview: power steering, left-hand drive vehicle</b> . . . . .	<b>342</b>
5.1	Removing and installing power-assisted steering rack, left-hand drive vehicle . . . . .	343
<b>6</b>	<b>Assembly overview: power steering, right-hand drive vehicle</b> . . . . .	<b>348</b>
6.1	Removing and installing power steering rack, right-hand drive vehicle . . . . .	349
<b>7</b>	<b>Repairing power steering rack</b> . . . . .	<b>353</b>
7.1	Assembly overview: power steering rack, left-hand drive vehicle . . . . .	353
7.2	Removing and installing track rod . . . . .	354
7.3	Removing and installing track rod ball joint . . . . .	356
7.4	Removing and installing bellows . . . . .	358
<b>8</b>	<b>Vane pump, 6-cylinder petrol engine</b> . . . . .	<b>360</b>
8.1	Checking vane pump delivery pressure, 6-cylinder petrol engine . . . . .	360
8.2	Assembly overview: vane pump, 6-cylinder petrol engine . . . . .	362
8.3	Removing and installing vane pump, 6-cylinder petrol engine . . . . .	363
<b>9</b>	<b>Vane pump, 6-cylinder diesel engine</b> . . . . .	<b>367</b>
9.1	Checking vane pump delivery pressure, 6-cylinder diesel engine . . . . .	367
9.2	Assembly overview - vane pump, 6-cylinder diesel engine . . . . .	370
9.3	Removing and installing vane pump, 6-cylinder diesel engine . . . . .	372
<b>10</b>	<b>Vane pump, 8-cylinder petrol and diesel engine</b> . . . . .	<b>376</b>
10.1	Checking vane pump delivery pressure, 8-cylinder petrol and diesel engine . . . . .	376
10.2	Assembly overview: vane pump, 8-cylinder petrol and diesel engine . . . . .	382
10.3	Removing and installing vane pump, 8-cylinder petrol and diesel engine . . . . .	384
<b>11</b>	<b>Assembly overview: hydraulic lines, 6-cylinder petrol engine</b> . . . . .	<b>388</b>
<b>12</b>	<b>Assembly overview - hydraulic lines, 6-cylinder diesel engine</b> . . . . .	<b>389</b>
<b>13</b>	<b>Assembly overview - hydraulic lines, 8-cylinder diesel engine</b> . . . . .	<b>390</b>
<b>14</b>	<b>Removing and installing oil cooler</b> . . . . .	<b>391</b>
<b>15</b>	<b>Motor/pump unit</b> . . . . .	<b>394</b>
15.1	Assembly overview - motor/pump unit . . . . .	394
15.2	Removing and installing motor/pump unit . . . . .	395
<b>16</b>	<b>Bleeding steering system and checking for leaks</b> . . . . .	<b>398</b>
16.1	Bleeding steering system . . . . .	398
16.2	Check steering system for leaks . . . . .	398