



Contents

| | |
|--|-----------|
| 27 - Starter, current supply, CCS | 1 |
| 1 Battery | 1 |
| 1.1 Types of battery | 1 |
| 1.2 Warning notices and safety regulations | 1 |
| 1.3 Battery terminal connection | 1 |
| 2 Checking battery | 2 |
| 3 Charging battery | 3 |
| 4 Disconnecting and connecting battery | 4 |
| 4.1 Disconnecting and connecting battery | 4 |
| 5 Removing and installing battery | 6 |
| 5.1 Removing and installing battery beneath front left seat | 6 |
| 5.2 Adapting battery data | 10 |
| 6 Battery isolation igniter N253 | 11 |
| 6.1 Removing and installing battery isolation igniter N253 | 11 |
| 7 Jump start point | 13 |
| 7.1 Removing and installing jump starting point | 13 |
| 8 Starter, vehicles with automatic gearbox | 15 |
| 8.1 Checking starter B | 15 |
| 8.2 Starter, vehicles with 3.0 I, 213 kW TSI engine, automatic gearbox AL8 | 15 |
| 8.3 Starter, vehicles with 3.6 I FSI engine, 206 kW, automatic gearbox AG8 | 18 |
| 8.4 Starter, vehicles with 4.2 I FSI engine, 265 kW, automatic gearbox AG8 | 21 |
| 8.5 Starter, vehicles with 3.0 I, 176KW TDI engine, automatic gearbox AG8 | 24 |
| 8.6 Starter, vehicles with 4.2 I, 250 KW TDI engine, automatic gearbox AG8 | 27 |
| 9 Alternator | 30 |
| 9.1 Securing B+ (battery positive) wire to alternator | 30 |
| 9.2 Checking poly V-belt | 30 |
| 9.3 Checking alternator C | 31 |
| 9.4 Alternator 3.0 I, 213 kW TSI engine | 31 |
| 9.5 Alternator, 3.6 I FSI engine, 206 kW | 34 |
| 9.6 Alternator, vehicles with 4.2 I, 265 kW FSI engine | 37 |
| 9.7 Alternator, 3.0-I TDI engine | 40 |
| 9.8 Alternator, 4.2 I TDI engine, 250 kW | 43 |
| 9.9 Removing and installing poly V-belt pulley on alternator | 46 |
| 9.10 Removing and installing poly V-belt pulley with freewheel on alternator | 47 |
| 9.11 Voltage regulator for alternator | 49 |
| 10 Cruise control system (CCS) | 50 |
| 10.1 General description | 50 |
| 10.2 Activating and deactivating cruise control system (CCS) | 50 |
| 11 Adaptive cruise control (ACC) | 51 |
| 11.1 General description | 51 |
| 11.2 Assembly overview - adaptive cruise control (ACC) | 52 |
| 11.3 Removing and installing adaptive cruise control button E357 | 52 |
| 11.4 Adaptive cruise control unit J428 | 52 |
| 11.5 Calibrating adaptive cruise control | 56 |
| 11.6 Initialising adaptive cruise control | 56 |
| 12 Front scan system (Front Assist) | 57 |
| 12.1 General description | 57 |
| 12.2 Adaptive cruise control unit J428 | 57 |
| 12.3 Adaptive cruise control button E357 | 57 |
| 13 Start/stop system | 58 |
| 13.1 General description | 58 |



| | | |
|-----------|--|------------|
| 13.2 | Start/stop operation switch E693 | 59 |
| 13.3 | Voltage stabiliser J532 | 59 |
| 90 | - Gauges, instruments | 61 |
| 1 | Dash panel insert | 61 |
| 1.1 | General description | 61 |
| 1.2 | Removing and installing dash panel insert | 61 |
| 1.3 | Renewing dash panel insert | 63 |
| 1.4 | Description of back of dash panel insert | 63 |
| 1.5 | Pin assignment of connectors on dash panel insert | 64 |
| 1.6 | Warning lamp symbols in dash panel insert | 64 |
| 2 | Service interval display | 66 |
| 2.1 | Resetting service interval display | 66 |
| 92 | - Windscreen wash/wipe system | 67 |
| 1 | windscreen wiper system. | 67 |
| 1.1 | General description | 67 |
| 1.2 | Deactivating APP function of wiper motor | 68 |
| 1.3 | Assembly overview - windscreen wiper system | 68 |
| 1.4 | Removing and installing wiper arms | 69 |
| 1.5 | Removing and installing windscreen wiper system | 70 |
| 1.6 | Adjusting wiper blade park position | 76 |
| 1.7 | Removing and installing joint-free wiper | 77 |
| 1.8 | Rain and light sensor G397 | 79 |
| 1.9 | Wiper motor control unit J400 | 83 |
| 2 | Windscreen washer system | 85 |
| 2.1 | General description | 85 |
| 2.2 | Assembly overview - windscreen washer system | 85 |
| 2.3 | Removing and installing windscreen washer system reservoir | 87 |
| 2.4 | Windscreen and rear window washer pump V59 | 89 |
| 2.5 | Windscreen washer fluid level sender G33 | 90 |
| 2.6 | Spray jets for windscreen washer system | 90 |
| 3 | Rear window wiper system | 92 |
| 3.1 | General description | 92 |
| 3.2 | Assembly overview - rear window wiper system | 92 |
| 3.3 | Removing and installing rear window wiper | 93 |
| 3.4 | Adjusting rear window wiper park position | 95 |
| 3.5 | Removing and installing joint-free wiper | 96 |
| 4 | Rear window washer system | 97 |
| 4.1 | General description | 97 |
| 4.2 | Assembly overview - rear window washer system | 97 |
| 4.3 | Renewing spray jet | 98 |
| 4.4 | Adjusting spray jet | 98 |
| 5 | Headlight washer system | 99 |
| 5.1 | General description | 99 |
| 5.2 | Assembly overview - headlight washer system | 99 |
| 5.3 | Headlight washer system pump V11 | 100 |
| 5.4 | Spray jet pop-up cylinder | 101 |
| 5.5 | Spray jet assembly | 102 |
| 5.6 | Adjusting headlight washer system spray jets | 103 |
| 5.7 | Bleeding headlight washer system | 103 |
| 6 | Washer fluid line hose couplings | 104 |
| 7 | Hose repair | 105 |
| 94 | - Lights, bulbs, switches - exterior | 106 |



| | | |
|----------|--|------------|
| 1 | Operation and safety notes for gas discharge lamps | 106 |
| 2 | Headlight with halogen bulbs | 109 |
| 2.1 | General description | 109 |
| 2.2 | Assembly overview - halogen headlight | 109 |
| 2.3 | Removing and installing headlight | 111 |
| 2.4 | Adjusting headlight installation position | 112 |
| 2.5 | Replacing headlight bulbs | 114 |
| 2.6 | Removing and installing headlight range control motor | 119 |
| 2.7 | Repairing headlight retaining tabs | 120 |
| 2.8 | Converting headlights for use when driving on the left or right | 123 |
| 2.9 | Adjusting headlights | 126 |
| 3 | Gas discharge headlight with cornering light and LED daytime running light | 127 |
| 3.1 | General description | 127 |
| 3.2 | Assembly overview - gas discharge headlight with cornering light and LED daytime running light | 128 |
| 3.3 | Removing and installing headlight | 132 |
| 3.4 | Adjusting headlight installation position | 134 |
| 3.5 | Renewing bulbs of gas discharge headlight with cornering light and LED daytime running light | 134 |
| 3.6 | Removing and installing headlight range control motor | 138 |
| 3.7 | Dynamic cornering light control motor | 139 |
| 3.8 | Removing and installing output module for daytime running light | 139 |
| 3.9 | Power output module for headlight | 140 |
| 3.10 | Gas discharge bulb control unit | 142 |
| 3.11 | Cornering light and headlight range control unit J745 | 142 |
| 3.12 | Vehicle level sender | 144 |
| 3.13 | Repairing headlight retaining tabs | 145 |
| 3.14 | Converting headlights for use when driving on the left or right | 145 |
| 3.15 | Adjusting headlights | 146 |
| 4 | Gas discharge headlights with dynamic main beam regulation | 147 |
| 4.1 | General description | 147 |
| 4.2 | Assembly overview - gas discharge headlights with dynamic high beam control | 148 |
| 4.3 | Removing and installing headlight | 151 |
| 4.4 | Adjusting headlight installation position | 152 |
| 4.5 | Replacing bulbs in gas discharge headlights with dynamic main beam regulation | 153 |
| 4.6 | Removing and installing headlight range control motor | 157 |
| 4.7 | Power output module for headlight | 158 |
| 4.8 | Gas discharge bulb control unit | 160 |
| 4.9 | Removing and installing output module | 160 |
| 4.10 | Cornering light and headlight range control unit J745 | 161 |
| 4.11 | Vehicle level sender | 162 |
| 4.12 | Repairing headlight retaining tabs | 163 |
| 4.13 | Converting headlights for use when driving on the left or right | 164 |
| 4.14 | Adjusting headlights | 164 |
| 5 | Fog lights | 165 |
| 5.1 | Assembly overview - fog lights | 165 |
| 5.2 | Removing and installing fog light | 167 |
| 5.3 | Removing and installing fog light bulb | 170 |
| 5.4 | Checking fog lights | 171 |
| 5.5 | Adjusting fog lights | 171 |
| 6 | Turn signal repeater bulb and entry light in exterior mirror | 172 |
| 6.1 | Turn signal repeater bulb | 172 |
| 6.2 | Entry light in exterior mirror | 172 |
| 7 | Tail light clusters | 174 |
| 7.1 | Assembly overview - tail light cluster in side panel | 174 |



| | | |
|-----------|--|------------|
| 7.2 | Removing and installing tail light cluster in side panel | 175 |
| 7.3 | Removing and installing bulb carrier for tail light cluster in side panel | 176 |
| 7.4 | Assembly overview - tail light cluster in rear lid | 176 |
| 7.5 | Removing and installing tail light cluster in rear lid | 178 |
| 8 | Tail light cluster with LED | 182 |
| 8.1 | General description | 182 |
| 8.2 | Assembly overview - tail light cluster with LEDs in side panel | 182 |
| 8.3 | Removing and installing tail light cluster with light diodes in side panel | 183 |
| 8.4 | Replacing bulb of rear turn signal | 184 |
| 8.5 | Assembly overview - tail light cluster with LEDs in rear lid | 185 |
| 8.6 | Removing and installing tail light cluster with LEDs in rear lid | 186 |
| 8.7 | Renewing left reversing light bulb M16 or right reversing light bulb M17 | 187 |
| 9 | Rear fog lights | 189 |
| 9.1 | Rear fog lights in rear bumper cover | 189 |
| 10 | Number plate light | 190 |
| 10.1 | Clipped number plate light X | 190 |
| 10.2 | Checking number plate light X | 191 |
| 11 | High-level brake light bulb M25 | 192 |
| 11.1 | Removing and installing bulb for high-level brake light M25 | 192 |
| 11.2 | Checking high-level brake light bulb M25 | 193 |
| 12 | Turn signal in exterior mirror | 194 |
| 12.1 | Removing and installing turn signal repeater | 194 |
| 13 | Steering column switch | 195 |
| 13.1 | Assembly overview - steering column switch | 195 |
| 13.2 | Steering column switch module | 196 |
| 13.3 | Steering column electronics control unit J527 | 197 |
| 14 | Interface for entry and start authorisation system | 200 |
| 14.1 | General description | 200 |
| 14.2 | Emergency release of ignition key | 200 |
| 14.3 | Entry and start authorisation switch E415 | 201 |
| 14.4 | Entry and start authorisation control unit J518 | 202 |
| 14.5 | Entry and start authorisation aerials and sensors | 203 |
| 14.6 | Entry and start authorisation button E408 | 207 |
| 15 | Parking aid | 209 |
| 15.1 | General description | 209 |
| 15.2 | Assembly overview - parking aid | 209 |
| 15.3 | Parking aid control unit J446 | 210 |
| 15.4 | Parking aid button E266 | 213 |
| 15.5 | Front parking aid senders | 213 |
| 15.6 | Rear parking aid senders | 219 |
| 15.7 | Parking aid warning buzzer | 221 |
| 16 | Lane departure warning (Lane Assist) | 223 |
| 16.1 | General description | 223 |
| 16.2 | Assembly overview - lane departure warning | 224 |
| 16.3 | Removing and installing camera control unit J852 | 225 |
| 16.4 | Removing and installing windscreen heater for lane departure warning Z67 | 226 |
| 16.5 | Calibrating camera control unit J852 | 226 |
| 16.6 | Coding camera control unit J852 | 227 |
| 16.7 | Image processing control unit J851 | 227 |
| 16.8 | Steering wheel vibration motor V331 | 227 |
| 16.9 | Pitch rate sender G752 | 228 |
| 17 | Lane change assist (Side Assist) | 230 |
| 17.1 | General description | 230 |
| 17.2 | Lane change assist control unit with radar sensor | 231 |



| | | |
|-----------|---|------------|
| 17.3 | Warning lamps for lane change assist system in exterior mirror | 231 |
| 17.4 | Calibrating lane change assistant (Side Assist) | 232 |
| 17.5 | Lane change assist control unit final control diagnosis | 239 |
| 17.6 | Coding lane change assist control unit | 239 |
| 18 | Reversing camera (rear assist) | 240 |
| 18.1 | General description | 240 |
| 18.2 | Reversing camera R189 | 240 |
| 18.3 | Reversing camera system control unit J772 | 242 |
| 18.4 | Calibrating reversing camera | 243 |
| 19 | Overhead view camera system | 248 |
| 19.1 | General description | 248 |
| 19.2 | Assembly overview - overhead view camera system | 248 |
| 19.3 | Right overhead view camera R245 or left overhead view camera R244 | 249 |
| 19.4 | Front overhead view camera R243 | 251 |
| 19.5 | Rear overhead view camera R246 | 252 |
| 19.6 | Overhead view camera control unit J928 | 253 |
| 19.7 | Overhead view camera system button | 254 |
| 19.8 | Calibrating overhead view camera system | 254 |
| 96 | Lights, bulbs, switches - interior | 269 |
| 1 | Interior lights and switches | 269 |
| 1.1 | Footwell lights | 269 |
| 2 | Lights and switches in engine compartment | 271 |
| 2.1 | Bonnet contact switch F266 | 271 |
| 3 | Lights and switches in dash panel | 272 |
| 3.1 | Light switch E1 | 272 |
| 3.2 | Removing and installing front passenger side airbag deactivated warning lamp K145 | 273 |
| 3.3 | Hazard warning light switch E3 | 273 |
| 3.4 | Glove compartment light W6 | 274 |
| 3.5 | Switches in centre of dash panel | 275 |
| 3.6 | Removing and installing key-operated switch to deactivate front passenger side airbag | 276 |
| 3.7 | Switch for electrically adjusted steering column | 276 |
| 4 | Lights and switches in front doors | 278 |
| 4.1 | Removing and installing bulb for background lighting in front door L164 / L165 | 278 |
| 4.2 | Removing and installing decorative LED ring | 279 |
| 4.3 | Driver side switch element | 280 |
| 4.4 | Window regulator switch in front passenger door E107 | 281 |
| 4.5 | Driver side interior locking button for central locking system E308 | 282 |
| 4.6 | Front passenger side interior locking button for central locking system E309 | 283 |
| 4.7 | Warning lamps for driver side interior locking and front passenger side SAFE function | 283 |
| 4.8 | Rear lid remote release button E233 | 285 |
| 4.9 | Illumination for driver side/front passenger side door interior handle | 286 |
| 4.10 | Door warning lamps | 289 |
| 4.11 | Interior monitoring and vehicle inclination deactivation buttons | 292 |
| 4.12 | Module for exterior mirror adjustment | 293 |
| 4.13 | Button unit for seat with memory function | 294 |
| 5 | Lights and switches in rear doors | 297 |
| 5.1 | Rear left and right interior locking buttons for central locking system | 297 |
| 5.2 | Rear left and right window regulator switch (in door) | 297 |
| 5.3 | Ashtray illumination bulb L15 | 298 |
| 5.4 | Rear left and right interior door handle illumination bulbs | 300 |
| 5.5 | Removing and installing bulb for background lighting in rear door L166 / L167 | 301 |
| 5.6 | Rear left and right door warning lamps | 302 |
| 6 | Lights and switches in luggage compartment | 303 |
| 6.1 | Removing and installing electric hinged tow coupling attachment button E474 | 303 |



| | | |
|--------------------|---|------------|
| 6.2 | Button unit for split folding rear seat bench | 303 |
| 6.3 | Button for lowering rear end | 304 |
| 6.4 | Button to close rear lid in luggage compartment E406 | 304 |
| 6.5 | Warning buzzer for electric rear lid | 305 |
| 6.6 | Luggage compartment light W3 | 306 |
| 6.7 | Rear lid light W51 | 307 |
| 6.8 | Rear lid lock unit F256 | 309 |
| 7 | Lights and switches in roof trim | 310 |
| 7.1 | Front interior and reading light | 310 |
| 7.2 | Front passenger reading light W13 and driver side reading light W19 | 311 |
| 7.3 | Button module for front interior/reading light | 312 |
| 7.4 | Three-button unit in roof trim | 312 |
| 7.5 | Sunroof switch E8 | 313 |
| 7.6 | Garage door operating unit E284 | 314 |
| 7.7 | Removing and installing illuminated vanity mirror W20 / W14 | 314 |
| 7.8 | Rear reading lights | 315 |
| 8 | Lights and switches in centre console | 318 |
| 8.1 | Operating unit to regulate suspension height E281 and switch for wheel alignment | 318 |
| 8.2 | Switch module in centre console | 318 |
| 8.3 | Electromechanical parking brake button and auto-hold button | 319 |
| 8.4 | Heated rear seat switch with regulator | 320 |
| 8.5 | Seat heater button | 320 |
| 8.6 | Removing and installing light in rear centre console | 320 |
| 8.7 | 12 V socket | 321 |
| 8.8 | Cigarette lighter U1 | 321 |
| 9 | Horn | 322 |
| 9.1 | Removing and installing treble horn H2 and bass horn H7 | 322 |
| 9.2 | Checking treble horn H2 and bass horn H7 | 322 |
| 10 | Immobiliser | 323 |
| 10.1 | General description | 323 |
| 10.2 | Entry and start authorisation control unit J518 | 323 |
| 10.3 | Adapting immobiliser | 323 |
| 10.4 | Ignition key | 323 |
| 10.5 | Online system test | 324 |
| 11 | Anti-theft alarm (ATA) | 325 |
| 11.1 | General description | 325 |
| 11.2 | Activating and deactivating anti-theft alarm | 325 |
| 11.3 | Interior monitor deactivation switch and deactivation button for vehicle inclination sender | 326 |
| 11.4 | Interior monitoring sensor with vehicle inclination sender | 326 |
| 11.5 | Central locking and anti-theft alarm system aerial R47 | 327 |
| 11.6 | Alarm horn H12 | 327 |
| 97 - Wiring | | 329 |
| 1 | Vehicle diagnosis, testing and information systems | 329 |
| 2 | Fuse holder | 330 |
| 2.1 | Removing and installing fuse holder | 330 |
| 2.2 | Removing and installing connection and distribution box SX3 with fuse holder D SD | 331 |
| 3 | Relay carriers | 332 |
| 3.1 | Removing and installing relay carrier in driver footwell | 332 |
| 4 | Electronics boxes | 336 |
| 4.1 | Removing and installing connection and distribution box 2 SX2 in plenum chamber left | 336 |
| 5 | Select Control units | 338 |
| 5.1 | On-board supply control unit J519 | 338 |



| | | |
|----------|---|------------|
| 5.2 | Data bus diagnostic interface J533 | 341 |
| 5.3 | Convenience system central control unit J393 | 342 |
| 5.4 | Trailer detector control unit J345 | 347 |
| 5.5 | Control unit for electromechanical parking brake J540 | 348 |
| 5.6 | Rear lid control unit J605 | 348 |
| 5.7 | Heated rear seats control unit J786 | 349 |
| 6 | Wiring harness and connector repairs | 351 |