



Contents

00 - Technical data	1
91 - Communication	2
1 Communication systems	2
1.1 Fault finding	2
2 Radio navigation system "RNS 850"	3
2.1 General information	3
2.2 Anti-theft component protection	4
2.3 Assembly overview of the radio navigation system "RNS 850"	5
2.4 System overviews of the radio/navigation system "RNS 850"	8
2.5 Display unit for control device of front display and information control panel	11
2.6 Information electronics control unit 1	15
2.7 Radio	21
2.8 Diagnosis of optical fibre conductor break	25
3 Radio system "RCD 550"	27
3.1 General information	27
3.2 Features of "RCD 550" radio system	27
3.3 Assembly overview of radio system "RCD 550"	28
3.4 System overview of radio system "RCD 550"	30
3.5 Removing and installing radio "RCD 550"	30
3.6 Overview of connectors on radio "RCD 550"	34
3.7 Anti-theft component protection	37
4 DVD changer	38
4.1 Removing and installing DVD changer	38
4.2 Overview of connectors at DVD changer	40
4.3 Software update	40
4.4 Coding	40
5 TV tuner	41
5.1 Removing and installing TV tuner	41
5.2 Overview of connectors on TV tuner	43
5.3 Software update	45
5.4 Coding	45
6 Connection for external audio sources	46
6.1 General information	46
6.2 Removing and installing connection for external audio sources R199	46
6.3 Removing and installing connection for external audio sources R199 (AUX-IN socket)	48
7 Interface for external multimedia devices	50
7.1 System overview of interface for external multimedia devices	50
7.2 Removing and installing interface for external multimedia unit	50
8 Digital sound package control unit J525	53
8.1 Removing and installing digital sound package control unit	53
8.2 Overview of connectors on digital sound package control unit J525	55
9 Interface for Infotainment CAN bus J885	58
9.1 Removing and installing interface for Infotainment CAN bus	58
10 Loudspeaker systems	61
10.1 Overview of loudspeaker system	61
10.2 Removing and installing front bass loudspeakers	62
10.3 Removing and installing front mid-range loudspeakers	63
10.4 Removing and installing front treble loudspeakers	64
10.5 Removing and installing rear bass loudspeakers	64
10.6 Removing and installing rear treble loudspeakers	65
10.7 Removing and installing centre mid-range and treble loudspeaker	66



11	Telephone system	67
11.1	General information	67
11.2	Overview of telephone system with Bluetooth technology in conjunction with radio-navigation system "RNS 850"	67
11.3	Overview of telephone system with Bluetooth technology in conjunction with radio-navigation system "RCD 550"	69
11.4	Microphone for Infotainment system	70
11.5	Removing and installing emergency button E276	72
11.6	Removing and installing mobile telephone operating electronics control unit J412	73
12	Aerial system	74
12.1	Overview of aerial system in conjunction with radio navigation system "RNS 850"	74
12.2	Overview of aerial system in conjunction with "RCD 550" radio system	75
12.3	Aerial modules, side windows	76
12.4	Removing and installing roof aerial	79
12.5	Renewal of aerial wiring	80
13	Multifunction steering wheel	81
13.1	Fault finding	81
13.2	Removing and installing steering wheel multifunction button	81
13.3	Removing and installing switching element from/in the multifunction button	82
13.4	Coding the multifunction steering wheel	82
14	Car-Net	84
14.1	General information	84
14.2	Overview of fitting locations - Car-Net services	84
14.3	Removing and installing emergency call module control unit and communication unit J949	85
14.4	Removing and installing emergency button E276	86
14.5	Removing and installing loudspeaker for emergency call module R335	86
14.6	Renewing control unit for emergency call module and communication unit J949	88
14.7	Removing and installing GSM aerial 2 R267	88
14.8	Renewing battery in emergency call module control unit and communication unit J949	89
14.9	Commissioning ERA Glonass	90
15	Notes on operating mobile telephones and two-way radios	92
15.1	General information	92
15.2	Notes on performing repair work	93
15.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	94
15.4	Transmitting power and aerial fitting locations	95
16	Suppression measures	97
16.1	Suppression measures	97