



## Contents

<b>50 - Body - front</b> .....	<b>1</b>
<b>1 Lock carrier</b> .....	<b>1</b>
1.1 Tools .....	1
1.2 Service position .....	2
1.3 Removing and installing lock carrier with attachments .....	4
1.4 Pressure hose with plug-in connector .....	7
<b>2 Wings</b> .....	<b>8</b>
2.1 Tools .....	8
2.2 Front wing .....	8
2.3 Removing cover for wing .....	13
<b>3 Plenum chamber bulkhead</b> .....	<b>14</b>
3.1 Tools .....	14
3.2 Assembly overview - plenum chamber bulkhead .....	14
3.3 Removing and installing plenum chamber bulkhead .....	16
3.4 Removing and installing insulation for plenum chamber bulkhead .....	18
<b>4 Plenum chamber cover</b> .....	<b>19</b>
4.1 Plenum chamber cover .....	19
<b>5 Noise insulation</b> .....	<b>23</b>
5.1 Tools .....	23
5.2 Assembly overview - noise insulation .....	23
<b>6 Underbody cladding</b> .....	<b>25</b>
6.1 Tools .....	25
6.2 Assembly overview - underbody cladding .....	25
<b>7 Deformation element</b> .....	<b>27</b>
7.1 Tools .....	27
7.2 Assembly overview - deformable element .....	27
7.3 Assembly overview - retaining brackets .....	29
<b>55 - Bonnet, rear lid</b> .....	<b>30</b>
<b>1 Bonnet (hood)</b> .....	<b>30</b>
1.1 Tools .....	30
1.2 Assembly overview - bonnet .....	30
1.3 Removing and installing bonnet .....	32
1.4 Removing and installing bonnet hinge .....	33
1.5 Removing gas strut .....	36
1.6 Releasing gas from gas strut .....	36
1.7 Removing and installing insulation .....	36
1.8 Removing and installing seal .....	39
1.9 Assembly overview - bonnet lock and release components .....	40
1.10 Removing and installing lid lock on LHD vehicle .....	40
1.11 Removing and installing lid lock on RHD vehicle .....	43
1.12 Detaching Bowden cable .....	45
1.13 Removing and installing striker pin .....	46
1.14 Operating lever .....	47
1.15 Adjusting bonnet .....	49
<b>2 Rear lid</b> .....	<b>54</b>
2.1 Tools .....	54
2.2 Assembly overview - rear lid .....	54
2.3 Removing and installing rear lid .....	56
2.4 Gas strut .....	59
2.5 Rear lid drive .....	61
2.6 Rear lid hinge .....	67



2.7	Removing and installing striker pin	70
2.8	Removing and installing stop buffer	71
2.9	Adjusting rear lid	72
2.10	Removing and installing bonnet lock	75
2.11	Removing and installing release button	78
2.12	Removing and installing rear lid seal	80
<b>3</b>	<b>Tank flap unit</b>	<b>81</b>
3.1	Tools	81
3.2	Assembly overview - tank flap unit and actuator	81
3.3	Removing and installing tank flap unit	82
3.4	Removing and installing actuator	85
3.5	Removing and installing fuel tank flap	87
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>89</b>
<b>1</b>	<b>Rear door</b>	<b>89</b>
1.1	Tools	89
1.2	Assembly overview - door hinges	90
1.3	Removing and installing door	91
1.4	Installing after renewing A-pillar	94
1.5	Door alignment	95
<b>2</b>	<b>Door components</b>	<b>99</b>
2.1	Tools	99
2.2	Assembly overview - front door	100
2.3	Removing and installing subframe	101
2.4	Removing and installing door retaining strap	107
2.5	Removing and installing striker pin	108
2.6	Assembly overview - door handle and door lock	109
2.7	Removing and installing lock cylinder cover cap	110
2.8	Removing and installing lock cylinder	111
2.9	Removing and installing cover cap (without lock cylinder)	113
2.10	Removing and installing door handle	115
2.11	Removing and installing door handle with entry and start authorisation control unit	118
2.12	Removing and installing door lock	120
2.13	Removing and installing door handle bracket	123
2.14	Removing and installing window slot seal	125
2.15	Removing and installing inner door seal	126
2.16	Removing and installing outer door seal	128
2.17	Removing and installing sill panel seal	131
2.18	Assembly overview - insulation	132
<b>3</b>	<b>Central locking</b>	<b>133</b>
3.1	Fitting location overview - central locking components	133
3.2	Adapting remote control keys to immobilizer	134
3.3	Removing and installing remote control key battery	135
<b>58</b>	<b>Rear doors, door components</b>	<b>140</b>
<b>1</b>	<b>Rear door</b>	<b>140</b>
1.1	Tools	140
1.2	Assembly overview - door hinges	141
1.3	Removing and installing door	142
1.4	Installing after renewing B-pillar	145
1.5	Door alignment	146
<b>2</b>	<b>Door components</b>	<b>150</b>
2.1	Tools	150
2.2	Assembly overview - rear door	151
2.3	Removing and installing subframe	152



2.4	Removing and installing door retaining strap	157
2.5	Removing and installing striker pin	158
2.6	Assembly overview - door handle and door lock	159
2.7	Removing and installing cap	160
2.8	Removing and installing door handle	162
2.9	Removing and installing door handle with entry and start authorisation control unit	165
2.10	Removing and installing door lock	167
2.11	Removing and installing door handle bracket	170
2.12	Removing and installing window slot seal	172
2.13	Removing and installing inner door seal	173
2.14	Removing and installing outer door seal	175
2.15	Removing and installing additional door seal	178
2.16	Sill panel seal	180
2.17	Assembly overview - insulation	181
<b>60</b>	<b>- Sunroof</b>	<b>182</b>
<b>1</b>	<b>Panoramic sliding sunroof</b>	<b>182</b>
1.1	Tools	182
1.2	Function	182
1.3	Basic setting, panoramic sliding sunroof	183
1.4	Assembly overview - panoramic sliding roof	183
1.5	Removing and installing front glass panel	186
1.6	Removing and installing rear glass panel	190
1.7	Adjusting height of front and rear glass panel	194
1.8	Removing and installing rear glass panel seals	197
1.9	Removing and installing the exterior seal	198
1.10	Wind deflector	200
1.11	Removing and installing preselector for glass panel and sunroof sun blind	203
1.12	Removing and installing sliding sunroof motor	203
1.13	Removing and installing sun blind motor	206
1.14	Removing and installing sun blind	207
1.15	Removing and installing assembly frame	214
1.16	Removing and installing rear part	218
1.17	Removing and installing tilting mechanism and front glass panel cable	222
1.18	Removing and installing sun blind Bowden cable	224
1.19	Maintenance and care	227
1.20	Operating without current	227
1.21	Cleaning water drainage hoses	229
<b>63</b>	<b>- Bumpers</b>	<b>232</b>
<b>1</b>	<b>Front bumper cover</b>	<b>232</b>
1.1	Assembly overview - bumper cover	232
1.2	Assembly overview - add-on parts	235
1.3	Assembly overview - substructure components	242
1.4	Assembly overview - impact bar	244
1.5	Removing and installing bumper cover	244
1.6	Removing and installing centre air intake grille	248
1.7	Number plate carrier	249
1.8	Repairing front bumper cover	251
<b>2</b>	<b>Bumper, rear</b>	<b>252</b>
2.1	Assembly overview - bumper cover	252
2.2	Assembly overview - add-on parts	254
2.3	Assembly overview - substructure components	260
2.4	Assembly overview - impact bar	261
2.5	Towing bracket	262
2.6	Removing and installing bumper cover	263



2.7	Repairing rear bumper cover	266
2.8	Installing brackets for parking aid system	266
<b>64</b>	<b>- Glazing</b>	<b>271</b>
<b>1</b>	<b>Flush bonded windows</b>	<b>271</b>
1.1	Tools	271
1.2	Materials	272
1.3	Assembly overview - windscreen	273
1.4	Removing windscreen	274
1.5	Installing windscreen	276
1.6	Assembly overview - rear window	276
1.7	Removing undamaged rear window	278
1.8	Removing broken rear window	279
1.9	Installing rear window	280
1.10	Assembly overview - side window	280
1.11	Removing undamaged side window	281
1.12	Removing broken side window	282
1.13	Installing side window	282
1.14	Preparing old undamaged window for glazing	283
1.15	Preparing new window without precoating for glazing	283
1.16	Preparing body flange for glazing	284
1.17	Fitting instructions	285
1.18	Minimum curing period	285
1.19	Touching up paint damage	286
1.20	Cleaning in the event of dirt caused by adhesive sealant	286
<b>2</b>	<b>Front door window</b>	<b>287</b>
2.1	Tools	287
2.2	Assembly overview - front door window	288
2.3	Removing and installing door window	289
2.4	Removing and installing window regulator motor	293
2.5	Removing and installing window channel	295
2.6	Fixed door window	296
<b>3</b>	<b>Rear door window</b>	<b>301</b>
3.1	Tools	301
3.2	Assembly overview - rear door window	302
3.3	Removing and installing door window	303
3.4	Removing and installing window regulator motor	306
3.5	Removing and installing window channel	309
<b>66</b>	<b>- Exterior equipment</b>	<b>311</b>
<b>1</b>	<b>Wheel housing liner</b>	<b>311</b>
1.1	Tools	311
1.2	Front wheel housing liner	311
1.3	Rear right wheel housing liner	315
1.4	Rear left wheel housing liner	319
1.5	Side member cover	324
<b>2</b>	<b>Exterior mirror</b>	<b>325</b>
2.1	Tools	325
2.2	Assembly overview - exterior mirror	325
2.3	Removing and installing mirror glass	327
2.4	Removing and installing adjustment unit with motor	329
2.5	Removing and installing frame	330
2.6	Removing and installing mirror housing	331
2.7	Warning lamp for lane change assist	332
2.8	Removing and installing turn signal repeater	333



2.9	Removing and installing entry light	334
2.10	Removing and installing Area View camera	335
2.11	Removing and installing exterior mirror	336
<b>3</b>	<b>Radiator grille</b>	<b>339</b>
3.1	Assembly overview - radiator grille	339
3.2	Removing and installing radiator grille	339
<b>4</b>	<b>Spoiler</b>	<b>343</b>
4.1	Repair notes	343
4.2	Assembly overview - roof spoiler	346
4.3	Removing and installing roof spoiler, »R-Line«, up to 09.2014	348
4.4	Removing and installing roof spoiler, as of 09.2014	352
<b>5</b>	<b>Roof railing</b>	<b>356</b>
5.1	Tools	356
5.2	Assembly overview - roof railing	356
5.3	Removing and installing roof railing	357
5.4	Removing and installing roof railing retaining bracket	359
<b>6</b>	<b>Mouldings and trims</b>	<b>363</b>
6.1	Water deflector	363
6.2	Front and rear door covers	367
6.3	Front and rear door trim panel	373
6.4	Front and rear window channel trim strip	377
6.5	Removing and installing trim strip for rear side window	379
6.6	Front and rear wheel arch trims	380
6.7	Roof side member strip	385
<b>7</b>	<b>Lettering and emblems</b>	<b>389</b>
7.1	Dimensions - lettering and emblems on rear lid	389
7.2	Dimensions - lettering and emblems on wing	390
7.3	Removing and installing emblems at rear	392
7.4	Removing and installing badges on front	393
7.5	Removing and installing lettering	399
<b>8</b>	<b>Special add-on parts</b>	<b>401</b>
8.1	Assembly overview – special add-on parts	401