



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions for working on vehicles with auxiliary heater	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions during work on fuel system	2
1.4 Safety precautions when working on cooling system	2
1.5 Safety precautions when using testers and measuring instruments during a road test	2
1.6 Safety precautions when working on high-voltage system	2
1.7 Safety precautions when working in vicinity of high-voltage components	3
2 General information	4
2.1 Starting conditions for auxiliary/supplementary heater	4
2.2 Notes for vehicles with start-stop system	5
2.3 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	5
2.4 Type plates	5
3 Repair instructions	7
3.1 General repair instructions	7
82 - Supplementary heating	8
1 Overview of fitting locations - auxiliary/supplementary heater components	8
1.1 Overview of fitting locations - auxiliary/supplementary heater components	8
2 Auxiliary/supplementary heater	10
2.1 Overview of fitting locations - auxiliary/supplementary heater	10
2.2 Dismantling and assembling auxiliary/supplementary heater	11
2.3 Removing and installing auxiliary/supplementary heater	14
2.4 Removing and installing temperature sensor G18	17
2.5 Removing temperature sensor 2 for supplementary and auxiliary heating G587	18
2.6 Removing and installing glow plug for heater Q9	19
2.7 Removing and installing circulation pump V55	19
2.8 Removing and installing combustion air blower V6	20
2.9 Removing and installing combustion chamber	21
2.10 Removing and installing exhaust system	23
2.11 Removing heat exchanger	24
2.12 Checking flame monitor G64	25
2.13 Removing and installing flame monitor G64	25
2.14 Preliminary work for checking supplementary heater components	26
2.15 Checking glow plug for heater Q9	27
2.16 Checking combustion air blower V6	28
2.17 Checking flame monitor G64	28
2.18 Checking temperature sensor G18	29
2.19 Checking temperature sensor 2 for supplementary and auxiliary heating G587	30
2.20 Checking fuel pre-heating heater element Z66	31
2.21 Removing and installing auxiliary heater control unit J364	31
2.22 Connector pin assignment for auxiliary/supplementary heater	32
3 Coolant circuit with auxiliary/supplementary heater	34
3.1 Connection diagram - coolant hoses	34
3.2 Removing and installing heater coolant shut-off valve N279	37
3.3 Coolant hose routing on vehicles with 2nd heat exchanger	39
4 Fuel supply	41
4.1 Overview of fitting locations - fuel supply system	41
4.2 Removing and installing metering pump V54	42
4.3 Checking fuel delivery rate	43
5 Regulation of auxiliary/supplementary heater	45



5.1	Function description	45
5.2	Supplementary heater mode	46
5.3	Switching off auxiliary/supplementary heater	46
6	Other controlling and regulating components	47
6.1	Functional description of remote control for auxiliary/supplementary heater	47
6.2	Removing and installing remote control receiver for auxiliary coolant heater R149	49
6.3	Removing and installing ambient temperature sensor G17	50