



Contents

00 - Technical data	1
1 General repair instructions	1
1.1 Information on 8-speed automatic gearbox 0C8	1
1.2 Brief overview - drive train	1
1.3 Tools	2
1.4 Gearbox	2
1.5 Gaskets and seals	2
1.6 ATF	3
1.7 Nuts and bolts	3
1.8 Electrical components	4
1.9 Guided Fault Finding, vehicle self-diagnosis and test instruments	4
2 Identification of gearbox	5
3 Code letters, assembly allocation	6
3.1 Allocation for vehicles with hybrid drive	6
3.2 Allocation for vehicles with a petrol engine	6
3.3 Allocation for vehicles with a diesel engine	6
4 Capacity	7
30 - Clutch	8
1 Repairing clutch mechanism	8
1.1 Overview	8
1.2 Bleeding the hydraulic system	9
1.3 Removing and installing pressure regulator for disengagement clutch N511	10
2 Removing and installing clutch	13
2.1 Assembly overview - clutch	13
2.2 Removing and installing clutch	14
32 - Torque converter	17
1 Proper handling and installation of torque converter	17
1.1 Overview - torque converter	18
1.2 Checking torque converter	18
1.3 Removing and installing torque converter oil seal	18
1.4 Draining torque converter	19
1.5 Installing torque converter	20
37 - Controls, housing	23
1 Connecting »tester«	23
1.1 Connect vehicle diagnosis, testing and information system VAS 5051	23
2 Selector mechanism	25
2.1 Checking selector mechanism	25
2.2 Assembly overview - selector mechanism	26
2.3 Removing and installing selector lever handle	28
2.4 Moving push-button in the handle to installation position	30
2.5 Checking and adjusting selector lever cable	32
2.6 Removing and installing selector lever cable, vehicles up to 05.2012	36
2.7 Emergency release from position »P«	38
2.8 Removing and installing selector lever sensors control unit J587 with Tiptronic switch F189 , vehicles up to 05.2012	40
2.9 Removing and installing selector lever lock solenoid N110 , vehicles up to 05.2012	40
2.10 Removing and installing gear selector position P switch F305 , vehicles up to 05.2012	42
2.11 Removing and installing selector mechanism	42
3 Removing and installing gearbox - vehicles with hybrid drive	49



4	Removing and installing gearbox, vehicles with V6 TFSI engine	58
5	Removing and installing gearbox - vehicles with V6 TDI	70
6	Removing and installing gearbox - vehicles with VR6	82
7	Removing and installing gearbox - vehicles with V8 engine	91
8	Transporting gearbox	93
9	Checking and topping up ATF level	94
9.1	Checking ATF level	96
9.2	Topping up ATF	98
9.3	Draining and filling ATF	98
10	ATF pipes, ATF pre-heater and ATF cooler	101
10.1	Removing and installing ATF pipes	101
10.2	Removing and installing ATF pre-heater	101
10.3	Removing and installing ATF cooler	105
10.4	Cleaning ATF lines and ATF cooler	105
10.5	Bleeding ATF system	105
11	Removing and installing supplementary hydraulic pump for gearbox oil V475 or V476	107
12	Removing and installing automatic gearbox control unit J217	109
13	Removing and installing auxiliary hydraulic pump control unit J922	111
13.1	Removing and installing auxiliary hydraulic pump control unit J922 with start-stop system	111
14	Renewing seals	113
14.1	Renewing output shaft seal	113
14.2	Renewing oil seals for selector shaft	114
38 - Gears, control		116
1	Removing and installing sump	116
2	Removing and installing ATF strainer	118
3	Removing and installing valve body	120
3.1	Overview - valve chest	120
3.2	Removing and installing valve body	120
3.3	Removing and installing gearbox output speed sender G195	122
4	Removing, installing and adjusting multifunction switch F125	123
4.1	Removing	123
4.2	Installing and adjusting	123