



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Safety information</b>	<b>1</b>
1.1   Safety regulations for working on fuel supply	1
1.2   Safety measures when working on vehicles with a start/stop system	1
1.3   Safety precautions when using testers and measuring instruments during a road test	1
1.4   Safety precautions when working on ignition system	2
1.5   Safety precautions when working on the cooling system	2
2 <b>Identification</b>	<b>3</b>
2.1   Engine number/engine data	3
2.2   Numbering of cylinders	4
3 <b>Repair instructions</b>	<b>5</b>
3.1   Rules for cleanliness	5
3.2   Foreign objects in engine	5
3.3   Contact corrosion	5
3.4   Routing and attachment of lines	5
3.5   Fitting radiator and condensers	5
<b>10 - Removing and installing engine</b>	<b>7</b>
1 <b>Removing and installing engine</b>	<b>7</b>
1.1   Removing engine	7
1.2   Securing engine on engine and gearbox support VAS 6095	21
1.3   Installing engine	24
1.4   Dismantling and assembling engine and electric drive motor with gearbox	27
1.5   Detaching electric drive motor and gearbox	31
2 <b>Assembly mountings</b>	<b>34</b>
2.1   Assembly overview - assembly mountings	34
2.2   Removing and installing left engine mounting	34
2.3   Removing and installing right engine mounting	37
3 <b>Engine cover panel</b>	<b>41</b>
3.1   Removing and installing engine compartment cover	41
<b>13 - Crankshaft group</b>	<b>42</b>
1 <b>Cylinder block (pulley end)</b>	<b>42</b>
1.1   Assembly overview - poly V-belt drive for supercharger	42
1.2   Removing and installing supercharger poly V-belt	43
1.3   Removing and installing tensioner for supercharger poly V-belt	44
1.4   Assembly overview - poly V-belt drive	44
1.5   Removing and installing poly-V belt	45
1.6   Removing and installing tensioner for poly V-belt	46
1.7   Removing and installing vibration damper	47
1.8   Removing and installing sealing flange on pulley end	48
2 <b>Cylinder block, gearbox end</b>	<b>52</b>
2.1   Assembly overview - drive plate	52
2.2   Removing and installing drive plate	53
2.3   Removing and installing sender wheel	53
2.4   Checking sender wheel	54
2.5   Renewing crankshaft oil seal (gearbox end)	55
3 <b>Crankshaft</b>	<b>57</b>
3.1   Assembly overview - crankshaft	57
3.2   Crankshaft dimensions	60
3.3   Measuring axial clearance of crankshaft	60
3.4   Measuring radial clearance of crankshaft	61



3.5	Removing needle bearing from and installing to crankshaft .....	61
<b>4</b>	<b>Balancer shaft</b> .....	<b>63</b>
4.1	Assembly overview - balance shaft .....	63
4.2	Removing and installing balance shaft .....	63
<b>5</b>	<b>Pistons and conrods</b> .....	<b>66</b>
5.1	Assembly overview - pistons and conrods .....	66
5.2	Checking pistons and cylinder bores .....	68
5.3	Checking radial clearance of conrods .....	69
<b>15 - Cylinder head, valve gear</b>	.....	<b>70</b>
<b>1</b>	<b>Cylinder head</b> .....	<b>70</b>
1.1	Assembly overview - cylinder head .....	70
1.2	Removing and installing left cylinder head cover .....	73
1.3	Removing and installing right cylinder head cover .....	74
1.4	Removing and installing cylinder head .....	76
1.5	Checking compression .....	82
<b>2</b>	<b>Cover for timing chain</b> .....	<b>84</b>
2.1	Assembly overview - cover for timing chain .....	84
2.2	Removing and installing left and right timing chain cover .....	86
2.3	Removing and installing lower timing chain cover .....	89
<b>3</b>	<b>Chain drive</b> .....	<b>94</b>
3.1	Assembly overview - camshaft timing chains .....	94
3.2	Assembly overview - drive chain for valve gear .....	96
3.3	Assembly overview - drive chain for balance shaft and oil pump .....	97
3.4	Removing and installing camshaft timing chain .....	98
3.5	Removing and installing drive chain for valve gear .....	100
3.6	Removing and installing drive chain for balance shaft and oil pump .....	102
3.7	Checking valve timing .....	105
<b>4</b>	<b>Valve gear</b> .....	<b>108</b>
4.1	Assembly overview - valve gear .....	108
4.2	Checking axial clearance of camshaft .....	110
4.3	Measuring radial play of camshaft .....	111
4.4	Removing and installing camshaft .....	111
4.5	Removing and installing camshaft adjuster .....	118
4.6	Checking hydraulic compensation elements .....	128
4.7	Removing and installing valve stem seals with cylinder head installed .....	130
4.8	Removing and installing valve stem seals with cylinder head removed .....	134
<b>5</b>	<b>Inlet and exhaust valves</b> .....	<b>139</b>
5.1	Checking valve guides .....	139
5.2	Checking valves .....	140
5.3	Valve dimensions .....	140
<b>17 - Lubrication</b>	.....	<b>141</b>
<b>1</b>	<b>Sump, oil pump</b> .....	<b>141</b>
1.1	Assembly overview - sump/oil pump .....	141
1.2	Engine oil: .....	143
1.3	Removing and installing lower part of sump .....	145
1.4	Removing and installing upper part of sump .....	147
1.5	Removing and installing oil pump .....	150
1.6	Removing and installing oil level and oil temperature sender G266 .....	150
<b>2</b>	<b>Engine oil cooler</b> .....	<b>152</b>
2.1	Removing and installing engine oil cooler .....	152
<b>3</b>	<b>Crankcase ventilation</b> .....	<b>154</b>
3.1	Assembly overview - crankcase breather system .....	154



3.2	Removing and installing pipes for crankcase breather system . . . . .	155
3.3	Removing and installing oil separator . . . . .	155
<b>4</b>	<b>Oil filter, oil pressure switch . . . . .</b>	<b>157</b>
4.1	Assembly overview - oil filter housing, oil pressure switch . . . . .	157
4.2	Removing and installing oil pressure switch F22 . . . . .	158
4.3	Removing and installing oil pressure switch for reduced oil pressure F378 . . . . .	159
4.4	Checking oil pressure . . . . .	161
4.5	Checking oil pressure switch F22 / oil pressure switch for reduced oil pressure F378 . . . . .	162
4.6	Removing and installing oil filter housing . . . . .	162
4.7	Removing and installing oil pressure regulating valve N428 . . . . .	164
<b>19 - Cooling . . . . .</b>		<b>165</b>
<b>1</b>	<b>Cooling system/coolant . . . . .</b>	<b>165</b>
1.1	Connection diagram - coolant hoses . . . . .	165
1.2	Fitting location overview - cooling system . . . . .	167
1.3	Fitting location overview - cooling system . . . . .	170
1.4	Checking cooling system for leaks . . . . .	173
1.5	Draining and adding coolant . . . . .	177
1.6	Draining cooling system, high-temperature circuit . . . . .	187
1.7	Checking coolant quality, high-temperature circuit . . . . .	188
<b>2</b>	<b>Coolant pump, regulation of cooling system . . . . .</b>	<b>190</b>
2.1	Assembly overview - coolant pump, thermostat . . . . .	190
2.2	Removing and installing electric coolant pump . . . . .	191
2.3	Removing and installing coolant pump . . . . .	193
2.4	Removing and installing thermostat . . . . .	194
2.5	Checking thermostat . . . . .	195
2.6	Removing and installing coolant temperature sender G62 . . . . .	195
2.7	Removing and installing temperature sender for engine temperature regulation G694 . . . . .	196
<b>3</b>	<b>Coolant pipes . . . . .</b>	<b>197</b>
3.1	Assembly overview - coolant pipes . . . . .	197
3.2	Removing and installing coolant pipes for engine cooler . . . . .	198
3.3	Removing and installing coolant pipe for low-temperature cooling circuit . . . . .	200
3.4	Removing and installing front coolant pipe . . . . .	202
3.5	Removing and installing upper coolant pipe . . . . .	204
3.6	Removing and installing coolant pipe on supercharger . . . . .	205
<b>4</b>	<b>Radiator, radiator fan . . . . .</b>	<b>208</b>
4.1	Assembly overview - radiator/radiator fan . . . . .	208
4.2	Removing and installing radiator module . . . . .	209
4.3	Dismantling cooler module . . . . .	214
4.4	Removing and installing centre radiator for charge air cooling circuit . . . . .	215
4.5	Removing and installing right radiator for charge air cooling circuit . . . . .	216
4.6	Removing and installing radiator cowl . . . . .	217
<b>20 - Fuel supply system . . . . .</b>		<b>219</b>
<b>1</b>	<b>Fuel . . . . .</b>	<b>219</b>
1.1	Assembly overview - fuel tank . . . . .	219
1.2	Emptying fuel tank . . . . .	221
1.3	Removing and installing fuel tank . . . . .	223
<b>2</b>	<b>Fuel delivery unit, fuel gauge sender . . . . .</b>	<b>228</b>
2.1	Assembly overview - fuel delivery unit/fuel gauge sender . . . . .	228
2.2	Removing and installing fuel delivery unit, fuel gauge sender . . . . .	229
2.3	Removing and installing fuel gauge sender 2 G169 and suction-jet pump . . . . .	232
<b>3</b>	<b>Fuel filter . . . . .</b>	<b>237</b>
3.1	Removing and installing fuel filter . . . . .	237
<b>4</b>	<b>Activated charcoal filter system . . . . .</b>	<b>240</b>



4.1	Assembly overview - activated charcoal filter system	240
4.2	Checking fuel system for leaks	240
<b>5</b>	<b>Activated charcoal filter system, engine code CGFA</b>	<b>243</b>
5.1	Connection diagram - activated charcoal filter system	243
5.2	Assembly overview – activated charcoal filter system	243
5.3	Checking fuel system for leaks	244
<b>6</b>	<b>Accelerator pedal</b>	<b>249</b>
6.1	Assembly overview - accelerator module	249
<b>7</b>	<b>Fuel pump</b>	<b>250</b>
7.1	Checking fuel pump	250
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>259</b>
<b>1</b>	<b>Charge air system</b>	<b>259</b>
1.1	Assembly overview - charge air cooler	259
1.2	Removing and installing charge pressure sender G31 and G447	260
1.3	Removing and installing charge air cooler	261
<b>2</b>	<b>Compressor</b>	<b>265</b>
2.1	Assembly overview - supercharger	265
2.2	Assembly overview - drive unit	267
2.3	Removing and installing supercharger	267
2.4	Checking supercharger for leaks	272
2.5	Removing and installing ancillary drive unit and decoupling spring	274
2.6	For assembly work, secure supercharger on engine and gearbox support	276
2.7	For leak test, secure supercharger on engine and gearbox support	278
<b>24</b>	<b>- Mixture preparation - injection</b>	<b>280</b>
<b>1</b>	<b>Vacuum system</b>	<b>280</b>
1.1	Assembly overview - vacuum pump	280
1.2	Removing and installing vacuum pump	280
1.3	Checking vacuum system	281
1.4	Assembly overview - vacuum system	282
<b>2</b>	<b>Injectors</b>	<b>284</b>
2.1	Removing and installing injectors	284
<b>3</b>	<b>Air filter</b>	<b>287</b>
3.1	Assembly overview - air filter housing	287
3.2	Removing and installing air filter element	287
3.3	Removing and installing air filter housing	290
<b>4</b>	<b>Intake manifold</b>	<b>291</b>
4.1	Assembly overview - lower part of intake manifold with fuel rail	291
4.2	Removing and installing lower part of intake manifold with fuel rail	293
4.3	Removing and installing throttle valve module J338	296
4.4	Removing and installing regulating flap control unit J808	297
4.5	Removing and installing vacuum servo element for actuating intake manifold flaps	299
<b>5</b>	<b>Senders and sensors</b>	<b>301</b>
5.1	Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	301
5.2	Removing and installing intake manifold flap potentiometer G336 / intake manifold flap potentiometer 2 G512	301
<b>6</b>	<b>Engine control unit</b>	<b>302</b>
6.1	Removing and installing engine (motor) control unit J623	302
<b>7</b>	<b>High-pressure pump</b>	<b>304</b>
7.1	Assembly overview - high-pressure pump	304
7.2	Removing and installing high-pressure pump	305
7.3	Removing and installing high-pressure pipe	308



<b>8</b>	<b>Lambda probes</b>	<b>311</b>
8.1	Assembly overview - Lambda probe	311
8.2	Removing and installing Lambda probe G39	312
8.3	Removing and installing Lambda probe after catalytic converter G130	313
8.4	Removing and installing Lambda probe 2 G108	315
8.5	Removing and installing Lambda probe 2 after catalytic converter G131	316
<b>26 - Exhaust system</b>		<b>319</b>
1	<b>Exhaust pipes and silencers</b>	<b>319</b>
1.1	Assembly overview - silencers	319
1.2	Separating exhaust pipes from silencers	320
1.3	Replacing tail pipes	321
1.4	Aligning exhaust system free of stress	321
1.5	Checking exhaust system for leaks	322
2	<b>Emission control</b>	<b>323</b>
2.1	Assembly overview - emission control	323
2.2	Removing and installing left catalytic converter, bank 2	324
2.3	Removing and installing right catalytic converter, bank 1	326
3	<b>Secondary air system</b>	<b>328</b>
3.1	Assembly overview - secondary air system	328
3.2	Removing and installing secondary air pump motor V101	329
3.3	Checking combination valves for secondary air system for proper operation and leakage	330
3.4	Removing and installing left combination valve for secondary air system	331
3.5	Removing and installing right combination valve for secondary air system	332
3.6	Removing and installing sender 1 for secondary air pressure G609	333
4	<b>Exhaust manifold</b>	<b>335</b>
4.1	Assembly overview - exhaust manifold	335
4.2	Removing and installing left exhaust manifold, bank 2	336
4.3	Removing and installing right exhaust manifold, bank 1	338
<b>28 - Ignition system</b>		<b>340</b>
1	<b>Ignition system</b>	<b>340</b>
1.1	Assembly overview - ignition system	340
1.2	Test data, spark plugs	341
1.3	Removing and installing ignition coils with output stage	342
1.4	Removing and installing knock sensors G61 and G66	345
1.5	Removing and installing Hall senders G40 and G163	346
1.6	Removing and installing engine speed sender G28	346