



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Engine and gearbox	3
1.1 Removing and installing engine cover	3
1.2 Removing engine	3
1.3 Separating engine and gearbox	17
1.4 Removing engine from scissor-type assembly platform VAS 6131	24
1.5 Securing engine to assembly stand	24
1.6 Notes on installing	26
1.7 Supporting engine in installation position	28
2 Assembly mountings	31
2.1 Assembly overview - assembly mountings	31
2.2 Removing and installing engine mounting	32
2.3 Removing and installing engine mounting	33
13 - Crankshaft group	35
1 Dismantling and assembling engine	35
1.1 Assembly overview - poly V-belt drive	36
1.2 Removing and installing poly-V belt	40
1.3 Renewing crankshaft oil seal – belt pulley end	42
1.4 Removing and installing front sealing flange	43
1.5 Assembly overview - drive plate	46
1.6 Removing and installing drive plate	48
1.7 Renewing crankshaft oil seal – timing chain end	48
1.8 Assembly overview - timing chain covers	50
1.9 Removing and installing timing chain cover (left)	52
1.10 Removing and installing timing chain cover (right)	54
1.11 Removing and installing timing chain cover (bottom)	57
1.12 Assembly overview - balance shaft	63
1.13 Removing and installing balance shaft	63
2 Chain drive	67
2.1 Assembly overview - drive chain for valve gear	67
2.2 Removing and installing drive chain for valve gear	68
2.3 Assembly overview - chain for balance shaft and oil pump	69
2.4 Removing and installing chain for balance shaft and oil pump	71
3 Removing and installing crankshaft	75
3.1 Assembly overview - crankshaft	75
3.2 Crankshaft dimensions	77
3.3 Measuring axial clearance	77
3.4 Measuring radial clearance	78
4 Pistons and conrods	79
4.1 Assembly overview - pistons and conrods	79
4.2 Checking piston projection at TDC	82
4.3 Piston and cylinder dimensions	84
4.4 Checking radial clearance of conrods	84
15 - Cylinder head, valve gear	85
1 Cylinder head	85



1.1	Assembly overview - cylinder head	85
1.2	Assembly overview - cylinder head cover	88
1.3	Removing and installing cylinder head cover	90
1.4	Removing and installing cylinder head	95
1.5	Checking compression	102
1.6	Assembly overview - vacuum pump	103
2	Assembly overview - valve gear	105
2.1	Checking axial clearance of camshafts	106
2.2	Renewing camshaft oil seal	107
2.3	Removing and installing camshafts	110
2.4	Renewing valve stem seals	116
2.5	Checking hydraulic valve compensation elements	120
2.6	Valve dimensions	121
2.7	Checking valve guides	121
3	Chain drive for camshafts	123
3.1	Camshaft timing chains	123
17	Lubrication	142
1	Engine oil:	142
1.1	Oil capacities	142
1.2	Using tester to check engine oil level	142
2	Parts of lubrication system	144
2.1	Assembly overview - oil pump, lower part of sump	144
2.2	Removing and installing lower part of sump	146
2.3	Removing and installing oil pump	149
2.4	Assembly overview - upper part of sump	150
2.5	Removing and installing oil pressure switch F22	152
2.6	Removing and installing oil pressure regulating valve N428	152
2.7	Removing and installing upper part of sump	153
3	Engine oil cooler, pressure control valve and oil filter housing	156
3.1	Assembly overview - engine oil cooler, pressure control valve and oil filter housing	156
3.2	Removing and installing engine oil cooler	157
3.3	Removing and installing oil filter housing	158
3.4	Removing and installing pressure control valve for crankcase breather system	159
3.5	Removing and installing mounting plate for engine oil cooler, pressure control valve and oil filter housing	160
3.6	Removing and installing oil pressure switch F1 / oil pressure switch for reduced oil pressure F378	161
3.7	Checking oil pressure and oil pressure switch	161
19	Cooling	164
1	Cooling system	164
1.1	Coolant hose connection diagram	164
1.2	Assembly overview - coolant pipes	166
1.3	Removing and installing coolant pipes	170
1.4	Removing and installing coolant temperature sender G62	183
1.5	Removing and installing radiator outlet coolant temperature sender G83	184
1.6	Assembly overview - pump for exhaust gas recirculation cooler V400	185
1.7	Removing and installing pump for exhaust gas recirculation cooler V400	186
2	Coolant	187
2.1	Draining coolant	187
2.2	Draining cooling system	188
2.3	Filling with coolant	189
2.4	Checking filling quality	192
2.5	Checking cooling system for leaks	193



3	Radiator module and radiator fan	196
3.1	Assembly overview - radiator module and radiator fan	196
3.2	Removing and installing radiator cowl and radiator fan	197
3.3	Removing, installing and dismantling radiator module	197
4	Coolant pump and thermostat	203
4.1	Assembly overview - thermostat and coolant pump (engine codes CASA and CASD)	203
4.2	Assembly overview - coolant pump and thermostat (engine code CATA)	204
4.3	Removing and installing coolant pump	204
4.4	Removing and installing thermostat with union (engine codes CASA and CASD)	206
4.5	Removing and installing thermostat with union (engine code CATA)	206
4.6	Removing and installing thermostat for exhaust gas recirculation with union (engine code CATA)	207
21	Turbocharging/supercharging	209
1	Turbocharger	209
1.1	Rules for cleanliness	209
1.2	Assembly overview - turbocharger	209
1.3	Removing and installing turbocharger	212
1.4	Removing and installing turbocharger 1 control unit J724	217
2	Charge air cooling	229
2.1	Removing and installing parts of charge air cooling	229
2.2	Charge air cooler parts	229
2.3	Checking charge air system for leaks	230
23	Mixture preparation - injection	233
1	Safety precautions and rules for cleanliness	233
1.1	Safety precautions	233
1.2	Rules for cleanliness and instructions for working on fuel system	234
2	Diesel direct injection system	236
2.1	Schematic overview of the fuel system	236
2.2	Assembly overview - fuel system	239
2.3	Removing and installing injectors (piezo injectors)	242
2.4	Installing high-pressure lines	247
2.5	Testing injectors	249
2.6	Checking and setting injector correction values	249
2.7	Checking return flow rate of injectors (piezo injectors) with engine running	250
2.8	Checking return flow rate of injectors (piezo injectors) at cranking speed	251
2.9	Checking for injectors sticking open (piezo injectors)	253
2.10	Checking throttle in fuel return line	255
2.11	Assembly overview - toothed belt for high-pressure pump	255
2.12	Removing and installing toothed belt for high-pressure pump	257
2.13	Assembly overview - high-pressure pump	264
2.14	Removing and installing high-pressure pump	266
2.15	Removing and installing fuel pressure regulating valve N276	267
2.16	Checking fuel pressure regulating valve N276	269
2.17	Removing and installing fuel pressure sender G247	270
2.18	Bleeding fuel system/filling tank with fuel for first time	271
2.19	Checking fuel system for leaks	272
3	Intake manifolds	273
3.1	Assembly overview - intake manifold	273
3.2	Removing and installing intake manifold upper part	274
3.3	Removing and installing lower parts of intake manifold	276
4	Air filter	281
4.1	Assembly overview - air filter	281
5	Engine (motor) control unit	282



5.1	Removing and installing engine control unit J623	282
26	- Exhaust system	284
1	Parts of the exhaust system	284
1.1	Assembly overview - front exhaust pipe with catalytic converter and particulate filter (engine codes CASA and CASD)	285
1.2	Assembly overview - front exhaust pipe with catalytic converter, reduction catalytic converter and particulate filter (engine code CATA)	287
1.3	Removing and installing starter catalytic converter	288
1.4	Removing and installing particulate filter	291
1.5	Removing and installing reduction catalytic converter	294
1.6	Assembly overview - exhaust gas temperature regulation (engine codes CASA and CASD)	294
1.7	Assembly overview - exhaust gas temperature regulation (engine code CATA)	300
1.8	Silencer with mountings	311
1.9	SCR system (selective catalytic reduction)	312
1.10	Replacing tail pipes	330
1.11	Aligning exhaust system free of stress	330
1.12	Checking exhaust system for leaks	331
1.13	Assembly overview - exhaust manifold with intermediate pipe	331
1.14	Removing and installing left exhaust manifold	332
1.15	Removing and installing right exhaust manifold	334
1.16	Removing and installing intermediate pipe (left side)	336
1.17	Removing and installing intermediate pipe (right side)	338
2	Exhaust gas temperature regulation (engine codes CASA and CASD)	340
2.1	Assembly overview - exhaust gas recirculation system	340
2.2	Removing and installing exhaust gas recirculation control motor V338	341
2.3	Removing and installing exhaust gas recirculation cooler	342
2.4	Removing and installing exhaust gas recirculation temperature sensor G98	345
3	Exhaust gas recirculation (engine code CATA)	347
3.1	Assembly overview - exhaust gas recirculation system	347
3.2	Assembly overview - supplementary cooler for exhaust gas recirculation system	349
3.3	Removing and installing exhaust gas recirculation control motor V338	349
3.4	Removing and installing exhaust gas recirculation cooler	350
3.5	Removing and installing supplementary cooler for exhaust gas recirculation system	353
3.6	Removing and installing exhaust gas recirculation temperature sensor G98	355
28	- Glow plug system	356
1	Glow plug system	356
1.1	Assembly overview - Glow plugs, Hall sender, engine speed sender	356
1.2	Removing and installing glow plugs	356
1.3	Removing and installing engine speed sender G28	358
1.4	Removing and installing Hall sender G40	359