



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Engine and gearbox	3
1.1 Removing and installing engine cover	3
1.2 Removing motor	3
1.3 Separating engine and gearbox	20
1.4 Removing and installing engine supports	27
1.5 Securing engine on engine and gearbox support	31
1.6 Installing engine	35
1.7 Supporting engine in installation position	40
1.8 Removing and installing engine mounting	42
2 Assembly mountings	44
2.1 Assembly overview - assembly mountings	44
2.2 Removing and installing left engine mounting	45
2.3 Removing and installing right engine mounting	47
13 - Crankshaft group	49
1 Cylinder block (pulley end)	49
1.1 Assembly overview - poly V-belt drive	49
1.2 Removing and installing poly-V belt	51
1.3 Removing and installing tensioning element for poly V-belt	53
1.4 Removing and installing vibration damper	53
1.5 Assembly overview - oil seal and sealing flange on pulley end	55
1.6 Replacing oil seal for crankshaft at belt pulley end	56
1.7 Removing and installing sealing flange on pulley end	58
2 Cylinder block, gearbox end	64
2.1 Assembly overview - drive plate	64
2.2 Removing and installing drive plate	64
2.3 Renewing oil seal for crankshaft at gearbox end	65
2.4 Removing and installing engine speed sender G28	68
3 Crankshaft	69
3.1 Assembly overview - crankshaft	69
3.2 Allocation of main bearing shells for new crankshaft	71
3.3 Allocation of crankshaft bearing shells for retaining frame without visible colour coding	74
3.4 Crankshaft dimensions	75
3.5 Measuring axial clearance	75
3.6 Measuring radial clearance	76
4 Pistons and conrods	77
4.1 Assembly overview - pistons and conrods	77
4.2 Measuring piston projection at "TDC"	82
4.3 Piston and cylinder dimensions	85
4.4 Measuring radial clearance of conrods	85
4.5 Allocation of conrod bearing shells	85
15 - Cylinder head, valve gear	86
1 Timing chain covers	86
1.1 Assembly overview - timing chain covers	86
1.2 Renewing oil seal for toothed belt pulley	89



1.3	Removing and installing timing chain cover (left)	91
1.4	Removing and installing timing chain cover (right)	94
1.5	Removing and installing timing chain cover (bottom)	97
2	Chain drive	103
2.1	Assembly overview - camshaft timing chains	103
2.2	Removing camshaft timing chains from camshafts	105
2.3	Removing and installing camshaft timing chains	117
2.4	Assembly overview - drive chain for valve gear	129
2.5	Removing and installing drive chain for valve gear	131
2.6	Assembly overview - drive chain for auxiliary drives	132
2.7	Removing and installing drive chain for auxiliary drives	132
2.8	Assembly overview - auxiliary drives	134
2.9	Renewing oil seal for vane pump drive	136
2.10	Removing and installing spur gear drive	137
3	Cylinder head	142
3.1	Assembly overview - cylinder head cover	142
3.2	Removing and installing cylinder head cover	144
3.3	Assembly overview - cylinder head	146
3.4	Removing cylinder head	149
3.5	Installing cylinder head	152
3.6	Checking compression	157
4	Valve gear	159
4.1	Assembly overview - valve gear	159
4.2	Measuring axial clearance of camshaft	161
4.3	Measuring radial clearance of camshafts	162
4.4	Removing and installing camshafts	163
4.5	Checking hydraulic compensation elements	170
4.6	Renewing valve stem seals with cylinder head installed	172
4.7	Renewing valve stem seals with cylinder head removed	177
4.8	Valve dimensions	182
4.9	Reworking valve seats	182
4.10	Checking valve guides	182
4.11	Checking valves	184
17	Lubrication	185
1	Engine oil:	185
1.1	Oil capacities	185
1.2	Using tester to check engine oil level	185
2	Oil pump, lower part of sump, upper part of sump	187
2.1	Assembly overview - oil pump, lower part of sump, upper part of sump	187
2.2	Removing and installing oil level and oil temperature sender G266	191
2.3	Removing and installing lower part of sump	191
2.4	Removing and installing oil pump	195
2.5	Removing and installing upper part of sump	196
3	Engine oil cooler, pressure regulating valve for crankcase breather, oil filter housing	201
3.1	Assembly overview - engine oil cooler, pressure regulating valve for crankcase breather, oil filter housing	201
3.2	Removing and installing engine oil cooler	203
3.3	Removing and installing oil filter housing	205
3.4	Removing and installing pressure control valve for crankcase breather system	207
3.5	Removing and installing mounting plate for engine oil cooler, pressure regulating valve for crankcase breather system and oil filter housing	207
3.6	Removing and installing oil pressure switch F22	209
3.7	Removing and installing oil pressure switch for reduced oil pressure F378	209
3.8	Removing and installing oil temperature sender G8	210



3.9	Removing and installing oil pressure regulating valve N428	210
3.10	Checking oil pressure	212
19	Cooling	214
1	Cooling system	214
1.1	Coolant hose connection diagram	214
1.2	Locations	215
1.3	Assembly overviews	218
1.4	Assembly overview - pump for exhaust gas recirculation cooler V400	221
1.5	Removing and installing pump for exhaust gas recirculation cooler V400	222
2	Coolant	224
2.1	Draining coolant	224
2.2	Draining cooling system	225
2.3	Filling with coolant	227
2.4	Checking filling quality	230
2.5	Checking cooling system for leaks	231
3	Radiator module and radiator fan	234
3.1	Assembly overview - radiator module and radiator fan	234
3.2	Removing and installing radiator cowl and radiator fan	234
3.3	Removing, installing and dismantling radiator module	236
4	Coolant pump and thermostat	242
4.1	Assembly overview - coolant pump and thermostat	242
4.2	Removing and installing coolant pump	243
4.3	Removing and installing thermostat	247
21	Turbocharging/supercharging	250
1	Rules for cleanliness	250
2	Turbocharger	251
2.1	Assembly overview - turbocharger	251
2.2	Removing and installing turbocharger on left	254
2.3	Removing and installing turbocharger on right	258
2.4	Removing and installing sender 1 for turbocharger speed G688	261
2.5	Removing and installing sender 2 for turbocharger speed G689	263
3	Charge air cooling	266
3.1	Assembly overview - air ducts	266
3.2	Assembly overview - charge air cooling	267
3.3	Removing and installing charge air cooler	268
3.4	Removing and installing intake air temperature sender G42 with charge air pressure sender G31	270
3.5	Checking charge air system for leaks	271
4	Vacuum system	274
4.1	Overview - vacuum system	274
4.2	Checking vacuum system	274
23	Mixture preparation - injection	276
1	Safety precautions and rules for cleanliness	276
1.1	Safety precautions	276
1.2	Rules for cleanliness and instructions for working on fuel system	277
2	Diesel direct injection system	280
2.1	Schematic overview of the fuel system	281
2.2	Assembly overview - fuel system	283
2.3	Assembly overview - injectors and high-pressure lines	287
2.4	Removing and installing injectors	291
2.5	Testing injectors	296
2.6	Checking and setting injector correction values	296



2.7	Measuring return rate of injectors with engine running	297
2.8	Measuring return rate of injection units at starter speed	301
2.9	Testing jammed-open injectors	303
2.10	Checking throttle in fuel return line	305
2.11	Installing high-pressure lines	306
2.12	Installing fuel return lines	308
2.13	Assembly overview - toothed belt for high-pressure pump	308
2.14	Removing and installing toothed belt for high-pressure pump	309
2.15	Assembly overview - high-pressure pump	317
2.16	Removing and installing high-pressure pump	319
2.17	Checking fuel pressure regulating valve N276	321
2.18	Removing and installing fuel pressure regulating valve N276	322
2.19	Removing and installing fuel pressure sender G247	324
2.20	Bleeding fuel system/filling tank with fuel for first time	325
2.21	Checking fuel system for leaks	326
3	Intake manifolds	327
3.1	Assembly overview - intake manifolds	327
3.2	Removing and installing intake manifold upper part	329
3.3	Removing and installing lower part of intake manifold on right (cylinder bank 1)	330
3.4	Removing and installing lower part of intake manifold on left (cylinder bank 2)	331
4	Air filter	333
4.1	Assembly overview - air filter	333
4.2	Removing and installing lower part of air filter	335
5	Engine control units	337
5.1	Removing and installing engine control unit J623 and engine control unit 2 J624	337
26	Exhaust system	340
1	Particulate filters and catalytic converters	340
1.1	Assembly overview - particulate filters and catalytic converters	340
1.2	Removing and installing particulate filter	342
1.3	Removing and installing catalytic converters	345
2	Silencers and exhaust manifolds	348
2.1	Silencer	348
2.2	Exhaust manifold	354
3	Lambda probes, exhaust temperature and pressure senders	359
3.1	Assembly overview - Lambda probes, exhaust temperature and pressure senders	359
3.2	Removing and installing exhaust gas temperature sender 1 G235	361
3.3	Removing and installing exhaust gas temperature sender 1 for cylinder bank 2 G236	362
3.4	Removing and installing Lambda probe G39 with Lambda probe heater Z19	363
3.5	Removing and installing Lambda probe 2 G108	365
3.6	Removing and installing pressure differential sender G505 or pressure differential sender 2 G524	366
3.7	Removing and installing temperature sender in front of particulate filters G495 and G497	371
4	Exhaust gas recirculation	375
4.1	Assembly overview - exhaust gas recirculation	375
4.2	Removing and installing exhaust gas recirculation control motor V338/V339	377
4.3	Assembly overview - exhaust gas recirculation cooler	378
4.4	Removing and installing exhaust gas recirculation cooler	380
4.5	Removing and installing exhaust gas recirculation temperature sensor G98	382
28	Glow plug system	383
1	Removing and installing glow plugs	383