



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety regulations for working on fuel supply	2
2.2 Safety measures when working on vehicles with a start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
<b>3 General information</b>	<b>4</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
<b>4 Repair instructions</b>	<b>5</b>
4.1 Rules for cleanliness	5
4.2 Foreign objects in engine	5
4.3 Contact corrosion	5
4.4 Routing and attachment of lines	6
4.5 Fitting radiator and condensers	6
<b>20 - Fuel supply system</b>	<b>7</b>
<b>1 Procedure in event of misfuelling</b>	<b>7</b>
1.1 Step 1 (Engine was started with incorrect fuel)	7
1.2 Step 2 (Engine was not started with incorrect fuel)	8
1.3 Step 3 (There are filings in fuel delivery unit and fuel tank)	9
1.4 Step 4 (There are no filings in fuel delivery unit and fuel tank)	10
1.5 Step 5 (There are filings in high-pressure pump)	10
1.6 Step 6 (There are no filings in high-pressure pump)	11
<b>2 Fuel</b>	<b>12</b>
2.1 Assembly overview - fuel tank	12
2.2 Removing and installing fuel tank	13
2.3 Emptying fuel tank	16
2.4 Removing and installing misfuelling prevention device	20
2.5 Deactivating misfuelling prevention device	25
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>26</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	26
3.2 Removing and installing fuel delivery unit, fuel gauge sender	27
<b>4 Plug-in connectors</b>	<b>30</b>
4.1 Separating plug-in connectors	30
<b>5 Fuel filter</b>	<b>34</b>
5.1 Assembly overview - fuel filter	34
<b>6 Accelerator pedal</b>	<b>36</b>
6.1 Assembly overview - accelerator module	36
<b>7 Fuel pump</b>	<b>37</b>
7.1 Checking fuel system pressurisation pump G6	37
7.2 Removing and installing suction-jet pump	47