

001 - Basic equipment	1-24
1. Basic equipment	1
2. Light switch, Onboard supply control unit	2
3. Onboard supply control unit, Front left headlight	3
4. Headlight range control regulator, Onboard supply control unit, Front right headlight	4
5. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left entry light, Front right entry light, Entry light in exterior mirror, driver side, Entry light in exterior mirror, passenger side	5
6. Onboard supply control unit, Front roof module, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	6
7. Onboard supply control unit, Front roof module, Rear left reading light, Rear right reading light	7
8. Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel central vent illumination bulb, Dash panel right vent illumination bulb	8
9. Onboard supply control unit, Front left footwell illumination bulb, Cigarette lighter, 12 V socket 2, 12 V socket 3, 12 V socket 4	9
10. Hazard warning light switch, Onboard supply control unit, Rear left footwell illumination bulb, Rear right footwell illumination bulb, Front right footwell illumination bulb	10
11. Bonnet contact switch, Treble horn, Bass horn, Horn relay, Onboard supply control unit	11
12. Alarm horn, Onboard supply control unit, Headlight washer system pump, Windscreen and rear window washer pump	12
13. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Humidity sender for air conditioning system, Rain and light sensor, Onboard supply control unit	13
14. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection, Windscreen wiper motor	14
15. Onboard supply control unit, Data bus diagnostic interface	15
16. Coil connector, Horn plate, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	16
17. Left steering column switch, Steering column electronics control unit	17
18. Steering column electronics control unit	18
19. Fuel delivery unit, Dash panel insert	19
20. Ignition/starter switch, Convenience system central control unit	20
21. Convenience system central control unit, Rear left fog light bulb, Left tail light cluster, Left tail light cluster 2	21
22. Convenience system central control unit, Rear right fog light bulb, Right tail light cluster, Right tail light cluster 2, Left number plate light, Right number plate light	22
23. Convenience system central control unit, High-level brake light bulb, Rear window wiper motor, Left luggage compartment light, Right luggage compartment light, Rear lid light	23
24. Heated rear window relay, Convenience system central control unit, Control unit for electronic steering column lock, Heated rear window	24
002 - Fuse assignment	25-47
1. Fuse assignment	25
2. Battery, Battery monitor control unit, Connection and distribution box 3, Terminal 30 wiring junction 3	26
3. Connection and distribution box 3, Terminal 30 wiring junction 3	27
4. Fuse holder B	28
5. Fuse holder B	29
6. Fuse holder B	30
7. Fuse holder B	31
8. Fuse holder B	32
9. Fuse holder B	33
10. Fan enabling relay, Fuse holder B	34
11. Fuse holder B	35
12. Fuse holder B	36
13. Fuse holder B	37
14. Fuse holder C	38
15. Fuse holder C	39
16. Fuse holder C	40
17. Fuse holder C	41
18. Fuse holder C	42
19. Fuse holder C	43
20. Relay for power sockets, Fuse holder C	44
21. Voltage stabiliser, Fuse holder C	45
22. Fuse holder C	46
23. Fuse holder C	47

003 - 3.0l diesel engine , CASA,CASD	48-67
1. 3.0l diesel engine , CASA,CASD	48
2. Starter, Alternator with voltage regulator, Starter motor relay, Starter motor relay 2, Terminal 30 wiring junction	49
3. Terminal 30 voltage supply relay, Fuses in fuse holder	50
4. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	51
5. Brake light switch, Radiator fan control unit, Convenience system central control unit, Engine/motor control unit	52
6. High-pressure sender, Exhaust gas recirculation potentiometer, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	53
7. Intake air temperature sender, Pressure differential sender, Engine/motor control unit	54
8. Additional coolant pump relay, Engine/motor control unit, Residual heat relay	55
9. Throttle valve module, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	56
10. Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Pump for exhaust gas recirculation cooler	57
11. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine/motor control unit	58
12. Engine speed sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine/motor control unit	59
13. Position sender for charge pressure positioner, Engine/motor control unit	60
14. Accelerator position sender, Accelerator position sender 2, Fuel pressure sender, Engine/motor control unit	61
15. Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	62
16. Fuel temperature sender, Radiator outlet coolant temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Injector, cylinder 5, Injector, cylinder 6	63
17. Oil pressure switch for reduced oil pressure, Air mass meter, Engine/motor control unit	64
18. Oil pressure switch, Oil level and oil temperature sender, Engine/motor control unit	65
19. Data bus diagnostic interface	66
20. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	67
004 - Convenience system	68-83
1. Convenience system	68
2. Driver side central locking lock unit, Humidity sender for air conditioning system, Rain and light sensor, Driver door control unit, Automatic anti-dazzle interior mirror	69
3. Mirror adjustment switch, Alarm system off switch, Driver door control unit, Driver side window regulator motor, Automatic anti-dazzle interior mirror	70
4. Operating unit for window regulator in driver door, Driver door control unit	71
5. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor	72
6. Driver door control unit, Central locking SAFELOCK function warning lamp, Lane change assist warning lamp in driver side exterior mirror, Driver door opener illumination bulb, Driver side exterior mirror, Driver side door warning lamp	73
7. Seat memory position button 1, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	74
8. Seat memory position button 1, Front passenger side central locking lock unit, Driver door control unit, Front passenger door control unit, Front passenger side window regulator motor	75
9. Front passenger door control unit, Front passenger side exterior mirror, Front passenger side mirror adjustment motor	76
10. Front passenger side interior locking button for central locking system, Front passenger door control unit, Lane change assist control unit 2, Lane change assist warning lamp in front passenger side exterior mirror, Front passenger side exterior mirror	77
11. Seat memory position button 1 in front passenger door, Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger side door warning lamp	78
12. Rear left central locking lock unit, Rear left ashtray illumination bulb, Rear left door opener illumination bulb, Rear left window regulator motor	79
13. Rear left interior locking button for central locking system, Rear right central locking lock unit, Rear right window regulator motor, Rear left door warning lamp	80
14. Rear right interior locking button for central locking system, Rear right ashtray illumination bulb, Rear right door opener illumination bulb, Rear right door warning lamp	81
15. Convenience system central control unit, Engine control unit, Central locking and anti-theft alarm system aerial, Tank filler flap locking motor	82
16. Onboard supply control unit, Data bus diagnostic interface	83
005 - Automatic gearbox	84-90
1. Automatic gearbox	84
2. Automatic gearbox control unit. Gearbox hydraulic pump relav. Control unit for auxiliari	85

hydraulic pump, Auxiliary hydraulic pump 2 for gearbox oil	
3. Multifunction switch, Automatic gearbox control unit, Convenience system central control unit, Cooling oil valve	86
4. Automatic gearbox control unit, Gearbox	87
5. Automatic gearbox control unit, Gearbox	88
6. Tiptronic switch, Onboard supply control unit, Selector lever lock solenoid, Selector lever position display	89
7. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Steering column electronics control unit, Data bus diagnostic interface, Dash panel insert	90
006 - Parking aid (PDC)	91-95
1. Parking aid (PDC)	91
2. Parking aid button, Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit	92
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	93
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	94
5. Parking aid control unit, Control unit with display for radio and navigation, Data bus diagnostic interface, Radio	95
007 - TV tuner, card reader unit (Japan)	96-98
1. TV tuner, card reader unit (Japan)	96
2. Control unit 1 for information electronics, TV tuner, DVD changer	97
3. TV tuner, Left aerial module, Right aerial module, TV card reader	98
008 - Overhead view camera	99-102
1. Overhead view camera	99
2. Parking aid button, Control unit for overhead view camera, Front overhead view camera	100
3. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera	101
4. Onboard supply control unit, Control unit for overhead view camera, Rear overhead view camera	102
009 - "Keyless access" locking and starting system	103-106
1. "Keyless access" locking and starting system	103
2. Convenience system central control unit, Entry and start authorisation control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	104
3. Entry and start authorisation button, Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit, Entry and start authorisation control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	105
4. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit, Entry and start authorisation control unit	106
010 - 4.2l diesel engine , CKDA	107-128
1. 4.2l diesel engine , CKDA	107
2. Starter, Alternator with voltage regulator, Starter motor relay, Starter motor relay 2, Terminal 30 wiring junction	108
3. Terminal 30 voltage supply relay, Fuses in fuse holder	109
4. Additional coolant pump relay, Residual heat relay, Circulation pump	110
5. Automatic glow period control unit	111
6. Glow period control unit 2	112
7. Air mass meter, Engine/motor control unit	113
8. Brake light switch, Throttle valve module, Convenience system central control unit, Engine/motor control unit, Intake manifold flap motor, Connection (5V) in engine prewiring harness	114
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4	115
10. Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Pressure differential sender, Exhaust gas temperature sender 4, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	116
11. Oil pressure switch for reduced oil pressure, Hall sender, Accelerator position sender, Fuel pressure sender, Sender 1 for turbocharger speed, Pressure sender for exhaust gas recirculation, Engine/motor control unit	117
12. Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather, Fuel pressure regulating valve, Air conditioner compressor regulating valve, Fuel metering valve, Heater element 2 for crankcase breather, Pump for exhaust gas recirculation cooler	118
13. Exhaust gas recirculation valve 1, Engine speed sender, Fuel temperature sender, Engine/motor control unit, Turbocharger 1 control unit	119
14. Oil temperature sender, Charge pressure sender, Lambda probe, Intake air temperature sender, Coolant temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Lambda probe heater	120
15. Radiator fan control unit, Engine/motor control unit, Engine/motor control unit 2	121
16. Lambda probe 2. Engine/motor control unit 2. Iniector. cvlinder 2. Iniector. cvlinder 3.	122

Injector, cylinder 5, Injector, cylinder 8, Lambda probe heater 2	
17. Oil pressure switch, Throttle valve module 2, Engine/motor control unit 2, Intake manifold flap 2 motor	123
18. Exhaust gas recirculation valve 2, Pressure differential sender 2, Engine/motor control unit 2, Turbocharger 2 control unit	124
19. Air mass meter 2, Sender 2 for turbocharger speed, Pressure sender 2 for exhaust gas recirculation, Engine/motor control unit 2	125
20. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1 for bank 2, Exhaust gas temperature sender 3 for bank 2, Engine/motor control unit 2	126
21. Data bus diagnostic interface	127
22. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	128
011 - 3.0l diesel engine with start/stop system , CASA	129-149
1. 3.0l diesel engine with start/stop system , CASA	129
2. Starter, Alternator with voltage regulator, Starter relay 1, Starter relay 2, Terminal 30 wiring junction	130
3. Terminal 30 voltage supply relay, Fuses in fuse holder, Wiring connector	131
4. Start/stop operation button, High-pressure sender, Onboard supply control unit, Air conditioner compressor regulating valve	132
5. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	133
6. Brake light switch, Radiator fan control unit, Engine/motor control unit	134
7. Exhaust gas recirculation potentiometer, Convenience system central control unit, Engine/motor control unit	135
8. Intake air temperature sender, Brake servo pressure sensor, Pressure differential sender, Engine/motor control unit	136
9. Additional coolant pump relay, Engine/motor control unit, Residual heat relay	137
10. Throttle valve module, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	138
11. Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Pump for exhaust gas recirculation cooler	139
12. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine/motor control unit	140
13. Engine speed sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine/motor control unit	141
14. Position sender for charge pressure positioner, Engine/motor control unit	142
15. Accelerator position sender, Accelerator position sender 2, Fuel pressure sender, Engine/motor control unit	143
16. Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	144
17. Fuel temperature sender, Radiator outlet coolant temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Injector, cylinder 5, Injector, cylinder 6	145
18. Oil pressure switch for reduced oil pressure, Air mass meter, Engine/motor control unit	146
19. Oil pressure switch, Oil level and oil temperature sender, Engine/motor control unit	147
20. Data bus diagnostic interface	148
21. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	149
012 - Adjustable seat , (3L5)	150-153
1. Adjustable seat , (3L5)	150
2. Driver seat adjustment operating unit, Driver seat backrest adjustment motor, Driver seat height adjustment motor	151
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Front passenger seat lumbar support height adjustment motor	152
4. Front passenger seat adjustment operating unit, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	153
013 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	154-160
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	154
2. ABS control unit	155
3. Auto-hold button, Hill descent control button, ABS control unit	156
4. Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Rear right brake pad wear sender, Vacuum sender, ABS control unit, Onboard supply control unit	157

5. Driver side central locking lock unit, Contact switch for locking pawl, Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Driver door control unit	158
6. Button for TCS and electronic stabilisation program, Sensor unit for electronic stabilisation program, Lateral acceleration sender, Yaw rate sender, Longitudinal acceleration sender, ABS control unit	159
7. Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	160
014 - Transfer box (centre differential lock, all-wheel drive), differential lock (axle differential lock, rear final drive)	161-166
1. Transfer box (centre differential lock, all-wheel drive), differential lock (axle differential lock, rear final drive)	161
2. Onboard supply control unit, Transfer box control unit	162
3. Transfer box control unit, Inter-axle lock	163
4. Data bus diagnostic interface, Transfer box control unit, Inter-axle lock	164
5. Transfer box operating unit, Transfer box control unit	165
6. Axle differential lock control unit, Axle differential lock motor	166
015 - Airbag systems	167-174
1. Airbag systems	167
2. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	168
3. Rear side airbag crash sensor on front passenger side, Airbag control unit, Battery regulation control unit, Front passenger side airbag deactivated warning lamp, Battery isolation igniter	169
4. Driver side belt switch, Front passenger side belt switch, Key operated switch to deactivate front passenger side airbag, Seat occupied sensor, front passenger side, Airbag control unit	170
5. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	171
6. Airbag control unit, Front passenger side airbag igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	172
7. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on front passenger side, Driver side knee airbag igniter	173
8. Airbag coil connector and return ring with slip ring, Airbag control unit, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, Dash panel insert, Driver side airbag igniter, Driver side airbag igniter 2	174
016 - Adaptive suspension	175-179
1. Adaptive suspension	175
2. Adaptive suspension control unit, Adaptive suspension compressor relay, Valve block for adaptive suspension, Adaptive suspension drain valve, Front left suspension strut valve, Front right suspension strut valve, Rear left suspension strut valve, Rear right suspension strut valve, Adaptive suspension pressure accumulator valve, Adaptive suspension compressor motor	176
3. Operating unit for lowering load sill, Rear left vehicle level sender, Rear right vehicle level sender, Front left vehicle level sender, Front right vehicle level sender, Adaptive suspension control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	177
4. Button for TCS and electronic stabilisation program, Operating unit to regulate suspension height, Front left body acceleration sender, Front right body acceleration sender, Adaptive suspension control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	178
5. Adaptive suspension control unit, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	179
017 - CAN bus network, LIN bus network, infotainment bus (MOST ring)	180-196
1. CAN bus network, LIN bus network, infotainment bus (MOST ring)	180
2. Data bus diagnostic interface	181
3. Data bus diagnostic interface, Diagnostic connection	182
4. Data bus diagnostic interface	183
5. Data bus diagnostic interface, Engine/motor control unit, Engine/motor control unit 2	184
6. Data bus diagnostic interface	185
7. Data bus diagnostic interface	186
8. Data bus diagnostic interface	187
9. Data bus diagnostic interface	188
10. Data bus diagnostic interface	189
11. Data bus diagnostic interface	190
12. Control unit in dash panel insert, Digital sound package control unit, Data bus diagnostic interface. Control unit 1 for information electronics. Radio. TV tuner. DVD changer	191

13. Trailer detector control unit, Front passenger door control unit, Onboard supply control unit, Front passenger seat adjustment control unit, Reversing camera system control unit, Control unit for overhead view camera	192
14. Trailer detector control unit, Front passenger door control unit, Onboard supply control unit, Front passenger seat adjustment control unit, Reversing camera system control unit, Control unit for overhead view camera	193
15. Onboard supply control unit	194
16. Climatronic control unit, Convenience system central control unit	195
17. Interface for infotainment CAN bus	196
018 - Auxiliary coolant heater, with remote control receiver/ preselection clock	197-200
1. Auxiliary coolant heater, with remote control receiver/ preselection clock	197
2. Flame monitor, Auxiliary heater control unit, Glow plug for heater, Metering pump	198
3. Temperature sensor, Temperature sensor 2 for supplementary and auxiliary heating, Climatronic control unit, Auxiliary heater control unit, Data bus diagnostic interface, Combustion air blower, Fuel pre-heating heater element	199
4. Auxiliary heater control unit, Residual heat relay, Circulation pump	200
019 - Trailer coupling	201-204
1. Trailer coupling	201
2. Trailer detector control unit, Trailer socket	202
3. Towing bracket release button, Trailer detector control unit, Hinged tow attachment ball head motor	203
4. Trailer detector control unit, Data bus diagnostic interface	204
020 - Climatronic with 2-zone temperature control	205-210
1. Climatronic with 2-zone temperature control	205
2. High-pressure sender, Air quality sensor, Fresh air blower control unit, Climatronic control unit, Onboard supply control unit, Air conditioner compressor regulating valve, Fresh air blower	206
3. Climatronic control unit, Auxiliary air heater control unit, Defroster flap control motor, Left centre vent control motor, Right temperature flap control motor	207
4. Climatronic control unit, Left footwell flap control motor, Left temperature flap control motor, Left side vent control motor, Fresh air/air recirculation, air flow flap control motor	208
5. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Climatronic control unit, Data bus diagnostic interface	209
6. Sunlight penetration photosensor, Climatronic control unit, Residual heat relay, Coolant shut-off valve, Circulation pump	210
021 - Climatronic with 4-zone temperature control	211-219
1. Climatronic with 4-zone temperature control	211
2. High-pressure sender, Air quality sensor, Onboard supply control unit, Air conditioner compressor regulating valve	212
3. Climatronic control unit, Auxiliary air heater control unit, Defroster flap control motor, Left centre vent control motor, Right temperature flap control motor	213
4. Climatronic control unit, Left footwell flap control motor, Left temperature flap control motor, Left side vent control motor, Fresh air/air recirculation, air flow flap control motor	214
5. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Climatronic control unit, Data bus diagnostic interface	215
6. Sunlight penetration photosensor, Fresh air blower control unit, Climatronic control unit, Coolant shut-off valve, Fresh air blower, Indirect ventilation flap control motor, Control motor for right indirect ventilation flap	216
7. Operating and display unit for rear air conditioning system, Rear left chest vent temperature sender, Rear right chest vent temperature sender, Residual heat relay, Circulation pump	217
8. Operating and display unit for rear air conditioning system, Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor, Rear left temperature flap control motor, Rear right temperature flap control motor, Rear right chest vent control motor	218
9. Rear fresh air blower	219
022 - Basic equipment	220-241
1. Basic equipment	220
2. Light switch, Onboard supply control unit	221
3. Onboard supply control unit, Left gas discharge (xenon) bulb, Bulb for left daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight range control motor, Left dip beam screen motor	222
4. Onboard supply control unit, Right gas discharge (xenon) bulb, Left fog light bulb, Right fog light bulb, Bulb for right daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight range control motor, Right dip beam screen motor	223
5. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side exterior mirror turn signal bulb. Front passenger side exterior mirror turn signal bulb. Driver	224

side exterior mirror, Passenger side exterior mirror, Glove compartment light, Front left entry light, Front right entry light, Entry light in exterior mirror, driver side, Entry light in exterior mirror, passenger side	
6. Onboard supply control unit, Front roof module, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	225
7. Onboard supply control unit, Front roof module, Rear left reading light, Rear right reading light	226
8. Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel central vent illumination bulb, Dash panel right vent illumination bulb, Central rear vent illumination bulb, Rear left vent illumination bulb, Rear right vent illumination bulb	227
9. Hazard warning light switch, Onboard supply control unit, Cigarette lighter, 12 V socket 2, 12 V socket 3, 12 V socket 4	228
10. Onboard supply control unit, Rear left footwell illumination bulb, Rear right footwell illumination bulb, Front left footwell illumination bulb, Front right footwell illumination bulb	229
11. Bonnet contact switch, Treble horn, Bass horn, Horn relay, Onboard supply control unit, Light conductor for rear centre console background lighting	230
12. Alarm horn, Onboard supply control unit, Headlight washer system pump, Windscreen and rear window washer pump	231
13. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Humidity sender for air conditioning system, Rain and light sensor, Onboard supply control unit	232
14. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection, Windscreen wiper motor	233
15. Onboard supply control unit, Data bus diagnostic interface	234
16. Coil connector, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	235
17. Fuel delivery unit, Dash panel insert	236
18. Ignition/starter switch, Convenience system central control unit	237
19. Convenience system central control unit, Rear left fog light bulb, Left tail light cluster, Left tail light cluster 2	238
20. Convenience system central control unit, Rear right fog light bulb, Right tail light cluster, Right tail light cluster 2, Left number plate light, Right number plate light	239
21. Convenience system central control unit, High-level brake light bulb, Rear window wiper motor, Left luggage compartment light, Right luggage compartment light, Rear lid light	240
22. Heated rear window relay, Convenience system central control unit, Control unit for electronic steering column lock, Heated rear window	241
023 - Lane change assist	242-244
1. Lane change assist	242
2. Convenience system central control unit, Steering column electronics control unit, Data bus diagnostic interface, Lane change assist control unit	243
3. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in front passenger side exterior mirror	244
024 - Multimedia socket MEDIA-IN	245-247
1. Multimedia socket MEDIA-IN	245
2. Control unit 1 for information electronics, Connection 2 for external audio sources	246
3. Control unit 1 for information electronics, Connection 2 for external audio sources	247
025 - DC/AC converter with socket	248-249
1. DC/AC converter with socket	248
2. Convenience system central control unit, DC/AC converter with socket, 12 V - 230 V, DC/AC converter with socket, 12 V - 115 V	249
026 - Ventilated seat with heated seat , (4D3)	250-255
1. Ventilated seat with heated seat , (4D3)	250
2. Climatronic control unit, Onboard supply control unit, Data bus diagnostic interface	251
3. Control unit for front left seat ventilation, Heated seat cushion for front left seat, Heated backrest for front left seat	252
4. Control unit for front left seat ventilation, Driver seat backrest fan, Driver seat cushion fan, Driver seat lateral support heater, Driver seat backrest lateral support heater	253
5. Control unit for front right seat ventilation, Heated seat cushion for front right seat, Heated backrest for front right seat	254
6. Control unit for front right seat ventilation, Front passenger seat backrest fan, Front passenger seat cushion fan, Front passenger seat lateral support heater, Front passenger seat backrest lateral support heater	255
027 - Electromechanical parking brake	256-259
1. Electromechanical parking brake	256
2. Control unit for electromechanical parking brake, Left parking brake motor	257
3. Electromechanical parking brake button, Control unit for electromechanical parking brake	258
4. Data bus diagnostic interface. Control unit for electromechanical parking brake. Dash panel	259

insert, Right parking brake motor	
028 - 3.0l petrol engine , CGEA,CGFA	260-278
1. 3.0l petrol engine , CGEA,CGFA	260
2. Power and control electronics for electric drive, Secondary air pump relay, Terminal 30 wiring junction, Three-phase current drive, Secondary air pump motor	261
3. Terminal 30 voltage supply relay, Fuses in fuse holder	262
4. Fuses in fuse holder, Electrical power steering pump	263
5. Engine control unit, Radiator fan	264
6. Lambda probe 1 after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	265
7. Lambda probe 1 before catalytic converter, Lambda probe 2 before catalytic converter, Engine control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	266
8. Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Brake servo pressure sensor, Engine control unit, Control unit for air conditioning compressor, Coolant pump for high-temperature circuit	267
9. Oil level and oil temperature sender, Sender 1 for secondary air pressure, Engine control unit, Secondary air inlet valve, Secondary air inlet valve 2	268
10. Accelerator position sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Temperature sender for engine temperature regulation, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel system diagnostic pump	269
11. Vacuum pump relay, Engine control unit, Coolant pump for low-temperature circuit, Brake servo vacuum pump	270
12. Oil pressure switch, Fuel pressure sender, Engine control unit, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Valve for oil pressure control, Coolant valve for electric drive	271
13. Brake light switch, Hall sender, Knock sensor 1, Brake pedal position sender, Engine control unit, Activated charcoal filter solenoid valve 1, Fuel pressure regulating valve	272
14. Knock sensor 2, Hall sender 2, Fuel pressure sender for low-pressure, Engine control unit	273
15. Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Charge pressure sender 2, Engine control unit	274
16. Engine control unit, Regulating flap control unit, Camshaft control valve 1, Camshaft control valve 2, Intake manifold flap valve	275
17. Throttle valve module, Engine control unit, Coolant regulating valve	276
18. Data bus diagnostic interface	277
19. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	278
029 - Seat heating , (4A3),(4A4),(4D0)	279-282
1. Seat heating , (4A3),(4A4),(4D0)	279
2. Climatronic control unit, Onboard supply control unit, Data bus diagnostic interface	280
3. Onboard supply control unit, Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater, Driver seat backrest lateral support heater	281
4. Onboard supply control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater, Front passenger seat backrest lateral support heater	282
030 - High voltage system , CGEA,CGFA	283-291
1. High voltage system , CGEA,CGFA	283
2. Hybrid battery unit, Fan enabling relay, Battery fan 1, Battery fan 2	284
3. Hybrid battery unit, Hybrid battery, Power and control electronics for electric drive, Maintenance connector for high-voltage system	285
4. Power and control electronics for electric drive	286
5. Voltage converter, DC/AC converter for drive motor, Power and control electronics for electric drive, Terminal 30 wiring junction, Electric drive motor	287
6. Power and control electronics for electric drive, Control unit for air conditioning compressor, Electrical air conditioner compressor	288
7. Power steering control unit, Data bus diagnostic interface, Dash panel insert, Electrical power steering pump	289
8. Brake pedal position sender, Engine control unit, Coolant shut-off valve	290
9. Button for extended electric drive mode, Coolant shortage indicator switch, Coolant shortage indicator sender, Coolant shortage indicator control unit, Onboard supply control unit, Coolant level relay	291
031 - Radio navigation system	292-295
1. Radio navigation system	292
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Front left microphone, Connection for external audio sources	293
3. Control unit 1 for information electronics, Radio, GPS aerial, Left aerial module, Right aerial module. Satellite tuner aerial	294



4. Radio, Rear left bass loudspeaker, Rear right bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	295
032 - Trailer coupling	296-303
1. Trailer coupling	296
2. Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 13 on fuse holder C, Fuse 42 on fuse holder C	297
3. Trailer detector control unit	298
4. Trailer detector control unit, Trailer socket	299
5. Trailer detector control unit, Trailer socket	300
6. Trailer detector control unit, Trailer socket	301
7. Towing bracket release button, Trailer detector control unit, Hinged tow attachment ball head motor	302
8. Trailer detector control unit, Data bus diagnostic interface	303
033 - Universal preparation for mobile telephone	304-306
1. Universal preparation for mobile telephone	304
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Telephone aerial, Front right microphone	305
3. Emergency assistance call button, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	306
034 - Adaptive cruise control	307-311
1. Adaptive cruise control	307
2. Adaptive cruise control unit, Data bus diagnostic interface, Control unit 2 for adaptive cruise control, Dash panel insert	308
3. Distance selection switch for adaptive cruise control system, Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Windscreen heater for lane departure warning	309
4. Data bus diagnostic interface, Image processing control unit, Front camera for driver assist systems	310
5. Pitch rate sender, Data bus diagnostic interface	311
035 - CD/DVD changer (MOST bus)	312-313
1. CD/DVD changer (MOST bus)	312
2. Control unit 1 for information electronics, TV tuner, DVD changer	313
036 - Garage door opener	314-315
1. Garage door opener	314
2. Garage door operating unit, Garage door operation control unit	315
037 - Sound system DYNAUDIO	316-319
1. Sound system DYNAUDIO	316
2. Digital sound package control unit, Front left microphone	317
3. Digital sound package control unit, Rear left treble loudspeaker, Front left treble loudspeaker, Centre mid-range and treble loudspeaker	318
4. Digital sound package control unit, Rear right treble loudspeaker, Front right treble loudspeaker	319
038 - Gas discharge headlights with automatic headlight range control , (8IM),(8IP)	320-325
1. Gas discharge headlights with automatic headlight range control , (8IM),(8IP)	320
2. Onboard supply control unit, Front left headlight	321
3. Onboard supply control unit, Front right headlight	322
4. Light switch, Onboard supply control unit	323
5. Onboard supply control unit, Control unit for cornering light and headlight range control	324
6. Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	325
039 - Multifunction steering wheel	326-330
1. Multifunction steering wheel	326
2. Multifunction buttons on left in steering wheel, Multifunction steering wheel control unit, Steering column electronics control unit, Data bus diagnostic interface	327
3. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Coil connector, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	328
4. Right steering column switch, Coil connector, Multifunction steering wheel control unit, Steering column electronics control unit, Steering wheel vibration motor, Heated steering wheel	329
5. Left steering column switch, Steering column electronics control unit	330
040 - Headlight washer system	331-333
1. Headlight washer system	331
2. Windscreen wiper switch, Steering column electronics control unit	332
3. Onboard supply control unit, Data bus diagnostic interface, Headlight washer system pump	333
041 - Windscreen heater	334-335
1. Windscreen heater	334

2. Heated windscreen button, Heated windscreen relay for left side, Heated windscreen relay for right side, Heated windscreen	335
042 - Anti-theft alarm system, interior monitor	336-337
1. Anti-theft alarm system, interior monitor	336
2. Bonnet contact switch, Interior monitoring sensor, Vehicle inclination sender, Alarm horn, Convenience system central control unit, Onboard supply control unit	337
043 - Backrest adjustment , (UK2)	338-340
1. Backrest adjustment , (UK2)	338
2. Backrest release button 1, Backrest release control unit	339
3. Backrest release control unit, Backrest release motor 1, Backrest release motor 2	340
044 - Ring circuit break diagnostic	341-342
1. Ring circuit break diagnostic	341
2. Control unit in dash panel insert, Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, TV tuner, DVD changer	342
045 - Backrest side bolsters with electrical/pneumatic adjustment (multicontour seat)	343-345
1. Backrest side bolsters with electrical/pneumatic adjustment (multicontour seat)	343
2. Control unit for driver multicontour seat, Valve block 1 in driver seat, Compressor for multicontour driver seat	344
3. Control unit for front passenger multicontour seat, Valve block 1 in front passenger seat, Fuse 20 on fuse holder C, Compressor for multicontour front passenger seat	345
046 - Seat and mirror adjustment with memory function	346-357
1. Seat and mirror adjustment with memory function	346
2. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat height adjustment motor, Driver seat rake adjustment motor	347
3. Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	348
4. Driver seat lumbar support adjustment switch, Data bus diagnostic interface, Driver seat adjustment control unit	349
5. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2	350
6. Seat memory position button 1, Driver door control unit	351
7. Mirror adjustment switch, Driver door control unit	352
8. Front passenger seat adjustment control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	353
9. Front passenger seat adjustment operating unit, Front passenger seat adjustment control unit, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	354
10. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment control unit	355
11. Front passenger door control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2	356
12. Seat memory position button 1 in front passenger door, Front passenger door control unit	357
047 - Front and rear heated seats with and with no heated steering wheel	358-372
1. Front and rear heated seats with and with no heated steering wheel	358
2. Climatronic control unit, Data bus diagnostic interface	359
3. Driver seat adjustment control unit, Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater, Driver seat backrest lateral support heater	360
4. Driver seat adjustment control unit, Driver seat backrest fan, Driver seat cushion fan	361
5. Front passenger seat position control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater, Front passenger seat backrest lateral support heater	362
6. Front passenger seat position control unit, Front passenger seat backrest fan, Front passenger seat cushion fan	363
7. Driver seat memory operating unit, Driver door control unit	364
8. Front passenger seat memory operating unit, Front passenger door control unit	365
9. Steering wheel heater button, Steering column electronics control unit, Heated steering wheel	366
10. Operating and display unit for rear air conditioning system, Rear left seat temperature sensor, Heated bench seat cushion for rear left seat, Rear left seat lateral support heater	367
11. Operating and display unit for rear air conditioning system, Rear right seat temperature sensor, Heated backrest for rear left seat, Heated bench seat cushion for rear right seat, Rear right seat lateral support heater, Left rear seat lateral support heating, Right rear seat lateral support heating	368
12. Heated rear seats control unit, Heated backrest for rear right seat	369
13. Heated rear left seat switch with regulator, Heated rear right seat switch with regulator, Heated rear seats control unit	370
14. Rear left seat temperature sensor. Heated rear seats control unit. Heated bench seat cushion for	371

rear left seat, Heated backrest for rear left seat, Rear left seat lateral support heater, Left rear seat lateral support heating	
15. Rear right seat temperature sensor, Heated rear seats control unit, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat, Rear right seat lateral support heater, Right rear seat lateral support heating	372
048 - Heated washer jets	373-374
1. Heated washer jets	373
2. Left washer jet heater element, Right washer jet heater element	374
049 - Preparation for trailer coupling	375-378
1. Preparation for trailer coupling	375
2. Trailer detector control unit	376
3. Trailer detector control unit	377
4. Trailer detector control unit, Data bus diagnostic interface	378
050 - Steering column adjustment	379-380
1. Steering column adjustment	379
2. Steering column adjustment switch, Control unit for electrically adjustable steering column, Steering column vertical adjustment motor, Steering column axial adjustment motor	380
051 - Tyre Pressure Monitoring System	381-383
1. Tyre Pressure Monitoring System	381
2. Front left tyre pressure sensor, Front right tyre pressure sensor, Rear left tyre pressure sensor	382
3. Rear right tyre pressure sensor, Data bus diagnostic interface, Dash panel insert	383
052 - TV system	384-385
1. TV system	384
2. Control unit 1 for information electronics, TV tuner, Left aerial module, Right aerial module, DVD changer	385
053 - Electromechanical power steering (Servotronic)	386-388
1. Electromechanical power steering (Servotronic)	386
2. Onboard supply control unit, Data bus diagnostic interface, Servotronic solenoid valve	387
3. Power steering control unit, Data bus diagnostic interface, Dash panel insert	388
054 - Electrically operated rear lid	389-395
1. Electrically operated rear lid	389
2. Driver door control unit, Convenience system central control unit, Data bus diagnostic interface	390
3. Rear lid closure button, Convenience system central control unit	391
4. Rear lid warning buzzer, Convenience system central control unit, Motor 1 for rear lid	392
5. Anti-trapping sender, Anti-trapping sender 2, Convenience system central control unit	393
6. Rear lid handle release button, Rear lid lock unit, Convenience system central control unit, Motor 2 for rear lid	394
7. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	395
055 - Automatic gearbox , CGEA,CGFA	396-402
1. Automatic gearbox , CGEA,CGFA	396
2. Oil temperature sender 2, Automatic gearbox control unit, Gearbox hydraulic pump relay, Control unit for auxiliary hydraulic pump, Auxiliary hydraulic pump 1 for gearbox oil	397
3. Multifunction switch, Automatic gearbox control unit, Convenience system central control unit, Cooling oil valve	398
4. Automatic gearbox control unit, Gearbox	399
5. Tiptronic switch, Automatic gearbox control unit, Gearbox, Selector lever lock solenoid, Selector lever position display	400
6. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	401
7. Data bus diagnostic interface, Dash panel insert	402
056 - 3.0l petrol engine , CJTA,CYJA	403-420
1. 3.0l petrol engine , CJTA,CYJA	403
2. Starter, Alternator with voltage regulator, Starter motor relay 2, Terminal 30 wiring junction	404
3. Starter motor relay, Fuses in fuse holder	405
4. Main relay, Engine component power supply relay, Fuses in fuse holder	406
5. Brake light switch, Convenience system central control unit, Data bus diagnostic interface	407
6. Coolant shortage indicator switch, Coolant shortage indicator sender, Coolant shortage indicator control unit, Onboard supply control unit, Coolant level relay, Air conditioner compressor regulating valve	408
7. Engine/motor control unit	409
8. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	410
9. Radiator fan control unit, Engine/motor control unit, Regulating flap control unit, Ignition coil 4 with output stage. Ignition coil 5 with output stage. Ignition coil 6 with output stage. Radiator	411

fan	
10. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	412
11. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Camshaft control valve 2, Secondary air inlet valve 2	413
12. Throttle valve module, Engine speed sender, Lambda probe, Lambda probe 2, Engine/motor control unit	414
13. Accelerator position sender, Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Valve for oil pressure control	415
14. Hall sender, Knock sensor 1, Knock sensor 2, Intake manifold pressure sender, Intake manifold temperature sender, Hall sender 2, Secondary air pump relay, Engine/motor control unit, Secondary air pump motor	416
15. Charge pressure sender, Intake air temperature sender, Oil level and oil temperature sender, Intake manifold temperature sender 2, Charge pressure sender 2, Engine/motor control unit, Fuel pressure regulating valve	417
16. Oil pressure switch, Coolant temperature sender, Radiator outlet coolant temperature sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine/motor control unit, Variable intake manifold changeover valve	418
17. Climatronic control unit, Additional coolant pump relay, Engine/motor control unit, Residual heat relay, Fuse 21 on fuse holder B, Continued coolant circulation pump, Circulation pump	419
18. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	420
057 - 3.6l petrol engine , CGRA,CMTA	421-435
1. 3.6l petrol engine , CGRA,CMTA	421
2. Starter, Alternator with voltage regulator, Starter motor relay, Starter motor relay 2, Terminal 30 wiring junction	422
3. Terminal 30 voltage supply relay, Fuses in fuse holder	423
4. Data bus diagnostic interface	424
5. Start/Stop operation button, Brake light switch, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor regulating valve	425
6. Engine control unit	426
7. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Fuel system diagnostic pump	427
8. Air mass meter, Radiator fan control unit, Engine control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	428
9. Brake servo pressure sensor, Temperature sender for engine temperature regulation, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	429
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Intake manifold flap valve, Exhaust camshaft control valve 1	430
11. Oil pressure switch, Throttle valve module, Lambda probe 2 after catalytic converter, Lambda probe 2 before catalytic converter, Engine speed sender, Engine control unit	431
12. Accelerator pedal module, Coolant temperature sender, Fuel pressure sender, Fuel pressure sender for low-pressure, Engine control unit, Coolant regulating valve, Coolant valve for cylinder block	432
13. Hall sender, Knock sensor 1, Knock sensor 2, Hall sender 2, Engine control unit	433
14. Oil level and oil temperature sender, Engine control unit, Heater element for crankcase breather, Coolant circulation pump 2	434
15. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	435
058 - 3.0l diesel engine , CATA	436-451
1. 3.0l diesel engine , CATA	436
2. Starter, Alternator with voltage regulator, Starter motor relay, Starter motor relay 2, Terminal 30 wiring junction	437
3. Terminal 30 voltage supply relay, Fuses in fuse holder	438
4. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3	439
5. Cylinder 5 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Glow plug 4, Glow plug 5, Glow plug 6	440
6. Air mass meter, Fuel temperature sender, Pressure differential sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Radiator fan	441
7. Exhaust gas recirculation valve 1, Intake manifold sender, Lambda probe 1 before catalytic converter, Position sender for charge pressure positioner, Engine/motor control unit, Turbocharger 1 control unit. Exhaust gas recirculation valve. Lambda probe heater	442

8. Intake manifold flap control unit, Intake manifold flap control unit 2, Additional coolant pump relay, Engine/motor control unit, Residual heat relay	443
9. Engine speed sender, Hall sender, Coolant temperature sender, Fuel pressure sender, Temperature sender for reducing agent, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	444
10. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Valve for oil pressure control, Reversing valve for reducing agent, Injector for reducing agent, Pump for reducing agent, Heater for reducing agent pump (heater circuit 2)	445
11. Brake servo pressure sensor, Reducing agent level sender, Evaluation unit for reducing agent level, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooling bypass valve, Pump for exhaust gas recirculation cooler	446
12. Throttle valve module, Radiator outlet coolant temperature sender, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	447
13. Accelerator pedal module, Accelerator position sender 2, Convenience system central control unit, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	448
14. Brake light switch, Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit	449
15.	450
16. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	451
059 - Sliding/tilting sunroof	452-454
1. Sliding/tilting sunroof	452
2. Sunroof switch, Sliding sunroof adjustment control unit	453
3. Sunroof roller blind control unit	454
060 - 3.0l petrol engine , CGEA,CGFA	455-477
1. 3.0l petrol engine , CGEA,CGFA	455
2. Power and control electronics for electric drive, Fuses in fuse holder, Terminal 30 wiring junction, Three-phase current drive	456
3. Terminal 30 voltage supply relay, Fuses in fuse holder	457
4. Secondary air pump relay, Fuses in fuse holder, Secondary air pump motor, Electrical power steering pump	458
5. Engine control unit	459
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	460
7. Engine control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	461
8. Oil level and oil temperature sender, Sender 1 for secondary air pressure, Engine control unit	462
9. Accelerator pedal module, Engine control unit, Secondary air inlet valve, Secondary air inlet valve 2	463
10. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Coolant valve for electric drive	464
11. Fuel pressure sender, Temperature sender for engine temperature regulation, Engine control unit	465
12. Oil pressure switch for reduced oil pressure, Brake pedal position sender, Engine control unit, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Valve for oil pressure control	466
13. Coolant temperature sender, Engine control unit, Regulating flap control unit, Activated charcoal filter solenoid valve 1, Fuel pressure regulating valve	467
14. Oil pressure switch, Hall sender, Knock sensor 1, Knock sensor 2, Hall sender 2, Engine control unit	468
15. Charge pressure sender, Charge pressure sender 2, Engine control unit, Camshaft control valve 1, Camshaft control valve 2, Intake manifold flap valve	469
16. Radiator outlet coolant temperature sender, Brake servo pressure sensor, Fuel pressure sender for low-pressure, Engine control unit, Coolant regulating valve	470
17. Intake air temperature sender, Engine control unit, Fuel system diagnostic pump, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit	471
18. Brake light switch, Radiator fan control unit, Steering column electronics control unit, Engine control unit, Radiator fan	472
19. Brake servo relay, Engine control unit, Vacuum pump for brakes	473
20. Lambda probe 1 before catalytic converter, Lambda probe 2 before catalytic converter, Engine control unit	474
21. Lambda probe 1 after catalytic converter, Lambda probe 2 after catalytic converter, Throttle valve module, Engine control unit	475
22. Data bus diagnostic interface, Engine control unit	476
23. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	477
061 - Airbaa svstems (US equipment)	478-488

1. Airbag systems (US equipment)	478
2. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	479
3. Airbag control unit, Battery isolation igniter	480
4. Airbag control unit, Front passenger side airbag deactivated warning lamp	481
5. Driver side belt switch, Front passenger side belt switch, Key operated switch to deactivate front passenger side airbag, Airbag control unit	482
6. Driver side seat position sensor, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on front passenger side, Driver side curtain airbag igniter	483
7. Airbag control unit, Front passenger side airbag igniter 1, Front passenger side airbag igniter 2, Side airbag igniter on front passenger side, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	484
8. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Rear side airbag igniter on driver side, Rear side airbag igniter on front passenger side	485
9. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	486
10. Airbag control unit, Seat occupied recognition control unit	487
11. Airbag coil connector and return ring with slip ring, Airbag control unit, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, Dash panel insert, Driver side airbag igniter, Driver side airbag igniter 2	488
062 - Vehicle location system	489-490
1. Vehicle location system	489
2. Control unit for vehicle location system, Vehicle location system aerial 1, Vehicle location system aerial 2	490
063 - Reversing camera (Rear Assist)	491-494
1. Reversing camera (Rear Assist)	491
2. Control unit with display for radio and navigation, Data bus diagnostic interface	492
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Reversing camera	493
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	494
064 - Radio with MEDIA-IN , (8AI),(8AX),(8DM)	495-501
1. Radio with MEDIA-IN , (8AI),(8AX),(8DM)	495
2. Mobile telephone operating electronics control unit, Radio	496
3. Radio, Connection for external audio sources, Interface for external multimedia unit	497
4. Radio, Rear left bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	498
5. Reversing camera system control unit, Radio, Rear right bass loudspeaker	499
6. Interface for infotainment CAN bus, Radio	500
7. Radio, Left aerial module, Right aerial module	501
065 - Convenience system, left-hand drive , (L0L)	502-525
1. Convenience system, left-hand drive , (L0L)	502
2. Driver side central locking lock unit, Driver door control unit	503
3. Humidity sender for air conditioning system, Rain and light sensor, Driver door control unit, Automatic anti-dazzle interior mirror	504
4. Operating unit for window regulator in driver door, Driver door control unit	505
5. Mirror adjustment switch, Operating unit for window regulator in driver door, Driver door control unit, Driver side exterior mirror	506
6. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2	507
7. Alarm system off switch, Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side exterior mirror	508
8. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	509
9. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door background lighting bulb, Light 1 for front centre console background lighting, Driver side window regulator motor, Driver side door warning lamp, Light for driver door background lighting, Light 2 for driver door background lighting	510
10. Seat memory position button 1, Driver door control unit	511
11. Front passenger side central locking lock unit, Front passenger door control unit	512
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2	513
13. Front passenger door control unit, Lane change assist control unit 2, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side window regulator motor	514

14. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door background lighting bulb, Light 2 for front centre console background lighting, Front passenger side door warning lamp, Light for passenger door background lighting, Light 2 for passenger door background lighting	515
15. Seat memory position button 1 in front passenger door, Front passenger door control unit	516
16. Rear left central locking lock unit, Rear left window regulator motor	517
17. Rear left window regulator switch, in door, Rear left interior locking button for central locking system, Rear left ashtray illumination bulb	518
18. Rear left door opener illumination bulb, Light 1 for rear centre console background lighting, Rear left door warning lamp, Light for rear door background lighting, driver side, Light 2 for rear door background lighting, driver side	519
19. Rear right central locking lock unit, Rear right window regulator motor	520
20. Rear right window regulator switch, in door, Rear right interior locking button for central locking system, Rear right ashtray illumination bulb	521
21. Rear right door opener illumination bulb, Light 2 for rear centre console background lighting, Rear right door warning lamp, Light for rear door background lighting, passenger side, Light 2 for rear door background lighting, passenger side	522
22. Convenience system central control unit	523
23. Convenience system central control unit, Engine/motor control unit, Tank filler flap locking motor	524
24. Onboard supply control unit, Data bus diagnostic interface	525
066 - Overhead view camera	526-528
1. Overhead view camera	526
2. Parking aid button, Onboard supply control unit, Control unit for overhead view camera, Front overhead view camera	527
3. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Rear overhead view camera	528
067 - Radio navigation system , (8AY)	529-534
1. Radio navigation system , (8AY)	529
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Front left microphone, Connection for external audio sources	530
3. Onboard supply control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Radio	531
4. Radio, Rear left bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	532
5. Radio, Rear right bass loudspeaker	533
6. Roof aerial, Left aerial module, Right aerial module	534
068 - Universal preparation for mobile telephone , (9W4),(9W7)	535-537
1. Universal preparation for mobile telephone , (9W4),(9W7)	535
2. Emergency assistance call button, Mobile telephone operating electronics control unit, Control unit with display for radio and navigation, Telephone aerial, Front right microphone	536
3. Emergency assistance call button	537
069 - Sound system DYNAUDIO	538-542
1. Sound system DYNAUDIO	538
2. Digital sound package control unit, Front left microphone	539
3. Digital sound package control unit, Rear left treble loudspeaker, Front left treble loudspeaker, Centre mid-range and treble loudspeaker	540
4. Digital sound package control unit, Rear right treble loudspeaker, Front right treble loudspeaker	541
5. Control unit with display for radio and navigation, Digital sound package control unit	542
070 - High voltage system , CGEA,CGFA	543-552
1. High voltage system , CGEA,CGFA	543
2. Hybrid battery unit, Fan enabling relay, Battery fan 1, Battery fan 2	544
3. Hybrid battery unit, Hybrid battery, Power and control electronics for electric drive, Maintenance connector for high-voltage system	545
4. Power and control electronics for electric drive	546
5. Voltage converter, DC/AC converter for drive motor, Power and control electronics for electric drive, Terminal 30 wiring junction, Electric drive motor	547
6. Power and control electronics for electric drive, Control unit for air conditioning compressor, Dash panel insert, Electrical air conditioner compressor	548
7. Power steering control unit, Data bus diagnostic interface, Electrical power steering pump	549-550
8. Brake pedal position sender, Engine control unit, Coolant shut-off valve, Pressure regulator for disengagement clutch	551
9. Button for extended electric drive mode, Coolant shortage indicator switch, Coolant shortage indicator sender, Coolant shortage indicator control unit, Onboard supply control unit, Coolant level relay	552
071 - Fuse assignment	553-572

1. Fuse assignment	553
2. Battery, Battery monitor control unit, Connection and distribution box 3, Terminal 30 wiring junction 3	554
3. Connection and distribution box 3, Terminal 30 wiring junction 3	555
4. Fuse holder B	556
5. Fuse holder B	557
6. Fuse holder B	558
7. Fuse holder B	559
8. Fuse holder B	560
9. Fuse holder B	561
10. Fuse holder B	562
11. Fuse holder B	563
12. Fuse holder B, Fuse holder C	564
13. Fuse holder C	565
14. Fuse holder C	566
15. Fuse holder C	567
16. Fuse holder C	568
17. Relay for power sockets, Fuse holder C	569
18. Voltage stabiliser, Fuse holder C	570
19. Voltage stabiliser, Fuse holder C	571
20. Fuse holder C	572
072 - 4.2l diesel engine , CKDA	573-594
1. 4.2l diesel engine , CKDA	573
2. Starter, Alternator with voltage regulator, Starter motor relay, Starter motor relay 2, Terminal 30 wiring junction	574
3. Terminal 30 voltage supply relay, Fuses in fuse holder	575
4. Additional coolant pump relay, Residual heat relay, Circulation pump	576
5. Automatic glow period control unit	577
6. Glow period control unit 2	578
7. Air mass meter, Engine/motor control unit	579
8. Brake light switch, Throttle valve module, Convenience system central control unit, Engine/motor control unit, Intake manifold flap motor, Connection (5V) in engine prewiring harness	580
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4, Injector, cylinder 6, Injector, cylinder 7	581
10. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Pressure differential sender, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	582
11. Oil pressure switch for reduced oil pressure, Hall sender, Accelerator position sender, Fuel pressure sender, Sender 1 for turbocharger speed, Pressure sender for exhaust gas recirculation, Engine/motor control unit	583
12. Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather, Fuel pressure regulating valve, Air conditioner compressor regulating valve, Fuel metering valve, Heater element 2 for crankcase breather, Pump for exhaust gas recirculation cooler	584
13. Exhaust gas recirculation valve 1, Engine speed sender, Fuel temperature sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Turbocharger 1 control unit, Exhaust gas recirculation control motor	585
14. Oil temperature sender, Charge pressure sender, Lambda probe, Intake air temperature sender, Coolant temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Lambda probe heater	586
15. Radiator fan control unit, Engine/motor control unit, Engine/motor control unit 2	587
16. Lambda probe 2, Engine/motor control unit 2, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 5, Injector, cylinder 8, Lambda probe heater 2	588
17. Oil pressure switch, Throttle valve module 2, Engine/motor control unit 2, Intake manifold flap 2 motor	589
18. Exhaust gas recirculation valve 2, Pressure differential sender 2, Engine/motor control unit 2, Turbocharger 2 control unit, Exhaust gas recirculation control motor 2	590
19. Air mass meter 2, Sender 2 for turbocharger speed, Pressure sender 2 for exhaust gas recirculation, Engine/motor control unit 2	591
20. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1 for bank 2, Exhaust gas temperature sender 3 for bank 2, Engine/motor control unit 2	592
21. Data bus diagnostic interface	593
22. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	594
073 - Toll detection system	595-597
1. Toll detection svstem	595



2. Traffic information control unit, Control unit 1 for information electronics, Traffic data aerial	596
3. Traffic information control unit, Traffic data aerial	597
074 - 4.2l petrol engine , CGNA	598-615
1. 4.2l petrol engine , CGNA	598
2. Starter, Alternator with voltage regulator, Starter relay 1, Starter relay 2, Fuses in fuse holder, Terminal 30 wiring junction	599
3. Terminal 30 voltage supply relay, Engine component power supply relay, Fuses in fuse holder	600
4. Data bus diagnostic interface	601
5. Brake light switch, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor regulating valve	602
6. Engine/motor control unit	603
7. Coolant temperature sender, Radiator outlet coolant temperature sender, Temperature sender for engine temperature regulation, Radiator fan control unit, Secondary air pump relay, Engine/motor control unit, Radiator fan, Secondary air pump motor	604
8. Lambda probe 1 after catalytic converter, Lambda probe 2 after catalytic converter, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	605
9. Map-controlled engine cooling system thermostat, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Coolant valve for cylinder head	606
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 5, Injector, cylinder 6, Injector, cylinder 8, Ignition coil 7 with output stage, Ignition coil 8 with output stage	607
11. Fuel pressure sender, Engine/motor control unit, Injector, cylinder 4, Injector, cylinder 7, Camshaft control valve 1, Camshaft control valve 2, Intake manifold flap valve, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2	608
12. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 before catalytic converter, Engine/motor control unit, Secondary air inlet valve, Variable intake manifold changeover valve, Secondary air inlet valve 2, Valve for oil pressure control	609
13. Accelerator pedal module, Throttle valve module, Lambda probe 2 before catalytic converter, Hall sender 2, Sender 1 for secondary air pressure, Engine/motor control unit	610
14. Intake air temperature sender, Knock sensor 1, Knock sensor 2, Intake manifold pressure sender, Knock sensor 3, Knock sensor 4, Engine/motor control unit	611
15. Hall sender, Hall sender 3, Hall sender 4, Fuel pressure sender for low pressure, Engine/motor control unit	612
16. Engine speed sender, Oil level and oil temperature sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine/motor control unit	613
17. Climatronic control unit, Additional coolant pump relay, Engine/motor control unit, Residual heat relay, Fuel metering valve, Fuel metering valve 2, Fuse 21 on fuse holder B, Circulation pump	614
18. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	615
075 - 3.0l diesel engine , CJGD,CJMA,CRCA,CRCD	616-635
1. 3.0l diesel engine , CJGD,CJMA,CRCA,CRCD	616
2. Starter, Alternator with voltage regulator, Starter relay 1, Starter relay 2, Terminal 30 wiring junction	617
3. Terminal 30 voltage supply relay, Fuses in fuse holder	618
4. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	619
5. Brake light switch, Radiator fan control unit, Convenience system central control unit, Engine/motor control unit	620
6. Exhaust gas recirculation valve 1, Engine/motor control unit	621
7. Intake manifold sender, High-pressure sender, Pressure differential sender, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	622
8. Additional coolant pump relay, Engine/motor control unit, Residual heat relay	623
9. Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	624
10. Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	625
11. Intake manifold flap control unit, Throttle valve module, Engine/motor control unit	626
12. Engine speed sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine/motor control unit	627
13. Lambda probe 1 before catalytic converter, Engine/motor control unit, Turbocharger 1	628
14. Accelerator pedal module, Fuel pressure sender, Engine/motor control unit	629
15. Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	630
16. Coolant temperature sender. Fuel temperature sender. Radiator outlet coolant temperature sender.	631

Engine/motor control unit, Injector, cylinder 5, Injector, cylinder 6	
17. Air mass meter, Engine/motor control unit	632
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit	633
19. Data bus diagnostic interface	634
20. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	635
076 - 3.0l diesel engine with start/stop system , CJGD,CJMA,CRCA,CRCD	636-656
1. 3.0l diesel engine with start/stop system , CJGD,CJMA,CRCA,CRCD	636
2. Starter, Alternator with voltage regulator, Starter relay 1, Starter relay 2, Terminal 30 wiring junction	637
3. Terminal 30 voltage supply relay, Fuses in fuse holder, Wiring connector	638
4. Start/stop operation button, High-pressure sender, Onboard supply control unit, Air conditioner compressor regulating valve	639
5. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	640
6. Brake light switch, Engine/motor control unit	641
7. Exhaust gas recirculation valve 1, Convenience system central control unit, Engine/motor control unit	642
8. Intake manifold sender, Brake servo pressure sensor, Pressure differential sender, Engine/motor control unit	643
9. Additional coolant pump relay, Engine/motor control unit, Residual heat relay	644
10. Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	645
11. Engine/motor control unit, Right electrohydraulic engine mounting solenoid valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	646
12. Intake manifold flap control unit, Throttle valve module, Engine/motor control unit	647
13. Engine speed sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine/motor control unit	648
14. Lambda probe 1 before catalytic converter, Engine/motor control unit, Turbocharger 1	649
15. Accelerator pedal module, Fuel pressure sender, Engine/motor control unit	650
16. Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	651
17. Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Injector, cylinder 5, Injector, cylinder 6	652
18. Air mass meter, Engine/motor control unit	653
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit	654
20. Data bus diagnostic interface	655
21. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	656
077 - 4.2l diesel engine , CKDA	657-678
1. 4.2l diesel engine , CKDA	657
2. Starter, Alternator with voltage regulator, Starter motor relay, Starter motor relay 2, Terminal 30 wiring junction	658
3. Terminal 30 voltage supply relay, Fuses in fuse holder	659
4. Additional coolant pump relay, Residual heat relay, Circulation pump	660
5. Automatic glow period control unit	661
6. Glow period control unit 2	662
7. Engine/motor control unit	663
8. Brake light switch, Throttle valve module, Convenience system central control unit, Engine/motor control unit, Intake manifold flap motor, Connection (5V) in engine prewiring harness	664
9. Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4, Injector, cylinder 6, Injector, cylinder 7	665
10. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Pressure differential sender, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	666
11. Oil pressure switch for reduced oil pressure, Hall sender, Accelerator position sender, Fuel pressure sender, Sender 1 for turbocharger speed, Pressure sender for exhaust gas recirculation, Engine/motor control unit	667
12. Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather, Fuel pressure regulating valve, Air conditioner compressor regulating valve, Fuel metering valve, Heater element 2 for crankcase breather, Pump for exhaust gas recirculation cooler	668
13. Exhaust gas recirculation valve 1, Engine speed sender, Fuel temperature sender, Engine/motor control unit, Turbocharger 1 control unit	669
14. Oil temperature sender. Charge pressure sender. Lambda probe. Intake air temperature sender.	670

Coolant temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Lambda probe heater	
15. Radiator fan control unit, Engine/motor control unit, Engine/motor control unit 2	671
16. Engine/motor control unit 2, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 5, Injector, cylinder 8	672
17. Oil pressure switch, Lambda probe 2, Throttle valve module 2, Engine/motor control unit 2, Intake manifold flap 2 motor, Lambda probe heater 2	673
18. Exhaust gas recirculation valve 2, Pressure differential sender 2, Engine/motor control unit 2, Turbocharger 2 control unit	674
19. Air mass meter 2, Sender 2 for turbocharger speed, Pressure sender 2 for exhaust gas recirculation, Engine/motor control unit 2	675
20. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1 for bank 2, Exhaust gas temperature sender 3 for bank 2, Engine/motor control unit 2	676
21. Data bus diagnostic interface	677
22. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	678
078 - 3.0l diesel engine , CNRB	679-703
1. 3.0l diesel engine , CNRB	679
2. Starter, Alternator with voltage regulator, Starter relay 1, Starter relay 2, Terminal 30 wiring junction	680
3. Terminal 30 voltage supply relay, Fuses in fuse holder	681
4. Engine/motor control unit, Connection 9 in engine compartment wiring harness	682
5. Automatic glow period control unit, Radiator fan control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6, Radiator fan, Connection 4 in engine compartment wiring harness	683
6. Brake light switch, Brake pedal switch, Exhaust gas recirculation valve 1, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor, Connection 4 in engine compartment wiring harness	684
7. Intake manifold sender, Charge pressure sender, Intake air temperature sender, High-pressure sender, Pressure differential sender, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve, Earth point, central in plenum chamber	685
8. Multifunction switch, Convenience system central control unit, Engine/motor control unit, Circulation pump	686
9. Fuel pressure sender, Exhaust gas temperature sender 4, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	687
10. Map-controlled engine cooling system thermostat, Exhaust gas temperature sender 2, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	688
11. Intake manifold flap control unit, Throttle valve potentiometer, Intake manifold flap potentiometer, Throttle valve module, Engine/motor control unit, Intake manifold flap motor	689
12. Engine speed sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine/motor control unit	690
13. Lambda probe 1 before catalytic converter, Lambda probe, Position sender for charge pressure positioner, Engine/motor control unit, Turbocharger 1 control unit, Turbocharger 1, Turbocharger 1 control motor, Lambda probe heater	691
14. Accelerator pedal module, Hall sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	692
15. Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	693
16. Air mass meter, Engine/motor control unit	694
17. Temperature sender for reducing agent, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	695
18. Pressure sender for reducing agent metering system, Engine/motor control unit, Reversing valve for reducing agent, Pump for reducing agent, Heater for reducing agent pump (heater circuit 2)	696
19. Reducing agent level sender, Evaluation unit for reducing agent level, Engine/motor control unit, Injector for reducing agent	697
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit	698
21. Additional coolant pump relay, Engine/motor control unit, Residual heat relay	699
22. NOx sender, NOx sender 2, Particulate sensor, Control unit for NOx sender, Control unit for NOx sender 2	700
23. Data bus diagnostic interface, Fuel pump control unit	701
24. Fuel delivery unit. Dash panel insert	702

25. Control unit in dash panel insert, Dash panel insert	703
079 - Fuse assignment	704-724
1. Fuse assignment	704
2. Battery, Battery monitor control unit, Connection and distribution box 3, Terminal 30 wiring junction 3	705
3. Connection and distribution box 3, Terminal 30 wiring junction 3	706
4. Fuse holder B	707
5. Fuse holder B	708
6. Fuse holder B	709
7. Fuse holder B	710
8. Fuse holder B	711
9. Fuse holder B	712
10. Fuse holder B	713
11. Fuse holder B	714
12. Fuse holder B, Fuse holder C	715
13. Fuse holder C	716
14. Fuse holder C	717
15. Fuse holder C	718
16. Fuse holder C	719
17. Fuse holder C	720
18. Relay for power sockets, Fuse holder C	721
19. Voltage stabiliser, Fuse holder C	722
20. Voltage stabiliser, Fuse holder C	723
21. Fuse holder C	724
080 - Automatic gearbox	725-731
1. Automatic gearbox	725
2. Automatic gearbox control unit, Control unit for auxiliary hydraulic pump, Auxiliary hydraulic pump 2 for gearbox oil	726
3. Multifunction switch, Automatic gearbox control unit, Convenience system central control unit, Cooling oil valve	727
4. Automatic gearbox control unit, Gearbox hydraulic pump relay, Gearbox	728
5. Automatic gearbox control unit, Gearbox	729
6. Tiptronic switch, Onboard supply control unit, Selector lever lock solenoid, Selector lever position display	730
7. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Steering column electronics control unit, Data bus diagnostic interface	731
081 - Automatic gearbox , CGEA,CGFA	732-738
1. Automatic gearbox , CGEA,CGFA	732
2. Oil temperature sender 2, Automatic gearbox control unit, Gearbox hydraulic pump relay, Control unit for auxiliary hydraulic pump, Auxiliary hydraulic pump 1 for gearbox oil	733
3. Multifunction switch, Automatic gearbox control unit, Convenience system central control unit, Cooling oil valve	734
4. Automatic gearbox control unit, Gearbox	735
5. Automatic gearbox control unit, Gearbox	736
6. Tiptronic switch, Onboard supply control unit, Selector lever lock solenoid, Selector lever position display	737
7. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Steering column electronics control unit, Data bus diagnostic interface	738
082 - Fuse assignment	739-762
1. Fuse assignment	739
2. Battery, Battery monitor control unit, Connection and distribution box 3, Terminal 30 wiring junction 3	740
3. Connection and distribution box 3, Terminal 30 wiring junction 3	741
4. Fuse holder B	742
5. Fuse holder B	743
6. Fuse holder B	744
7. Fuse holder B	745
8. Fuse holder B	746
9. Fuse holder B	747
10. Fuse holder B	748
11. Fuse holder B	749
12. Fuse holder B, Fuse holder C	750
13. Fuse holder C	751
14. Fuse holder C	752
15. Fuse holder C	753
16. Fuse holder C	754

17. Fuse holder C	755
18. Fuse holder C	756
19. Fuse holder C	757
20. Fuse holder C	758
21. Voltage stabiliser, Fuse holder C	759
22. Fuse holder C	760
23. Fuse holder C	761
24. Relay for power sockets	762
083 - Preparation for trailer coupling	763-767
1. Preparation for trailer coupling	763
2. Fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 13 on fuse holder C, Fuse 42 on fuse holder C	764
3. Trailer detector control unit	765
4. Trailer detector control unit	766-767
084 - 3.0l diesel engine , CVVA,CVWA	768-794
1. 3.0l diesel engine , CVVA,CVWA	768
2. Starter, Alternator with voltage regulator, Starter relay 2, Terminal 30 wiring junction	769
3. Terminal 30 voltage supply relay, Starter relay 1	770
4. Engine/motor control unit, Connection 9 in engine compartment wiring harness	771
5. Brake pedal switch, Pressure differential sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	772
6. Exhaust gas recirculation valve 1, Radiator fan control unit, Engine/motor control unit, Radiator fan, Connection 4 in engine compartment wiring harness	773
7. Engine/motor control unit	774
8. Multifunction switch, Intake manifold sender, Convenience system central control unit, Engine/motor control unit, Circulation pump	775
9. Map-controlled engine cooling system thermostat, Exhaust gas temperature sender 2, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	776
10. Fuel pressure sender, Exhaust gas temperature sender 4, Temperature sender for engine temperature regulation, Engine/motor control unit, Fuel pressure regulating valve	777
11. Throttle valve module, Throttle valve module 2, Engine/motor control unit	778
12. Engine speed sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine/motor control unit, Turbocharger 1	779
13. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	780
14. Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	781
15. Coolant temperature sender, Air mass meter, Fuel temperature sender, Engine/motor control unit, Injector, cylinder 6	782
16. Temperature sender for reducing agent, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	783
17. High-pressure sender, Onboard supply control unit, Engine/motor control unit, Earth point, central in plenum chamber	784
18. Pressure sender for reducing agent metering system, Engine/motor control unit, Air conditioner compressor regulating valve, Reversing valve for reducing agent, Pump for reducing agent	785
19. Reducing agent level sender, Evaluation unit for reducing agent level, Engine/motor control unit	786
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit	787
21. Engine/motor control unit, Injector for reducing agent	788
22. Engine/motor control unit	789
23. Radiator outlet coolant temperature sender, Engine/motor control unit	790
24. Additional coolant pump relay, Engine/motor control unit, Residual heat relay	791
25. Control unit for NOx sender, Control unit for NOx sender 2	792
26. Fuel delivery unit, Fuel pump control unit, Dash panel insert	793
27. Data bus diagnostic interface, Dash panel insert	794
085 - Tyre Pressure Monitoring System	795-796
1. Tyre Pressure Monitoring System	795
2. Front left tyre pressure sensor, Front right tyre pressure sensor, Rear left tyre pressure sensor, Rear right tyre pressure sensor, Tyre Pressure Monitoring System control unit	796
086 - Universal preparation for mobile telephone , (9W7),(UF6),(UF8),(9W4)	797-799
1. Universal preparation for mobile telephone , (9W7),(UF6),(UF8),(9W4)	797
2. Mobile telephone operating electronics control unit, Control unit with display for radio and navigation, Telephone microphone, Front right microphone	798
3. Emergency assistance call button, Mobile telephone operating electronics control unit, Roof aerial. Connection for external audio sources. Connection 2 for external audio sources	799

087 - TV tuner , (QU3),(QU6),(QU7)	800-802
1. TV tuner , (QU3),(QU6),(QU7)	800
2. TV tuner, Left aerial module, Right aerial module	801
3. TV tuner	802
088 - Rear Seat Entertainment (RSE) , (9WM)	803-805
1. Rear Seat Entertainment (RSE) , (9WM)	803
2. Additional connections unit for audio and video	804
3. Additional connections unit for audio and video	805
089 - Reversing camera (Rear Assist) , (KA2)	806-809
1. Reversing camera (Rear Assist) , (KA2)	806
2. Control unit in dash panel insert, Reversing camera system control unit, Reversing camera, Fuse holder C	807
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	808
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	809
090 - Emergency call module , (NZ3)	810-812
1. Emergency call module , (NZ3)	810
2. Emergency battery, telematics, Emergency assistance call button, Emergency call module control unit and communication unit	811
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Telephone microphone, GPS aerial, GSM aerial 2, Loudspeaker for emergency call module	812
100 - Illuminated sill panel trim	813-814
1. Illuminated sill panel trim	813
2. Onboard supply control unit, Light conductor for front left sill panel moulding ambient lighting, Light conductor for front right sill panel moulding ambient lighting	814
101 - Convenience system, right-hand drive , (LOR)	815-838
1. Convenience system, right-hand drive , (LOR)	815
2. Driver side central locking lock unit, Driver door control unit	816
3. Humidity sender for air conditioning system, Rain and light sensor, Driver door control unit, Automatic anti-dazzle interior mirror	817
4. Operating unit for window regulator in driver door, Driver door control unit	818
5. Mirror adjustment switch, Operating unit for window regulator in driver door, Driver door control unit, Driver side exterior mirror	819
6. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2	820
7. Alarm system off switch, Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side exterior mirror	821
8. Alarm system off switch, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	822
9. Rear lid remote release button, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door background lighting bulb, Light 1 for front centre console background lighting, Driver side window regulator motor, Driver side door warning lamp, Light for driver door background lighting, Light 2 for driver door background lighting	823
10. Seat memory position button 1, Driver door control unit	824
11. Seat memory position button 1, Front passenger side central locking lock unit, Driver door control unit, Front passenger door control unit	825
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2	826
13. Front passenger door control unit, Lane change assist control unit 2, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side window regulator motor	827
14. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door background lighting bulb, Light 2 for front centre console background lighting, Front passenger side window regulator motor, Light for passenger door background lighting, Light 2 for passenger door background lighting	828
15. Seat memory position button 1 in front passenger door, Front passenger door control unit, Front passenger side door warning lamp	829
16. Rear left central locking lock unit, Front passenger door control unit, Rear left window regulator motor	830
17. Rear left window regulator switch, in door, Rear left interior locking button for central locking system, Rear left ashtray illumination bulb, Rear left window regulator motor	831
18. Rear left door opener illumination bulb, Light 1 for rear centre console background lighting, Rear left door warning lamp, Light for rear door background lighting, driver side, Light 2 for rear door backaround lihtina. driver side	832

19. Rear right central locking lock unit, Rear right window regulator motor	833
20. Rear right window regulator switch, in door, Rear right interior locking button for central locking system, Rear right ashtray illumination bulb, Rear right window regulator motor	834
21. Rear right door opener illumination bulb, Light 2 for rear centre console background lighting, Rear right door warning lamp, Light for rear door background lighting, passenger side, Light 2 for rear door background lighting, passenger side	835
22. Convenience system central control unit	836
23. Convenience system central control unit, Engine/motor control unit, Tank filler flap locking motor	837
24. Convenience system central control unit, Onboard supply control unit, Data bus diagnostic interface	838
801 - -Fitting locations: Earth points - 3	839-851
1. Earth points	839-851
1.1 Overview of earth points in engine compartment	839-842
1.2 Overview of earth points in vehicle interior	843-847
1.3 Overview of earth points in luggage compartment	848-851
802 - -Fitting locations: Fuses - 3	852-919
1. Fuses	852-919
1.1 Overview of fuse holders	852-853
1.2 Fitting location of fuse holder C -SC-	854-873
1.2.1 Fuse holder C -SC- fuse assignment from April 2010	855-858
1.2.2 Fuse holder C -SC-, fuse assignment from November 2010	859-862
1.2.3 Fuse holder C -SC-, fuse assignment from November 2012	863-865
1.2.4 Fuse holder C -SC- fuse assignment from August 2014	866-869
1.2.5 Fuse holder C -SC- fuse assignment from November 2016	870-873
1.3 Fitting location of fuse holder D -SD-	874-877
1.3.1 Fuse assignment for fuse holder D -SD-	875-877
1.4 Fitting location of fuse holder B -SB-	878-893
1.4.1 Fuse holder B -SB- fuse assignment from April 2010	879-883
1.4.2 Fuse holder B -SB- fuse assignment from November 2010	884-888
1.4.3 Fuse holder B -SB-, fuse assignment from November 2012	889-893
1.5	894-898
1.5.1 Fuse holder B -SB- fuse assignment from August 2014	894-898
1.6 Fitting location of connection and distribution box 2 -SX2-, E-box	899-917
1.6.1 Connection and distribution box 2 -SX2-, E-box fuse assignment 3.0l V6 diesel engine (CASA, CASD, CATA)	900-902
1.6.2 Connection and distribution box 2 -SX2-, E-box fuse assignment 3.0l V6 diesel engine (CJGD, CJMA, CRCA, CNRB, CRCD)	903-904
1.6.3 Connection and distribution box 2 -SX2-, E-box fuse assignment 3.0l V6 diesel engine (CVVA, CVWA)	905-906
1.6.4 Connection and distribution box 2 -SX2-, E-box fuse assignment 4.2l V8 diesel engine (CKDA)	907-908
1.6.5 Connection and distribution box 2 -SX2-, E-box fuse assignment 3.0l V6 petrol engine, hybrid (CGEA, CGFA)	909-910
1.6.6 Connection and distribution box 2 -SX2-, E-box fuse assignment 3.0l V6 petrol engine (CJTA, CYJA)	911-912
1.6.7 Connection and distribution box 2 -SX2-, E-box fuse assignment 3.6l V6 petrol engine (CGRA, CMTA)	913-914
1.6.8 Connection and distribution box 2 -SX2-, E-box fuse assignment 4.2l V8 petrol engine (CGNA)	915-917
1.7 Fitting location of terminal 30 wiring junction -TV2-Fuse 1 -S131-Fuse 2 -S132-	918-919
1.7.1 Fuse assignment Fuse 1 -S131-Fuse 2 -S132-	918-919
803 - - Fitting locations: Relays - 3	920-940
1. Relays	920-940
1.1 Overview of relay carriers	920
1.2 HSB box, battery under driver seat	921-922
1.2.1 Connection and distribution box 3 -SX3-	921-922
1.3 Relay carrier in interior	923-928
1.3.1 Fuse and relay carrier 1 -SR 1- from April 2010	924
1.3.2 Fuse and relay carrier 1 -SR 1- from November 2010	925
1.3.3 Fuse and relay carrier 1 -SR 1- from August 2014	926
1.3.4 Fuse and relay carrier 2 -SR 2- from April 2010	927
1.3.5 Fuse and relay carrier 2 -SR 2- from November 2010	928
1.4 Relay carrier on E-box on left in plenum chamber	929-940
1.4.1 Relay carrier assignment: 3.0l, V6 diesel engine (CASA) from April 2010	929-930
1.4.2 Relay carrier assignment: 3.0l, V6 diesel engine (CASA, -CASD, -CATA) from November 2010	931
1.4.3 Relay carrier assignment: 3.0l, V6 diesel engine (CJGD, CJMA, CRCA, CRCD) from May 2011	932
1.4.4 Relay carrier assignment: 3.0l, V6 diesel engine (CNRB) from May 2012	933

1.4.5 Relay carrier assignment: 3.0l, V6 diesel engine (CVVA, CVWA) from August 2014	934
1.4.6 Relay carrier assignment: 4.2l, V8 diesel engine (CKDA) from April 2010	935
1.4.7 Relay carrier assignment: 4.2l, V8 diesel engine (CKDA) from April 2010	936
1.4.8 Relay carrier assignment: 3.0l, V6 petrol engine, hybrid system (CGEA, ·CGFA)	937
1.4.9 Relay carrier assignment: 3.0l, V6 petrol engine (CJTA, CYJA )	938
1.4.10 Relay carrier assignment: 3.6l, V6 petrol engine ( CGRA, ·CMTA )	939
1.4.11 Relay carrier assignment: 4.2l, V8 petrol engine (CGNA)	940
804 - -Fitting locations: Control units in engine compartment - 3	941-966
1. Control units in engine compartment	941-966
1.1 Overview of control units	941-943
1.2 Adaptive cruise control unit -J428-	944
1.2.1 Fitting location	944
1.2.2 Connector assignment for adaptive cruise control unit -J428-	944
1.2.3 Connector assignment for control unit 2 for adaptive cruise control -J850-	945
1.3 Right gas discharge bulb control unit -J344-, from April 2010	945
1.3.1 Fitting location	945
1.4 Right gas discharge bulb control unit -J344-, from August 2014	946
1.4.1 Fitting location	946
1.5 ABS control unit -J104-	947-948
1.5.1 Fitting location	947-948
1.6 Engine/motor control unit -J623-	949-952
1.6.1 Fitting location	949
1.6.2 Connector assignment of engine control unit -J623-	949
1.6.3 Connector assignment of engine control unit -J623-	950
1.6.4 Connector assignment of engine control unit 2 -J624-	951-952
1.7 Control unit for auxiliary hydraulic pump -J922-	953-954
1.7.1 Fitting location	953
1.7.2 Connector assignment	953-954
1.8 Alarm horn -H12-	955
1.8.1 Fitting location	955
1.8.2 Connector assignment	955
1.9 Heater control unit -J162-	956
1.9.1 Connector assignment	956
1.10 Power and control electronics for electric drive -JX1-	957-958
1.10.1 Fitting location	957
1.10.2 Connector assignment	957-958
1.11 Control unit for air conditioning compressor -J842-	959
1.11.1 Fitting location	959
1.11.2 Connector assignment	959
1.12 Power steering control unit -J500-	960
1.12.1 Fitting location	960
1.12.2 Connector assignment	961
1.13 Left gas discharge bulb control unit -J343-, from April 2010	961
1.13.1 Fitting location	961
1.14 Left gas discharge bulb control unit -J343-, from August 2014	962-963
1.14.1 Fitting location	962-963
1.15 Three-phase current drive -VX54-	964
1.16 Garage door operation control unit -J530-	965
1.16.1 Fitting location	965
1.17 Radiator fan control unit -J293-	965-966
1.17.1 Fitting location	965-966
805 - - Fitting locations: control modules in interior - 3	967-1039
1. Control units in interior	967-1039
1.1 Overview of control units	967-971
1.2 Climatronic control unit -J255-	972-973
1.2.1 Connector assignment	972-973
1.3 Control unit for cornering light and headlight range control -J745-	974
1.3.1 Fitting location	974
1.3.2 Connector assignment	974
1.4 Control unit with display for radio and navigation -J503-	975
1.4.1 Connector assignment	975
1.5 Display unit for front information display and operating unit control unit -J685-	976
1.5.1 Connector assignment	976
1.6 Control unit 1 for information electronics -J794-	976
1.7 Interface for external multimedia unit -R215-	977
1.8 Voltage stabiliser -J532-	978



1.9 Mobile telephone operating electronics control unit -J412-	979-980
1.10 Heated rear seats control unit -J786-	981
1.10.1 Fitting location	981
1.10.2 Connector assignment	981
1.11 Emergency call module control unit and communication unit -J949-	982
1.12 Airbag control unit -J234-	982
1.13 Sliding sunroof adjustment control unit -J245-	983-985
1.13.1 Fitting location	983
1.13.2 Connector assignment	984-985
1.14 Front passenger door control unit -J387-	986
1.14.1 Fitting location	986
1.14.2 Connector assignment	986
1.15 Control unit for front passenger multicontour seat -J872-	987
1.15.1 Fitting location	987
1.16 Control unit for front right seat ventilation -J799-	988
1.17 Front passenger seat adjustment control unit -J720-	989-991
1.17.1 Fitting location	989
1.17.2 Connector assignment	990-991
1.18 Automatic gearbox control unit -J217-	992-994
1.18.1 Fitting location	992
1.18.2 Connector assignment	992-993
1.18.3 Connector assignment	994
1.19 Control unit for front right belt tensioner -J855-	995-996
1.19.1 Fitting location	995
1.19.2 Connector assignment	995-996
1.20 Control unit for auxiliary hydraulic pump -J922-	997
1.20.1 Fitting location	997
1.20.2 Connector assignment	998
1.21 Image processing control unit -J851-	998-999
1.21.1 Fitting location	999
1.21.2 Connector assignment	999
1.22 Mobile telephone operating electronics control unit -J412-	1000
1.22.1 Connector assignment	1000
1.23 Rear right door control unit -J389-	1001
1.23.1 Fitting location	1001
1.23.2 Connector assignment	1001
1.24 Operating and display unit for rear air conditioning system -E265-	1002
1.24.1 Connector assignment	1002
1.25 Onboard supply control unit -J519-	1003-1015
1.25.1 Fitting location	1003
1.25.2 Connector assignment for onboard supply control unit -J519-	1004
1.25.3 Description of signal for onboard supply control unit -J519-	1005-1009
1.25.4 Connector assignment for convenience system central control unit -J393-	1010
1.25.5 Description of signal for convenience system central control unit -J393-	1011-1015
1.25.6 Connector assignment of parking aid control unit -J446-	1016
1.26 Data bus diagnostic interface -J533-	1016
1.27 Control unit in dash panel insert -J285-	1017-1019
1.27.1 Description of signal for control unit in dash panel insert -J285-	1018-1019
1.28 Steering column electronics control unit -J527-	1020-1021
1.28.1 Fitting location	1020
1.28.2 Connector assignment	1020-1021
1.29 Control unit for electronic steering column lock -J764-	1022
1.29.1 Connector assignment	1022
1.30 Control unit for electrically adjustable steering column -J866-	1023
1.30.1 Connector assignment	1023
1.31 Driver door control unit -J386-	1024
1.31.1 Fitting location	1024
1.31.2 Connector assignment	1024
1.32 Control unit for driver multicontour seat -J873-	1025
1.32.1 Fitting location	1025
1.33 Control unit for front left seat ventilation -J800-	1026-1027
1.34 Control unit for front left belt tensioner -J854-	1028
1.34.1 Fitting location	1028
1.34.2 Connector assignment	1028
1.35 Multifunction steering wheel control unit -J453-	1029
1.35.1 Connector assignment	1029

1.36 Driver seat adjustment control unit -J810-	1030-1032
1.36.1 Fitting location	1030
1.36.2 Connector assignment	1031-1032
1.37 Tyre Pressure Monitoring System control unit -J502-	1033-1034
1.37.1 Fitting location, up to August 2014	1033
1.37.2 Connector assignment, up to August 2014	1034
1.38 Fuse assignment in fuse holder D	1035
1.39 Rear left door control unit -J388-	1036-1037
1.39.1 Fitting location	1036
1.39.2 Connector assignment	1036-1037
1.40 Control unit for vehicle location system -J895-	1038-1039
1.40.1 Fitting location	1038
1.40.2 Connector assignment	1038-1039
806 - -Fitting locations: control units in luggage compartment - 3	1040-1073
1. Control units in luggage compartment	1040-1073
1.1 Overview of control units in luggage compartment	1040-1041
1.2 Backrest release control unit -J930-	1042
1.2.1 Fitting location	1043
1.3 Fuel pump control unit -J538-	1043
1.3.1 Fitting location	1043
1.4 Rear left control unit	1044-1057
1.4.1 Fitting location	1044-1045
1.4.2 Trailer detector control unit -J345-, from April 2010	1046
1.4.3 Trailer detector control unit -J345-, from August 2014	1047
1.4.4 Control unit for overhead view camera -J928-	1048
1.4.5 Reversing camera system control unit -J772-, from April 2010	1049
1.4.6 DVD changer -R161-	1050
1.4.7 Adaptive suspension control unit -J197-	1051
1.4.8 Axle differential lock control unit -J647-	1052
1.4.9 Radio -R-	1053
1.4.10 TV tuner -R78-, from April 2010	1053
1.4.11 TV tuner -R78-, from August 2014	1054-1055
1.4.13 Control unit for electromechanical parking brake -J540-	1056-1057
1.5 Lane change assist control unit -J769-	1058-1060
1.5.1 Fitting location	1058
1.5.2 Connector assignment	1058-1059
1.5.3 Connector assignment	1060
1.6 Control unit in rear lid	1061
1.7 Rear lid control unit -J605-	1062
1.7.1 Connector assignment	1062
1.8 Reversing camera system control unit -J772-, from May 2015	1063
1.9 Hybrid battery unit -AX1-	1064
1.9.1 Fitting location	1064
1.10 Hybrid battery unit -AX1-	1064
1.11 Battery regulation control unit -J840-	1064-1065
1.11.1 Connector assignment	1064-1065
1.12 Interface for infotainment CAN bus -J885-	1066-1068
1.12.2 Connector assignment for interface for infotainment CAN bus -J885-	1066-1067
1.12.3 Connector assignment, digital sound package control unit -J525-	1068
1.13 Tyre Pressure Monitoring System control unit -J502-	1069
1.13.1 Fitting location and connector assignment, from August 2014	1069
1.14 Sunroof roller blind control unit -J394-	1070-1071
1.14.1 Fitting location	1070
1.14.2 Connector assignment	1071
1.15 Remote control receiver for auxiliary coolant heater -R149-	1072
1.16 Rear lid power opening control unit -J938-	1072-1073
1.16.1 Fitting location and connector assignment	1072-1073