



## Contents

<b>93 - Electric drive systems</b> .....	<b>1</b>
<b>1 General warning instructions for work on the high-voltage system</b> .....	<b>1</b>
<b>2 De-energising the high-voltage system</b> .....	<b>6</b>
<b>3 Re-energising the high-voltage system</b> .....	<b>7</b>
3.1 Potential equalisation lines .....	7
<b>4 General description of hybrid technology</b> .....	<b>9</b>
4.1 Overview of hybrid components .....	9
4.2 Hybrid vehicle operating modes .....	11
<b>5 Hybrid-specific components</b> .....	<b>13</b>
5.1 Electric drive motor V141 .....	13
5.2 Hybrid battery unit AX1 .....	14
5.3 Power and control electronics for electric drive JX1 .....	28
5.4 B+ line with fuse .....	37
5.5 High-voltage cables .....	39
5.6 Electrical air conditioner compressor V470 .....	47
5.7 Auxiliary hydraulic pump for gearbox oil .....	47
5.8 Vacuum pump for brakes V192 .....	48
5.9 Electrical power steering pump V466 .....	48
5.10 Pressure regulator for disengagement clutch N511 .....	49
5.11 Hybrid vehicle cooling system .....	49