



Contents

00 - Technical data	1
1 Basic instructions	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Type plate	4
2.3 Vehicle data sticker	5
3 Safety information	6
4 Body work for which HV electrical system must be de-energised	7
4.1 The following body work requires the HV electrical system to be de-energised.	7
5 Moulded foam inserts	8
6 Galvanized body parts, high/higher-strength and hot-formed body panels	9
6.1 Installing	9
7 Laser welding	11
8 Body panel gaps/shut lines	12
8.1 Body - front	12
8.2 Body - centre	13
8.3 Body - rear	14
9 Body dimensions	15
9.1 Body - front	15
9.2 Body - centre	19
9.3 Body - rear	24
9.4 Floor panel - front	25
9.5 Floor panel - centre	26
9.6 Floor panel - rear	27
10 Alignment bracket set	28
10.1 Overview	28
11 Portal gauge	29
50 - Body - front	30
1 Renewing front bumper carrier	30
1.1 Tools	30
1.2 Removing	31
1.3 Installing	32
2 Renewing upper longitudinal member - part section	35
2.1 Tools	35
2.2 Removing	36
2.3 Installing	38
3 Renewing front suspension strut mounting	41
3.1 Tools	41
3.2 Removing	42
3.3 Installing	45
4 Repairing threads for securing subframe	50
4.1 Contents of thread repair kit	51
4.2 Repairing threads	51
5 Renewing front longitudinal member	55
5.1 Tools	55
5.2 Removing	56
5.3 Installing	65
6 Renewing front longitudinal member - long part section	73
6.1 Tools	73



6.2	Removing	74
6.3	Installing	75
7	Renewing front longitudinal member - short part section	78
7.1	Tools	78
7.2	Removing	79
7.3	Installing	80
51 - Body - centre		83
1	Renewing roof	83
1.1	Tools	83
1.2	Removing	85
1.3	Installing	88
2	Renewing roof - vehicles with panorama sunroof	99
2.1	Tools	99
2.2	Removing	101
2.3	Installing	106
2.4	Installing	110
3	Renewing front cross member for roof	117
3.1	Tools	117
3.2	Removing	118
3.3	Installing	119
4	Renewing rear roof cross member	121
4.1	Tools	121
4.2	Removing	122
4.3	Installing	123
5	Renewing A-pillar	126
5.1	Tools	126
5.2	Removing	127
5.3	Installing	129
6	Renewing A-pillar reinforcement	133
6.1	Tools	133
6.2	Removing	134
6.3	Installing	136
7	Renewing B-pillar	140
7.1	Tools	141
7.2	Removing	141
7.3	Installing	142
8	Renewing B-pillar reinforcement - lower part section	146
8.1	Tools	146
8.2	Removing	147
8.3	Installing	148
9	Renewing outer side member	153
9.1	Tools	153
9.2	Removing	154
9.3	Installing	155
10	Renewing side member reinforcement - front part section	159
10.1	Tools	159
10.2	Removing	160
10.3	Installing	161
11	Renewing side member reinforcement - centre part section	165
11.1	Tools	165
11.2	Removing	166
11.3	Installing	167



53 - Body - rear	171
1 Renewing rear cross panel	171
1.1 Tools	171
1.2 Removing	172
1.3 Installing	173
2 Renewing rear link part	175
2.1 Tools	175
2.2 Removing	176
2.3 Installing	177
3 Renewing rear lock carrier	179
3.1 Tools	180
3.2 Removing	180
3.3 Installing	181
4 Renewing D-pillar reinforcement	183
4.1 Tools	183
4.2 Removing	184
4.3 Installing	185
5 Renewing tail light mounting	188
5.1 Tools	188
5.2 Removing	189
5.3 Installing	190
6 Renewing tow bar mounting	193
6.1 Tools	193
6.2 Removing	194
6.3 Installing	195
7 Renewing spare wheel well	197
7.1 Tools	198
7.2 Removing	198
7.3 Installing	199
8 Renewing rear floor panel	201
8.1 Tools	202
8.2 Removing	202
8.3 Installing	203
9 Renewing rear cross panel	205
9.1 Tools	206
9.2 Removing	206
9.3 Installing	207
10 Renewing rear longitudinal member - part section	210
10.1 Tools	211
10.2 Removing	212
11 Renewing side panel	216
11.1 Tools	216
11.2 Removing	217
11.3 Installing	218
12 Renewing outer wheel housing liner	223
12.1 Tools	223
12.2 Removing	224
12.3 Installing	225