



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working in the vicinity of high-voltage components	1
1.4 Safety precautions when working on high-voltage system	2
<b>2 Identification</b>	<b>3</b>
2.1 PR number and type of brake system	3
<b>3 Repair notes</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General repair instructions	5
3.3 Contact corrosion	5
<b>4 Technical data</b>	<b>6</b>
4.1 Technical data for brakes	6
<b>5 Brake test</b>	<b>8</b>
5.1 General information	8
5.2 Checking vehicles with all-wheel drive	8
5.3 Checking parking brake	8
<b>45 - Anti-lock brake system</b>	<b>10</b>
<b>1 General information</b>	<b>10</b>
1.1 Notes for repair work on ABS	10
<b>2 Overview of fitting locations</b>	<b>11</b>
2.1 Overview of fitting locations – ABS/ESP	11
<b>3 Control unit and hydraulic unit</b>	<b>19</b>
3.1 Assembly overview – control unit and hydraulic unit	19
3.2 Removing and installing ABS control unit J104 / ABS hydraulic unit N55	24
3.3 Separating control unit from and connecting to hydraulic unit	29
3.4 Connecting brake lines to hydraulic unit	31
<b>4 Sensors</b>	<b>34</b>
4.1 Assembly overview – speed sensor on front axle	34
4.2 Assembly overview – speed sensors on rear axle	34
4.3 Removing and installing front wheel speed sensor G45 / G47	35
4.4 Removing and installing rear wheel speed sensor G44 / G46	36
4.5 Checking ABS sensor ring	36
4.6 Removing and installing ESP sensor unit G419	37
<b>46 - Brakes - mechanism</b>	<b>38</b>
<b>1 Front brakes</b>	<b>38</b>
1.1 Assembly overview – front brake	38
1.2 Removing and installing brake pads	41
1.3 Removing and installing brake caliper	44
1.4 Removing and installing brake disc	49
1.5 Removing and installing splash plate	49
1.6 Removing and installing pad wear indicator wire	50
<b>2 Rear brakes</b>	<b>52</b>
2.1 Assembly overview - rear brakes	52
2.2 Removing and installing brake pads	54
2.3 Removing and installing brake caliper with brake carrier	58
2.4 Removing and installing brake caliper	60
2.5 Removing and installing brake carrier	63
2.6 Removing and installing brake disc	65



2.7	Removing and installing splash plate	65
2.8	Removing and installing pad wear indicator wire	66
<b>3</b>	<b>Parking brake</b>	<b>68</b>
3.1	Assembly overview - parking brake	68
3.2	Removing and installing parking brake motor V282 / V283	69
3.3	Releasing parking brake manually	70
<b>4</b>	<b>Brake pedal</b>	<b>72</b>
4.1	Assembly overview – brake pedal	72
4.2	Removing and installing mounting bracket	73
4.3	Separating brake pedal from and joining to brake servo	76
4.4	Removing and installing brake pedal	77
4.5	Removing and installing brake pedal mounting at push rod	79
<b>47</b>	<b>Brakes - hydraulics</b>	<b>80</b>
<b>1</b>	<b>Front brake caliper</b>	<b>80</b>
1.1	Assembly overview - front brake caliper	80
1.2	Removing and installing brake caliper piston	80
<b>2</b>	<b>Rear brake caliper</b>	<b>84</b>
2.1	Assembly overview - rear brake caliper	84
2.2	Removing and installing brake caliper piston	84
<b>3</b>	<b>Brake servo/brake master cylinder</b>	<b>88</b>
3.1	Assembly overview – brake servo/brake master cylinder	88
3.2	Removing and installing brake light switch	94
3.3	Removing and installing brake servo	95
3.4	Removing and installing brake master cylinder	99
3.5	Removing and installing brake fluid reservoir	102
3.6	Removing and installing brake fluid level warning contact F34	103
3.7	Removing and installing brake system pressure accumulator VX70	104
3.8	Note regarding operating pin	107
<b>4</b>	<b>Vacuum system</b>	<b>108</b>
4.1	Assembly overview - vacuum pump	108
4.2	Checking non-return valve	114
4.3	Removing and installing non-return valve	114
4.4	Removing and installing brake servo pressure sensor	116
4.5	Checking vacuum system	117
<b>5</b>	<b>Brake lines</b>	<b>122</b>
5.1	Repairing brake lines	122
<b>6</b>	<b>Hydraulic system</b>	<b>126</b>
6.1	General notes on brake fluid	126
6.2	Bleeding hydraulic system	126
6.3	Pre-bleeding brake system pressure accumulator VX70	134
6.4	Leak test	135