



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
1.3 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair notes	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	3
2.4 Steering rack	3
2.5 Gaskets and seals	4
2.6 Nuts and bolts	4
2.7 Electrical components	5
2.8 Repairing damaged threads in longitudinal member (subframe to body)	5
40 - Front suspension	6
1 Front axle	6
1.1 Overview of fitting locations - front axle	6
2 Subframe	9
2.1 Assembly overview - subframe	9
2.2 Removing and installing subframe with steering rack	13
2.3 Removing and installing subframe cross brace	21
2.4 Removing and installing subframe shield	23
2.5 Fixing subframe in position	24
2.6 Lowering subframe	27
3 Suspension strut, upper suspension links	31
3.1 Assembly overview - suspension strut, upper suspension links	31
3.2 Removing and installing suspension strut	36
3.3 Servicing suspension strut	39
3.4 Removing and installing upper suspension link	43
3.5 Renewing bush for upper suspension link	45
3.6 Renewing boot	47
3.7 Charging suspension strut	49
3.8 Removing and installing shock absorber fork	51
3.9 Removing and installing strut brace	54
4 Lower suspension links, swivel joint	59
4.1 Assembly overview - lower suspension links, swivel joint	59
4.2 Removing and installing track control link	61
4.3 Removing and installing guide link	64
4.4 Renewing bush for track control link	66
4.5 Removing and installing swivel joint	71
4.6 Removing and installing bonded rubber bush for guide link	72
5 Wheel bearings	75
5.1 Assembly overview - wheel bearing	75
5.2 Raising wheel bearing assembly to unladen position	76
5.3 Removing and installing wheel bearing housing	81
5.4 Removing and installing wheel bearing unit	84
5.5 Servicing wheel bearing unit	86
6 Drive shaft	90
6.1 Assembly overview - drive shaft	90
6.2 Removing and installing drive shaft	92
6.3 Loosening and tightening threaded connections of drive shaft	93



6.4	Removing and installing heat shield for drive shaft	93
6.5	Dismantling and assembling drive shaft	94
6.6	Servicing constant velocity joint	107
6.7	Checking outer constant velocity joint	109
7	Anti-roll bar	112
7.1	Assembly overview – anti-roll bar	112
7.2	Removing and installing anti-roll bar	115
7.3	Removing and installing coupling rod	119
7.4	Removing and installing roll stabiliser control unit J924	121
42	- Rear suspension	123
1	Rear axle	123
1.1	Overview of fitting locations – rear axle	123
1.2	Removing and installing rear axle	126
2	Subframe	130
2.1	Assembly overview - subframe	130
2.2	Fixing subframe in position	132
2.3	Servicing subframe	136
3	Anti-roll bar	149
3.1	Assembly overview – anti-roll bar	149
3.2	Removing and installing anti-roll bar	151
3.3	Removing and installing coupling rod	154
3.4	Removing and installing roll stabiliser control unit 2 J1096	155
4	Suspension links, track rod	157
4.1	Assembly overview - transverse links	157
4.2	Removing and installing upper transverse links	159
4.3	Removing and installing lower transverse links	164
4.4	Removing and installing track rod	168
4.5	Removing and installing stone deflector	170
5	Suspension strut/shock absorber, spring	172
5.1	Assembly overview - suspension strut/shock absorber, spring	172
5.2	Removing and installing shock absorber	176
5.3	Servicing shock absorber	178
5.4	Removing and installing spring	178
6	Wheel bearing, trailing arm	188
6.1	Assembly overview – wheel bearing	188
6.2	Raising wheel bearing assembly to unladen position	189
6.3	Removing and installing wheel bearing housing	194
6.4	Removing and installing wheel bearing unit	197
6.5	Servicing wheel bearing unit	198
7	Drive shaft	202
7.1	Assembly overview – drive shaft	202
7.2	Removing and installing drive shaft	204
7.3	Dismantling and assembling drive shaft	205
7.4	Loosening and tightening threaded connections of drive shaft	212
7.5	Checking outer constant velocity joint	213
7.6	Checking inner constant velocity joint	213
7.7	Tensioning clamp for boot	214
43	- Self-levelling suspension	216
1	Vehicle level sender	216
1.1	Assembly overview – front vehicle level senders	216
1.2	Assembly overview – rear vehicle level senders	216
1.3	Removing and installing front vehicle level sender G78 / G289	217
1.4	Removing and installing rear vehicle level sender G76 / G77	218



2	Air suspension	219
2.1	Overview of fitting locations - electrical components	219
2.2	Overview of fitting locations - air suspension	221
2.3	Assembly overview - air supply unit	224
2.4	Checking air suspension for leaks	226
2.5	Servicing air pipe	228
2.6	Renewing connection piece	230
2.7	Removing and installing air supply unit	232
2.8	Removing and installing solenoid valve block	233
2.9	Removing and installing accumulator	234
2.10	Re-adapting normal level	235
2.11	Removing and installing running gear control unit J775	236
2.12	Removing and installing adaptive suspension compressor electronics J1135	236
2.13	Removing and installing filter	237
44	Wheels, tyres, vehicle geometry	238
1	Wheel alignment	238
1.1	Notes on wheel alignment	238
1.2	Prerequisites for wheel alignment	238
1.3	Preparations for testing	239
1.4	Wheel alignment specifications	242
1.5	Wheel alignment procedure	243
1.6	When is wheel alignment necessary?	244
1.7	Explanatory notes on production control numbers (PR numbers)	245
1.8	Wheel runout compensation	246
1.9	Checking maximum steering angle	246
1.10	Checking normal level for wheel alignment (vehicles with air suspension)	247
1.11	Adjusting camber at rear wheels	247
1.12	Adjusting toe setting at rear wheels	248
1.13	Adjusting camber at front wheels	248
1.14	Adjusting toe setting at front wheels	250
2	Adaptive cruise control	251
3	Front camera for assist systems	252
4	Night vision system	253
48	Steering	254
1	Steering wheel	254
1.1	Assembly overview – steering wheel	254
1.2	Removing and installing steering wheel	255
2	Steering column	257
2.1	Assembly overview – steering column	257
2.2	Removing and installing steering column	259
2.3	Removing and installing intermediate steering shaft	261
2.4	Removing and installing control unit for electrically adjustable steering column J866	263
2.5	Removing and installing control unit for electronic steering column lock J764	263
3	Steering rack	265
3.1	Assembly overview – steering rack	265
3.2	Assembly overview – track rods	266
3.3	Removing and installing steering rack	268
3.4	Removing and installing boot	271
3.5	Removing and installing track rod	274
3.6	Checking dimension of track rod ball joint	275
3.7	Removing and installing track rod ball joint	275
4	Rear wheel steering	278
4.1	Assembly overview - rear wheel steering	278



4.2	Removing and installing rear wheel steering rack	279
4.3	Aligning rear wheel steering rack	281
4.4	Checking alignment of rear wheel steering rack	283
4.5	Bringing rear wheel steering rack into zero position	284