



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair instructions</b>	<b>1</b>
1.1 General information	1
1.2 General repair instructions	2
1.3 Routing and attachment of lines	2
1.4 Notes on repair of CAN bus wiring	2
<b>91 - Communication</b>	<b>3</b>
<b>1 Infotainment system</b>	<b>3</b>
1.1 Overview of fitting locations – Infotainment system	3
1.2 Removing and installing infotainment system display	5
1.3 Removing and installing control unit 1 for information electronics J794	10
1.4 Removing and installing multimedia system control unit E380	11
<b>2 Sound system</b>	<b>13</b>
2.1 Components of sound system	13
2.2 Overview of fitting locations – sound system	14
2.3 Removing and installing digital sound package control unit/amplifier	16
2.4 Removing and installing bracket for digital sound package control unit J525	17
2.5 Removing and installing rear treble loudspeakers R14/R16	19
2.6 Removing and installing front treble loudspeakers R20/R22	19
2.7 Removing and installing front mid-range loudspeakers	19
2.8 Removing and installing rear bass loudspeakers R15/R17	20
2.9 Removing and installing front bass loudspeakers R21/R23	21
2.10 Removing and installing subwoofer R211	22
2.11 Removing and installing effect loudspeakers	23
2.12 Removing and installing centre loudspeaker	23
<b>3 Aerial systems</b>	<b>25</b>
3.1 Overview of fitting locations – aerial systems	25
3.2 Removing and installing aerial amplifier	29
3.3 Removing and installing frequency modulation (FM) frequency filter in negative wire R178	30
3.4 Removing and installing frequency modulation (FM) frequency filter in positive wire R179	30
3.5 Removing and installing roof aerial	31
3.6 Removing and installing bumper aerials	32
3.7 Removing and installing spoiler aerials	33
3.8 Removing and installing internal vehicle communication aerial R364	34
<b>4 Telephone system</b>	<b>35</b>
4.1 Overview of fitting locations – telephone system	35
4.2 Removing and installing front microphones R140/R141	36
4.3 Removing and installing transmission and reception stabilisation control unit R308	36
4.4 Removing and installing storage compartment with interface for mobile telephone R265	37
<b>5 TV system</b>	<b>39</b>
5.1 Overview - TV system	39
5.2 Overview of fitting locations - TV system	39
5.3 Removing and installing TV tuner	40
<b>6 Reversing camera system</b>	<b>43</b>
<b>7 Multifunction steering wheel</b>	<b>44</b>
7.1 Overview of multifunction steering wheel	44
7.2 Assembly overview – multifunction steering wheel	44
7.3 Removing and installing multifunction buttons in steering wheel E441/E440	45
7.4 Removing and installing Tiptronic switch in steering wheel E439/E438	49
<b>8 Connection for external multimedia devices</b>	<b>51</b>
8.1 Removing and installing USB connection 1 U41	51



8.2	Removing and installing USB connection 2 U42 .....	52
8.3	Removing and installing USB charging socket 1 U37 .....	53
8.4	Removing and installing USB hub R293 .....	54
<b>9</b>	<b>Night vision assist</b> .....	<b>55</b>
<b>10</b>	<b>Overhead view camera</b> .....	<b>56</b>
<b>11</b>	<b>Car-Net</b> .....	<b>57</b>
11.1	General information .....	57
11.2	Overview of fitting locations – mobile online services .....	57
11.3	Removing and installing emergency assistance call button E276 .....	59
11.4	Removing and installing breakdown assistance call button E275 .....	59
11.5	Removing and installing loudspeaker for emergency call module R335 .....	59