



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on passenger protection systems	2
1.2 Safety precautions when working on the high-voltage system	4
1.3 Safety precautions when working in the vicinity of high-voltage components	5
1.4 Safety measures when working on vehicles with a start/stop system	5
1.5 Specifications for transport, storage and installation of passenger protection components	5
1.6 Additional safety regulations for airbag control unit	6
1.7 Additional safety regulations for side airbag	6
1.8 Additional safety instructions for curtain airbag	7
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbags	7
1.10 Repair instructions for working on seat occupied sensor controlling deactivation of front passenger airbag	8
1.11 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	8
1.12 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	9
1.13 Checking airbag securing parts after an accident	10
1.14 Accident without airbag triggering	11
1.15 Checking seat belts	11
1.16 Checking belt webbing	11
1.17 Checking inertia reel (locking mechanism)	12
1.18 Visually checking belt buckle	12
1.19 Check operation of belt buckle	13
1.20 Checking belt relays and latch plate	13
1.21 Checking securing parts and anchorage points after an accident	13
1.22 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	14
1.23 Checking child seat anchors after an accident	14
1.24 Safety regulations for automatic anti-dazzle interior mirror	14
2 Repair notes	15
2.1 Contact corrosion	15
2.2 Routing and attachment of lines	15
68 - Interior equipment	16
1 Compartments/covers	16
1.1 Overview of fitting locations - storage compartments/covers/trim panels	16
1.2 Assembly overview - dash panel cover (driver side)	17
1.3 Assembly overview - steering column trim	18
1.4 Assembly overview - glove compartment	19
1.5 Removing and installing dash panel cover on driver side	20
1.6 Removing and installing gap cover for dash panel insert	22
1.7 Removing and installing upper steering column trim	25
1.8 Removing and installing lower steering column trim	26
1.9 Removing and installing glove compartment opener	27
1.10 Removing and installing lock cylinder for glove compartment opening mechanism	28
1.11 Removing and installing glove compartment	30
1.12 Removing and installing glove compartment cover	32
1.13 Removing and installing restrictor for glove compartment cover	33
1.14 Removing and installing footwell cover on front passenger side	33
2 Equipment	35
2.1 Assembly overview - net partition	35
2.2 Assembly overview - sun visors	36
2.3 Assembly overview - luggage compartment roller cover	36



2.4	Removing and installing mounting for net partition	38
2.5	Removing and installing net partition bracket	38
2.6	Removing and installing sun visor	40
2.7	Removing and installing sun visor centre mount	41
2.8	Removing and installing roof grab handle	41
2.9	Removing and installing grab handle bracket	43
2.10	Removing and installing luggage compartment roller cover	43
3	Centre console	48
3.1	Assembly overview - centre console	48
3.2	Removing and installing rear centre console trim	50
3.3	Removing and installing centre console insert	52
3.4	Removing and installing front centre console storage compartment	53
3.5	Removing and installing centre console trim in front footwell	54
3.6	Removing and installing centre console	55
3.7	Removing and installing trim panel for centre console	57
3.8	Removing and installing cup holders	57
3.9	Removing and installing rear centre console storage compartment	59
3.10	Removing and installing vent in rear centre console	61
3.11	Removing and installing centre console bracket	62
4	Front centre armrest	63
4.1	Assembly overview - front centre armrest	63
4.2	Removing and installing front centre armrest	63
5	Interior mirror	65
5.1	Assembly overview – interior mirror	65
5.2	Removing and installing interior mirror	66
69	Passenger protection	77
1	Seat belts	77
1.1	Overview of fitting locations – seat belts and anchorage points	77
1.2	Assembly overview – front three-point seat belt	79
1.3	Assembly overview – rear outer three-point seat belt	80
1.4	Assembly overview – rear centre three-point seat belt	81
1.5	Assembly overview – front belt buckle	82
1.6	Assembly overview – rear belt buckle	83
1.7	Removing and installing front three-point seat belt	84
1.8	Removing and installing rear three-point seat belt	87
1.9	Removing and installing rear belt guide	90
1.10	Removing and installing front belt guide	90
1.11	Removing and installing front belt end fitting	91
1.12	Removing and installing rear outer belt end fitting	91
1.13	Removing and installing rear belt end fitting in centre	92
1.14	Removing and installing belt height adjuster	93
1.15	Removing and installing front belt buckle	94
1.16	Removing and installing rear belt buckle	95
2	Child seat anchors	97
2.1	Assembly overview – rear child seat anchors	97
2.2	Removing and installing rear child seat anchors	97
3	Airbag system	100
3.1	Overview of fitting locations – airbag system	100
4	Airbag control unit	103
4.1	Assembly overview – airbag control unit	103
4.2	Removing and installing airbag control unit J234	103
5	Battery isolator igniter	106
5.1	Assembly overview - battery isolator igniter	106
5.2	Removing and installing battery isolator igniter	108



6	Front airbag	110
6.1	Assembly overview – front airbag, driver side	110
6.2	Removing and installing airbag unit with igniter	112
6.3	Renewing connector on airbag	118
7	Front passenger airbag	120
7.1	Assembly overview – front passenger airbag	120
7.2	Removing and installing front passenger airbag unit with igniter	121
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	124
8	Side airbags	126
8.1	Assembly overview – front side airbag	126
8.2	Assembly overview - rear side airbag	126
8.3	Removing and installing front side airbag with igniter	128
8.4	Removing and installing rear side airbag with igniter	130
9	Curtain airbags	133
9.1	Assembly overview – curtain airbag	133
9.2	Removing and installing curtain airbag with igniter	133
10	Knee airbags	139
10.1	Assembly overview - knee airbag	139
10.2	Removing and installing knee airbag with igniter	141
10.3	Removing and installing knee airbag bracket	145
11	Airbag crash sensors	148
11.1	Overview of fitting locations – airbag crash sensors	148
11.2	Removing and installing front airbag crash sensor for driver side G283	149
11.3	Removing and installing front side airbag crash sensor	151
11.4	Removing and installing rear side airbag crash sensor G256/G257	153
12	Seat occupied recognition system	156
12.1	Overview of fitting locations - seat occupied recognition system	156
12.2	Removing and installing seat occupied sensor, front passenger side G128	157
12.3	Removing and installing rear seat occupied sensor G177/G178	157
12.4	Removing and installing rear seat occupied sensor, centre G1010	158
13	Pedestrian protection	160
13.1	Assembly overview - pedestrian protection	160
13.2	Removing and installing crash sensor for pedestrian protection	162
13.3	Removing and installing trigger for pedestrian protection G598/G599	164
13.4	Remove and installing front pressure hose sensor for pedestrian protection G579	165
70	- Trim, insulation	168
1	Front door trims	168
1.1	Assembly overview – front door trim	168
1.2	Removing and installing trim	170
1.3	Removing and installing front door trim	171
1.4	Removing and installing front armrest	175
1.5	Removing and installing front door puller	177
1.6	Removing and installing window frame trim	179
2	Rear door trims	181
2.1	Assembly overview – rear door trim	181
2.2	Assembly overview - sun blind for door window	183
2.3	Removing and installing trim	184
2.4	Removing and installing rear door trim	185
2.5	Removing and installing rear armrest	188
2.6	Removing and installing rear door puller	190
2.7	Removing and installing window frame trim	191
2.8	Removing and installing sun blind for door window	193
2.9	Removing and installing eyelet for sun blind	194



3	Dash panel	196
3.1	Assembly overview - dash panel	196
3.2	Removing and installing dash panel end cover	202
3.3	Removing and installing dash panel trim	203
3.4	Removing and installing trim for dash panel insert	205
3.5	Removing and installing loudspeaker trim	205
3.6	Removing and installing retaining frame for dash panel insert	206
3.7	Removing and installing dash panel	211
3.8	Removing and installing cover for MMI screen	215
3.9	Removing and installing outer dash panel vents	216
3.10	Removing and installing centre vent	218
3.11	Removing and installing front centre defroster vent	219
3.12	Removing and installing side defroster vent	219
3.13	Removing and installing cover for dash panel/head-up display	220
4	Dash panel cross member	222
4.1	Assembly overview – dash panel cross member	222
4.2	Removing and installing dash panel cross member	223
5	Interior trims	228
5.1	Overview of fitting locations – interior trims	228
5.2	Assembly overview – sill panel moulding	229
5.3	Assembly overview – A-pillar trim	230
5.4	Assembly overview – B-pillar trim	232
5.5	Assembly overview – C-pillar trim	233
5.6	Assembly overview - D-pillar trim	234
5.7	Assembly overview – wheel housing trim	235
5.8	Assembly overview – foot rest and floor covering	236
5.9	Removing and installing sill panel moulding	238
5.10	Removing and installing upper A-pillar trim	239
5.11	Removing and installing lower A-pillar trim	240
5.12	Removing and installing A-pillar gap cover	242
5.13	Removing and installing upper B-pillar trim	243
5.14	Removing and installing lower B-pillar trim	245
5.15	Removing and installing C-pillar trim	246
5.16	Removing and installing D-pillar trim	248
5.17	Removing and installing wheel housing trim	250
5.18	Removing and installing foot rest	251
5.19	Removing and installing floor covering	252
5.20	Removing and installing bulkhead cover	256
6	Luggage compartment trims	258
6.1	Assembly overview – luggage compartment side trim	258
6.2	Assembly overview – luggage compartment floor	259
6.3	Assembly overview – lower rear lid trim	261
6.4	Assembly overview – upper rear lid trim	261
6.5	Removing and installing lower rear lid trim	262
6.6	Removing and installing upper rear lid trim	264
6.7	Removing and installing luggage compartment side trim	265
6.8	Removing and installing lock carrier trim	267
6.9	Removing and installing fastening rings	268
6.10	Removing and installing support for luggage compartment floor	268
6.11	Removing and installing bag hook	269
6.12	Removing and installing rear luggage compartment floor handle	270
6.13	Removing and installing retaining strip	271
6.14	Removing and installing lining for spare wheel well	272
6.15	Removing and installing trim for rear lid lock	273
7	Roof trims	275



7.1	Assembly overview – moulded headliner	275
7.2	Removing and installing moulded headliner	275
7.3	Installing roof reinforcement to body	278
72	Seat frames	283
1	Overview of seat variants	283
1.1	Overview of fitting locations – seat variants	283
2	Front seats	284
2.1	Overview of fitting locations – electrical and electronic components	284
2.2	Assembly overview – front seat	287
2.3	Assembly overview – front backrest	291
2.4	Assembly overview – seat pan	294
2.5	Assembly overview – seat height adjustment	299
2.6	Assembly overview – fire extinguisher	301
2.7	Removing and installing front seat	302
2.8	Connecting and disconnecting airbag adapter	311
2.9	Removing and installing seat rail covers	313
2.10	Removing and installing seat height adjustment handle	314
2.11	Removing and installing inner seat trim	315
2.12	Removing and installing outer seat trim	316
2.13	Removing and installing seat trim	318
2.14	Removing and installing seat trim bracket	319
2.15	Removing and installing lumbar support	320
2.16	Removing and installing seat height adjuster	321
2.17	Removing and installing driver seat longitudinal adjustment motor V28	323
2.18	Removing and installing lumbar support adjuster	324
2.19	Removing and installing backrest adjuster	326
2.20	Removing and installing front backrest	327
2.21	Removing and installing seat depth adjuster	330
2.22	Removing and installing fire extinguisher holder	331
2.23	Removing and installing head restraint	333
2.24	Removing and installing head restraint guide	333
2.25	Removing and installing storage compartment	334
2.26	Removing and installing seat adjustment operating unit E470/E471	335
2.27	Removing and installing lumbar support adjustment switch E176/E177	337
2.28	Removing and installing seat and steering column adjustment control unit with memory J136	338
2.29	Removing and installing backrest cover panel	340
2.30	Removing and installing backrest fan	341
2.31	Removing and installing seat padding ventilator	341
2.32	Securing front seat to seat repair stand	343
3	Front seat pneumatic system	344
3.1	Assembly overview - pneumatic system	344
3.2	Connection diagram - pneumatic system	346
3.3	Checking pneumatic system	347
3.4	Separating and connecting pneumatic lines	351
3.5	Servicing pneumatic lines	353
3.6	Removing and installing air cushion with seat bolster adjustment	353
3.7	Removing and installing air cushion with backrest bolster adjustment	354
3.8	Removing and installing massage mat	355
3.9	Removing and installing module carrier with valve block 1 N475/N477	356
3.10	Removing and installing valve block 2 N476/N478	358
3.11	Removing and installing compressor for pneumatic seat	359
4	Rear seats	361
4.1	Assembly overview – bench seat/individual seats	361
4.2	Assembly overview - locking mechanism	363



4.3	Assembly overview - load-through hatch and centre armrest	364
4.4	Removing and installing bench seat/individual seats	366
4.5	Removing and installing load-through hatch	369
4.6	Removing and installing head restraint	370
4.7	Removing and installing head restraint guide	371
4.8	Removing and installing back panel trim	371
4.9	Removing and installing trim for locking mechanism	373
4.10	Removing and installing seat trim for backrest fitting	374
4.11	Removing and installing middle seat trim	377
4.12	Removing and installing centre armrest	378
4.13	Disconnecting and connecting Bowden cable for remote release mechanism of rear seat backrest	380
4.14	Removing and installing operating handle for remote release mechanism of rear seat backrest	381
4.15	Removing and installing Bowden cable for remote release mechanism of rear seat backrest	382
74	Seat - padding, covers	385
1	Front seat covers and padding	385
1.1	Assembly overview – seat pan cover and padding	385
1.2	Assembly overview – backrest cover and padding	387
1.3	Assembly overview – seat heating element	388
1.4	Removing and installing seat pan cover and padding	390
1.5	Removing and installing backrest cover and padding	395
1.6	Separating seat pan cover from seat pan padding	401
1.7	Separating backrest cover from backrest padding	402
1.8	Removing and installing seat heating element	403
1.9	Removing and installing backrest heating element	405
2	Rear seat covers and padding	407
2.1	Assembly overview - cover and padding	407
2.2	Assembly overview – seat heating element	411
2.3	Removing and installing cover and padding	412
2.4	Separating cover and padding	417
2.5	Removing and installing seat heating element	421
2.6	Removing and installing backrest heating element	422