



Contents

00 - Technical data	1
1 Induction training/staff qualifications	1
1.1 Qualification	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Type plate	3
2.3 Vehicle data sticker	4
3 Safety information	6
4 Body work for which HV electrical system must be de-energised	7
4.1 The following body work requires the HV electrical system to be de-energised.	7
5 Moulded foam inserts	8
6 Galvanized and aluminium body parts, high/ultra-high strength and hot-formed body panels	10
6.1 Aluminium panels	11
7 Laser welding	16
8 Body panel gaps/shut lines	17
8.1 Body, front	17
8.2 Body, centre	18
8.3 Body - rear	19
9 Body dimensions	20
9.1 Body, front	20
9.2 Body, centre	22
9.3 Body - rear	27
9.4 Floor panel, front	28
9.5 Floor panel, centre	29
9.6 Floor panel, rear	30
10 Straightening bracket set	32
10.1 Setup overview of complete body	32
11 Portal gauge	34
11.1 Setup overview of complete body	34
12 Repair kit for flow-drill screws	36
13 Extraction technology for multi-material body workplaces	37
14 Rivets accessible from one side	38
15 Overview of press tool insert combinations	39
16 Overview of rivets for repairs	40
50 - Body - front	41
1 Renewing upper wheel housing longitudinal member - part section	41
1.1 Tools	42
1.2 Removing	42
1.3 Installing	45
2 Renewing upper wheel housing longitudinal member	53
2.1 Tools	54
2.2 Removing	54
2.3 Installing	56
3 Renewing front wheel housing	62
3.1 Tools	63
3.2 Removing	63
3.3 Installing	65
4 Renewing front longitudinal member	69



4.1	Tools	70
4.2	Removing	70
4.3	Installing	78
5	Renewing front longitudinal member (part section)	86
5.1	Tools	87
5.2	Removing	87
5.3	Installing	89
6	Renewing upper footwell cross member	100
6.1	Tools	101
6.2	Removing	101
6.3	Installing	103
7	Renewing outer footwell cross member	107
7.1	Tools	108
7.2	Removing	108
7.3	Installing	111
51 - Body - centre		116
1	Renewing roof - vehicles without panoramic tilting sunroof	116
1.1	Tools	117
1.2	Removing	117
1.3	Installing	121
2	Renewing roof - vehicles with panoramic tilting sunroof	132
2.1	Tools	133
2.2	Removing	133
2.3	Installing	138
3	Renewing roof side member	150
3.1	Tools	151
3.2	Removing	151
3.3	Installing	153
4	Renewing front roof cross member	159
4.1	Tools	160
4.2	Removing	160
4.3	Installing	162
5	Renewing rear roof cross member	165
5.1	Tools	166
5.2	Removing	166
5.3	Installing	168
6	Renewing A-pillar	171
6.1	Tools	172
6.2	Removing	172
6.3	Installing	174
7	Renewing A-pillar reinforcement	181
7.1	Tools	182
7.2	Removing	182
7.3	Installing	184
8	Renewing upper A-pillar reinforcement (part section)	189
8.1	Tools	190
8.2	Removing	190
8.3	Installing	194
9	Renewing B-pillar	204
9.1	Tools	206
9.2	Type plate	206
9.3	Removing	207
9.4	Installing	209



10	Renewing B-pillar reinforcement	215
10.1	Tools	216
10.2	Type plate	216
10.3	Removing	217
10.4	Installing	220
11	Renewing outer side member	224
11.1	Tools	225
11.2	Type plate	225
11.3	Removing	226
11.4	Installing	228
12	Renewing front seat cross member	235
12.1	Tools	236
12.2	Removing	237
12.3	Installing	239
13	Renewing rear seat cross member	242
13.1	Tools	243
13.2	Removing	243
13.3	Installing	245
14	Renewing centre tunnel	248
14.1	Tools	249
14.2	Removing	249
14.3	Installing	252
53 - Body - rear		256
1	Renewing cross panel	256
1.1	Tools	257
1.2	Removing	257
1.3	Installing	259
2	Renewing rear longitudinal member (part section)	265
2.1	Tools	266
2.2	Removing	266
2.3	Installing	271
3	Renewing cross panel reinforcement	279
3.1	Tools	280
3.2	Removing	280
3.3	Installing	284
4	Renewing side panel	297
4.1	Tools	298
4.2	Removing	298
4.3	Installing	301
5	Renewing C-pillar reinforcement	308
5.1	Tools	309
5.2	Removing	309
5.3	Installing	311
6	Renewing rear inner wheel housing	316
6.1	Tools	317
6.2	Removing	317
6.3	Installing	320
7	Renewing rear outer wheel housing	326
7.1	Tools	327
7.2	Removing	327
7.3	Installing	329
8	Renewing rear luggage compartment floor	334
8.1	Tools	335



8.2	Removing	335
8.3	Installing	338
9	Renewing rear luggage compartment floor (part section)	345
9.1	Tools	346
9.2	Removing	346
9.3	Installing	348