



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety precautions when working on air conditioning systems                                  | 1         |
| 1.2 Safety precautions when working on vehicles with a start/stop system                         | 1         |
| 1.3 Safety precautions when working on high-voltage system                                       | 2         |
| 1.4 Safety precautions when working in the vicinity of high-voltage components                   | 3         |
| 1.5 Safety precautions when using testing and measuring instruments during a road test           | 3         |
| 1.6 Safety precautions when working on the cooling system  | 3         |
| 1.7 Safety precautions when handling refrigerants  | 3         |
| 1.8 Safety precautions for working on vehicles with auxiliary heater                             | 4         |
| 1.9 Safety precautions when working on SCR system  | 5         |
| <b>2 General information</b>   | <b>7</b>  |
| 2.1 Type plates  | 7         |
| 2.2 Notes concerning odours in air conditioned vehicles  | 8         |
| <b>3 Repair notes</b>  | <b>9</b>  |
| 3.1 Rules for cleanliness  | 9         |
| 3.2 General notes  | 9         |
| 3.3 General repair instructions  | 9         |
| 3.4 Contact corrosion  | 10        |
| 3.5 Nuts and bolts   | 10        |
| 3.6 Line routing and attachment  | 10        |
| 3.7 Fitting radiators and condensers   | 11        |
| 3.8 Checking cooling output  | 11        |
| 3.9 Working on refrigerant circuit   | 12        |
| 3.10 Refrigerant circuit seals   | 13        |
| <b>4 Technical data</b>  | <b>15</b> |
| 4.1 Refrigerant capacity   | 15        |
| 4.2 Refrigerant oil capacities   | 15        |
| 4.3 Oil distribution   | 16        |
| <b>80 - Heating</b>  | <b>17</b> |
| <b>1 Heating</b>   | <b>17</b> |
| <b>87 - Air conditioning system</b>  | <b>18</b> |
| <b>1 Overview of fitting locations - air conditioning system</b>                                 | <b>18</b> |
| 1.1 Overview of fitting locations - components not located in passenger compartment              | 18        |
| 1.2 Overview of fitting locations - components located in front section of passenger compartment | 19        |
| <b>2 Refrigerant circuit</b>   | <b>21</b> |
| 2.1 System overview - refrigerant circuit  | 21        |
| 2.2 Assembly overview - refrigerant lines  | 23        |
| 2.3 Assembly overview - condenser  | 26        |
| 2.4 Assembly overview - heat exchanger for high-voltage battery                                  | 27        |
| 2.5 Removing and installing refrigerant circuit pressure sender G805                             | 28        |
| 2.6 Removing and installing refrigerant pressure and temperature sender G395                     | 30        |
| 2.7 Removing and installing refrigerant pressure and temperature sender 2 G826                   | 33        |
| 2.8 Removing and installing refrigerant shut-off valve for heater and air conditioner unit N541  | 36        |
| 2.9 Removing and installing refrigerant line with internal heat exchanger                        | 40        |
| 2.10 Removing and installing expansion valve   | 43        |
| 2.11 Removing and installing condenser   | 46        |
| 2.12 Separating and connecting refrigerant lines on condenser                                    | 50        |
| 2.13 Removing and installing desiccant bag or cartridge  | 52        |
| 2.14 Removing and installing evacuating and charging valves on low and high-pressure side        | 54        |



|          |  |            |
|----------|--|------------|
| 2.15     | Commissioning air conditioning system after filling refrigerant circuit .....  | 56         |
| 2.16     | Removing and installing refrigerant line from air conditioner compressor to condenser ..                                     | 57         |
| 2.17     | Removing and installing refrigerant line from condenser to refrigerant lines with inner heat exchanger .....                 | 60         |
| 2.18     | Removing and installing refrigerant line from refrigerant line with inner heat exchanger to air conditioner compressor ..... | 62         |
| 2.19     | Removing and installing refrigerant line in plenum chamber .....   | 65         |
| 2.20     | Removing and installing leadthrough for refrigerant lines into plenum chamber .....  | 68         |
| 2.21     | Detaching and assembling connections of refrigerant lines .....  | 71         |
| 2.22     | Disconnecting and connecting refrigerant lines .....   | 73         |
| 2.23     | Removing and installing heat exchanger for high-voltage battery .....  | 75         |
| 2.24     | Removing and installing refrigerant expansion valve 1 N636 .....   | 80         |
| 2.25     | Commissioning air conditioning system after filling refrigerant circuit .....  | 83         |
| <b>3</b> | <b>Air conditioner compressor .....</b>  | <b>85</b>  |
| 3.1      | Assembly overview - drive unit of air conditioner compressor .....   | 85         |
| 3.2      | Assembly overview - pulley .....   | 91         |
| 3.3      | Removing air conditioning compressor from and installing on bracket .....  | 92         |
| 3.4      | Removing and installing air conditioner compressor .....   | 99         |
| 3.5      | Removing and installing pulley .....   | 114        |
| <b>4</b> | <b>Control motors .....</b>  | <b>121</b> |
| 4.1      | Overview of fitting locations – front control motors .....   | 122        |
| 4.2      | Assembly overview - front control motors .....   | 128        |
| 4.3      | General notes and procedure for removal and installation of control motors .....   | 134        |
| 4.4      | Removing and installing defroster flap control motor V107 .....  | 135        |
| 4.5      | Removing and installing left footwell flap control motor V108 .....  | 138        |
| 4.6      | Removing and installing right footwell flap control motor V109 .....   | 140        |
| 4.7      | Removing and installing left centre vent control motor V110 .....  | 143        |
| 4.8      | Removing and installing right centre vent control motor V111 .....   | 145        |
| 4.9      | Removing and installing air recirculation flap control motor V113 .....  | 147        |
| 4.10     | Removing and installing rear temperature flap control motor V137 .....   | 149        |
| 4.11     | Removing and installing left temperature flap control motor V158 .....   | 151        |
| 4.12     | Removing and installing right temperature flap control motor V159 .....  | 153        |
| 4.13     | Removing and installing right B-pillar and footwell shut-off flap control motor V211 .....                                   | 156        |
| 4.14     | Removing and installing left B-pillar and footwell shut-off flap control motor V212 .....                                    | 157        |
| 4.15     | Removing and installing left side vent control motor V299 .....  | 159        |
| 4.16     | Removing and installing right side vent control motor V300 .....   | 161        |
| 4.17     | Removing and installing rear left temperature flap control motor V313 .....  | 163        |
| 4.18     | Removing and installing rear right temperature flap control motor V314 .....   | 165        |
| 4.19     | Removing and installing rear left chest vent control motor V315 .....  | 167        |
| 4.20     | Removing and installing rear right chest vent control motor V316 .....   | 168        |
| 4.21     | Removing and installing rear air distribution control motor V427 .....   | 170        |
| 4.22     | Removing and installing fresh air flap control motor V438 .....  | 172        |
| 4.23     | Removing and installing rear left air distribution control motor V593 .....  | 174        |
| 4.24     | Removing and installing rear right air distribution control motor V594 .....   | 176        |
| 4.25     | Removing and installing control motor bracket .....  | 177        |
| <b>5</b> | <b>Front heater and air conditioning unit .....</b>  | <b>194</b> |
| 5.1      | Assembly overview - add-on parts of heater and air conditioning unit and of air intake box ..                                | 194        |
| 5.2      | Assembly overview – heater and air conditioning unit .....   | 196        |
| 5.3      | Assembly overview - air intake box of heater and air conditioning unit .....   | 196        |
| 5.4      | Assembly overview – evaporator housing .....   | 197        |
| 5.5      | Removing and installing evaporator .....   | 198        |
| 5.6      | Removing and installing auxiliary air heater element Z35 .....   | 198        |
| 5.7      | Removing and installing heater and air conditioning unit .....   | 201        |
| 5.8      | Dismantling and assembling heater and air conditioning unit .....  | 207        |
| 5.9      | Removing and installing air distribution housing .....   | 210        |
| 5.10     | Removing and installing dust and pollen filter .....   | 210        |

---



|          |   |            |
|----------|---|------------|
| 5.11     | Removing and installing fresh air blower V2 .....   | 211        |
| 5.12     | Removing and installing fresh air blower control unit J126 .....  | 212        |
| 5.13     | Removing and installing heat exchanger .....  | 213        |
| 5.14     | Removing and installing coolant pipes on heat exchanger .....   | 223        |
| 5.15     | Removing and installing evaporator temperature sensor G308 .....  | 224        |
| 5.16     | Removing and installing condensation drain .....  | 225        |
| 5.17     | Checking condensation drain .....   | 227        |
| <b>6</b> | <b>Air duct .....</b>   | <b>228</b> |
| 6.1      | Assembly overview - air duct and air distribution in passenger compartment .....                                | 228        |
| 6.2      | Assembly overview - rear air distribution housing .....   | 234        |
| 6.3      | Air intake and air outlet openings .....  | 235        |
| 6.4      | Removing and installing driver side footwell vents .....  | 237        |
| 6.5      | Removing and installing front passenger side footwell vents .....   | 237        |
| 6.6      | Removing and installing air ducts .....   | 239        |
| 6.7      | Removing and installing forced ventilation for passenger compartment .....                                      | 250        |
| 6.8      | Checking forced ventilation for passenger compartment .....   | 252        |
| 6.9      | Removing and installing fresh air intake .....  | 252        |
| 6.10     | Removing and installing water drain of plenum chamber .....   | 254        |
| 6.11     | Checking water drain of plenum chamber .....  | 255        |
| 6.12     | Removing and installing air duct for defroster vent .....   | 255        |
| 6.13     | Removing and installing rear air distribution housing .....   | 256        |
| 6.14     | Removing and installing cold air hose of glove compartment .....  | 257        |
| 6.15     | Removing and installing connection for cold air hose of glove compartment .....                                 | 258        |
| 6.16     | Removing and installing valve for cold air hose of glove compartment .....                                      | 259        |
| <b>7</b> | <b>Coolant circuit .....</b>  | <b>260</b> |
| 7.1      | Removing and installing high-voltage heater (PTC) Z115 (with high-voltage heater (PTC) control unit J848) ..... | 260        |
| 7.2      | Bleeding coolant circuit .....  | 266        |
| <b>8</b> | <b>Operating and display unit .....</b>   | <b>268</b> |
| 8.1      | Overview of operating and display unit .....  | 268        |
| 8.2      | Removing and installing operating and display unit .....  | 272        |
| <b>9</b> | <b>Other controlling and regulating components .....</b>  | <b>275</b> |
| 9.1      | Removing and installing ambient temperature sensor G17 .....  | 275        |
| 9.2      | Removing and installing left footwell vent temperature sender G261 .....  | 276        |
| 9.3      | Removing and installing right footwell vent temperature sender G262 .....                                       | 276        |
| 9.4      | Removing and installing rear left footwell temperature sensor G309 .....  | 277        |
| 9.5      | Removing and installing rear right footwell temperature sensor G310 .....                                       | 277        |
| 9.6      | Removing and installing air humidity, rain and light sensor G823 .....  | 277        |
| 9.7      | Removing and installing temperature sensor for left side vent G911 .....  | 278        |
| 9.8      | Removing and installing temperature sensor for right side vent G912 .....                                       | 278        |
| 9.9      | Removing and installing temperature sender 1 in dash panel temperature sensor G922 ..                           | 279        |
| 9.10     | Removing and installing external air quality and humidity sensor G935 .....                                     | 279        |
| 9.11     | Removing and installing thermal management control unit J1024 .....   | 280        |