



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures for working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety regulations for working on fuel supply	3
1.5 Safety measures when working on vehicles with a start/stop system	3
1.6 Safety precautions when using testing and measuring instruments during a road test	3
1.7 Safety precautions when working on the cooling system	4
1.8 Safety precautions when working on vehicles with auxiliary/supplementary heater	4
1.9 Safety precautions when working on SCR system	5
2 General information	7
2.1 Type plates	7
2.2 Starting conditions for auxiliary/supplementary heater	8
3 Repair notes	10
3.1 Rules for cleanliness	10
3.2 General information	10
3.3 General repair instructions	10
3.4 Contact corrosion	11
3.5 Nuts and bolts	11
3.6 Line routing and attachment	11
82 - Supplementary heating	13
1 Overview of fitting locations - auxiliary/supplementary heater	13
1.1 Overview of fitting locations - components not located in passenger compartment	13
1.2 Overview of fitting locations - components located in passenger compartment	13
2 Auxiliary/supplementary heater	15
2.1 Assembly overview - auxiliary/supplementary heater	15
2.2 Assembly overview - components inside auxiliary/supplementary heater	18
2.3 Removing and installing auxiliary/supplementary heater	21
2.4 Dismantling and assembling auxiliary/supplementary heater	25
2.5 Removing and installing air intake silencer	37
2.6 Removing and installing circulation pump V55	38
2.7 Removing and installing silencer with bracket	41
2.8 Removing and installing exhaust system	42
2.9 Removing and installing bracket for auxiliary/supplementary heater	44
3 Coolant circuit with auxiliary/supplementary heater	46
3.1 Connection diagram - coolant hoses	46
3.2 Bleeding coolant circuit of auxiliary/supplementary heater	46
3.3 Removing and installing heater coolant shut-off valve N279	47
4 Fuel supply	51
4.1 Overview of fitting locations - fuel supply system	51
4.2 Assembly overview - fuel supply system	51
4.3 Checking fuel delivery rate	54
4.4 Removing and installing fuel lines of auxiliary heater	55
4.5 Removing and installing metering pump V54	59
4.6 Removing and installing bracket for metering pump V54	61
5 Auxiliary/supplementary heater control	62
5.1 Functional description	62
5.2 Supplementary heating mode	62
5.3 Auxiliary heating mode	63
5.4 Switching off auxiliary/supplementary heater	63



6	Further control components	64
6.1	Removing and installing ambient temperature sensor G17	64
6.2	Removing and installing remote control receiver for auxiliary heater R64	64