



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the vehicle	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when working on a high-voltage system	2
1.4 Safety precautions when working in the vicinity of high-voltage components	3
2 Identification	5
2.1 Identification of final drive	5
3 Repair instructions	9
3.1 General repair instructions	9
3.2 Gaskets and seals	11
3.3 Nuts and bolts	11
4 Technical data	12
4.1 Allocation gearbox - engine	12
4.2 Capacities	12
39 - Final drive - rear differential	14
1 Final drive	14
1.1 Assembly overview - rear final drive	14
1.2 Removing and installing rear final drive	16
2 Assembly mountings	21
2.1 Removing and installing bonded rubber bush	21
3 Gear oil	25
3.1 Overview of fitting locations - drain and inspection plugs	25
3.2 Checking gear oil level	26
4 Seals	27
4.1 Overview of fitting locations – oil seals	27
4.2 Renewing left seal	28
4.3 Renewing right seal	33
4.4 Renewing input shaft seal	37
4.5 Renewing protective ring on flange shaft	52
4.6 Renewing protective ring on flange/propshaft	54
5 Propshaft	57
5.1 Assembly overview – propshaft	57
5.2 Removing and installing propshaft	58
5.3 Renewing protective boot	67