



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the vehicle	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting or towing	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair notes	4
3.1 Rules for cleanliness	4
3.2 General information	4
3.3 General repair instructions	5
3.4 Routing and attachment of lines	7
4 Technical data	8
4.1 Capacities	8
4.2 Oil distribution	9
4.3 Allocation gearbox - motor	9
5 Overview – power transmission	10
32 - Torque converter	11
1 Torque converter	11
1.1 Assembly overview - torque converter	11
1.2 Removing and installing torque converter	11
1.3 Draining torque converter	15
1.4 Checking torque converter	15
1.5 Removing and installing torque converter oil seal	15
37 - Controls, housing	17
1 Selector mechanism	17
1.1 Assembly overview – selector mechanism	17
1.2 Assembly overview - manual release mechanism for parking lock	18
1.3 Checking selector mechanism	19
1.4 Manual release from P position	23
1.5 Removing and installing selector lever handle	24
1.6 Removing and installing selector mechanism	25
1.7 Removing and installing emergency release cable for parking lock	26
1.8 Renewing selector shaft seal	30
2 Removing and installing gearbox	33
2.1 Removing gearbox	33
2.2 Installing gearbox	53
2.3 Specified torques for gearbox	59
3 Assembly mountings	61
3.1 Assembly overview – assembly mountings	61
3.2 Removing and installing tunnel cross member	62
4 Gearbox transport	68
5 Securing to engine and gearbox support	69
6 ATF circuit	70
6.1 Assembly overview – ATF circuit	70
6.2 Removing and installing ATF cooler	72
6.3 Removing and installing ATF lines	74
7 ATF	77



7.1	Checking ATF level	77
7.2	Draining and filling ATF	81
38	- Gears, control	84
1	ATF system	84
1.1	Assembly overview - ATF system	84
1.2	Removing and installing hydraulic pulse accumulator with accumulator solenoid N485	87
1.3	Removing and installing oil pan	88
2	Mechatronic unit	91
2.1	Removing and installing mechatronic unit	91
39	- Final drive - front differential	96
1	Final drive	96
1.1	Assembly overview – final drive	96
1.2	Removing and installing O-ring on cover for front final drive	99
2	Gear oil	101
2.1	Checking gear oil level	101
2.2	Draining and filling gear oil	105
3	Oil seals	111
3.1	Renewing left seal	111
3.2	Renewing right seal	113
4	Differential	115
4.1	Removing and installing left flange shaft	115
4.2	Removing and installing right flange shaft	117
5	Centre differential	120
5.1	Assembly overview - centre differential	120
5.2	Removing and installing centre differential	122
5.3	Renewing oil seal for rear splined shaft	123
5.4	Renewing ball bearing for rear splined shaft	125
5.5	Renewing ball bearing for centre differential	129
6	Transfer box	131
6.1	Assembly overview – transfer box	131
6.2	Dismantling and assembling transfer box	132