



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the vehicle	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting or towing	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair instructions	4
3.1 Rules for cleanliness	4
3.2 General information	4
3.3 General repair instructions	5
3.4 Routing and attachment of lines	7
4 Technical data	8
4.1 Allocation gearbox - engine	8
4.2 Capacities	8
5 Overview – power transmission	11
32 - Torque converter	12
1 Torque converter	12
1.1 Assembly overview - torque converter	12
1.2 Removing and installing torque converter	12
1.3 Draining torque converter	16
1.4 Checking torque converter	17
1.5 Removing and installing torque converter oil seal	17
37 - Controls, housing	19
1 Selector mechanism	19
1.1 Assembly overview – selector mechanism	19
1.2 Assembly overview - manual release mechanism for parking lock	20
1.3 Checking selector mechanism	21
1.4 Manual release from position P	25
1.5 Removing and installing selector lever handle	26
1.6 Removing and installing selector mechanism	27
1.7 Removing and installing emergency release cable for parking lock	28
1.8 Renewing parking lock shaft seal	32
2 Removing and installing gearbox	36
2.1 Removing gearbox	36
2.2 Installing gearbox	42
2.3 Specified torques for gearbox	48
3 Assembly mountings	50
3.1 Assembly overview – assembly mountings	50
3.2 Removing and installing tunnel cross member	52
4 Gearbox transport	56
5 Securing to engine and gearbox support	58
6 ATF circuit	59
6.1 Assembly overview - ATF circuit	59
6.2 Removing and installing ATF cooler	61
6.3 Removing and installing ATF lines	63
7 ATF	66
7.1 Checking ATF level	66



7.2	Draining and filling ATF	70
38	- Gears, control	74
1	ATF system	74
1.1	Assembly overview - ATF system	74
1.2	Removing and installing oil pan	76
1.3	Removing and installing auxiliary hydraulic pump for gearbox oil	78
2	Mechatronic unit	86
2.1	Assembly overview – mechatronic unit	86
2.2	Removing and installing mechatronic unit	88
39	- Final drive - front differential	101
1	Final drive	101
1.1	Assembly overview – final drive	101
1.2	Removing and installing O-ring on cover for front final drive	104
2	Gear oil	106
2.1	Checking gear oil level, gearbox with shared oil supply	106
2.2	Draining and filling gear oil	109
3	Oil seals	114
3.1	Overview of fitting locations – oil seals	114
3.2	Renewing left seal	114
3.3	Renewing right seal	118
4	Differential	121
4.1	Removing and installing left flange shaft	121
4.2	Removing and installing right flange shaft	125
5	Centre differential	128
5.1	Assembly overview - centre differential	128
5.2	Removing and installing centre differential	130
5.3	Removing and installing rear splined shaft	132
5.4	Renewing oil seal for rear splined shaft	135
5.5	Renewing ball bearing for rear splined shaft	140
5.6	Renewing ball bearing for centre differential	145
6	Transfer box	148
6.1	Assembly overview – transfer box	148
6.2	Dismantling and assembling transfer box	149