



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working in vicinity of high-voltage components	1
1.2 Safety precautions when working on high-voltage system	1
1.3 Safety precautions when working on the vehicle	2
1.4 Safety measures when working on vehicles with a start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	4
1.6 Safety precautions when working on subframe	4
2 Identification	5
2.1 Gearbox identification	5
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 General information	6
3.3 General repair instructions	7
4 Technical data	10
4.1 Capacities	10
4.2 Oil distribution	11
32 - Torque converter	12
1 Torque converter	12
1.1 Assembly overview - torque converter	12
1.2 Removing and installing torque converter	13
1.3 Draining torque converter	15
1.4 Checking torque converter	16
1.5 Removing and installing torque converter oil seal	16
37 - Controls, housing	18
1 Selector mechanism	18
1.1 Assembly overview – selector mechanism	18
1.2 Assembly overview - manual release mechanism for parking lock	19
1.3 Checking selector mechanism	20
1.4 Manual release from P position	24
1.5 Removing and installing selector lever handle	25
1.6 Removing and installing selector mechanism	26
1.7 Removing and installing emergency release cable for parking lock	27
1.8 Renewing parking lock shaft seal	32
2 Removing and installing gearbox	35
2.1 Removing gearbox	35
2.2 Installing gearbox	43
2.3 Removing and installing three-phase current drive VX54	49
2.4 Specified torques for gearbox	54
3 Assembly mountings	57
3.1 Assembly overview - assembly mountings	57
3.2 Removing and installing tunnel cross member	59
4 Gearbox transport	63
5 Securing to engine and gearbox support	65
6 ATF circuit	66
6.1 Assembly overview – ATF circuit	66
6.2 Removing and installing ATF cooler	68
6.3 Removing and installing ATF lines	69
7 ATF	71



7.1	Checking ATF level	71
7.2	Draining and filling ATF	74
38	- Gears, control	77
1	ATF system	77
1.1	Removing and installing ATF strainer	77
1.2	Removing and installing sump	78
2	Mechatronic unit	80
2.1	Assembly overview – mechatronic unit	80
2.2	Removing and installing mechatronic unit	83
2.3	Removing and installing auxiliary hydraulic pump for gearbox oil	92
2.4	Removing and installing hydraulic impulse accumulator with accumulator solenoid N485	94
2.5	Removing and installing wiring harness for and installing auxiliary pump for gearbox oil	95
39	- Final drive - front differential	98
1	Final drive	98
1.1	Assembly overview – final drive	98
1.2	Removing and installing O-ring on cover for front final drive	100
2	Gear oil	102
2.1	Checking gear oil level	102
2.2	Draining and filling gear oil	104
3	Seals	108
3.1	Overview of fitting locations – oil seals	108
3.2	Renewing left seal	110
3.3	Renewing right seal	112
3.4	Renewing front protective tube seal	113
3.5	Renewing rear protective tube seal	114
4	Differential	115
4.1	Removing and installing left flange shaft	115
4.2	Removing and installing right flange shaft	119
5	Centre differential	121
5.1	Assembly overview - centre differential	121
5.2	Removing and installing centre differential	123
5.3	Removing and installing rear splined shaft	124
5.4	Renewing oil seal for rear splined shaft	127
5.5	Renewing ball bearing for rear splined shaft	131
5.6	Renewing ball bearing for centre differential	135
6	Transfer box	138
6.1	Assembly overview – transfer box	138
6.2	Dismantling and assembling transfer box	139