



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety regulations for working on fuel supply	2
1.4 Safety measures when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working on subframe	3
1.7 Safety precautions when working on the ignition system	3
1.8 Safety precautions when working on the cooling system	4
1.9 Safety precautions when working on the exhaust system	4
2 Identification	5
2.1 Engine number/engine data	5
2.2 Numbering of cylinders	6
3 Repair instructions	7
3.1 Rules for cleanliness	7
3.2 Foreign material in engine	7
3.3 Contact corrosion	7
3.4 Routing and attachment of lines	8
3.5 Fitting radiator and condensers	8
3.6 Checking fuel system for leaks	8
3.7 Adapting after component replacement	8
4 Hazard classification of high-voltage system	10
10 - Removing and installing engine	17
1 Removing and installing engine	17
1.1 Removing motor	17
1.2 Separating engine and gearbox	50
1.3 Removing engine from scissor-type assembly platform	58
1.4 Securing engine on engine and gearbox support	59
1.5 Installing motor	62
2 Assembly mountings	69
2.1 Assembly overview - assembly mountings	69
2.2 Supporting engine in installation position	75
2.3 Removing and installing engine mounting	76
2.4 Removing and installing gearbox mounting	80
2.5 Removing and installing power unit mounting senders	85
2.6 Calibrating electrohydraulic engine mounting	85
3 Engine cover panel	87
3.1 Removing and installing engine cover	87
13 - Crankshaft group	88
1 Cylinder block, pulley end	88
1.1 Assembly overview – cylinder block, pulley end	88
1.2 Assembly overview – sealing flange, pulley end	94
1.3 Removing and installing poly-V belt	96
1.4 Removing and installing poly V-belt tensioner	100
1.5 Removing and installing vibration damper	102
1.6 Removing and installing bracket for ancillaries	107
1.7 Removing and installing engine support	108
1.8 Renewing crankshaft oil seal (pulley end)	109
1.9 Removing and installing sealing flange, pulley end	110



2	Cylinder block, gearbox side	116
2.1	Assembly overview – cylinder block, gearbox side	116
2.2	Removing and installing drive plate	116
2.3	Renewing crankshaft oil seal (gearbox end)	118
3	Crankshaft	121
3.1	Assembly overview - crankshaft	121
3.2	Crankshaft dimensions	124
3.3	Allocation of main bearing shells	124
3.4	Measuring axial clearance of crankshaft	126
3.5	Measuring radial clearance of crankshaft	127
3.6	Removing and installing sender wheel	127
3.7	Checking sender wheel	128
3.8	Removing and installing crankshaft	129
4	Balance shaft	133
4.1	Assembly overview - balance shaft	133
4.2	Removing and installing balance shaft	133
5	Pistons and conrods	139
5.1	Assembly overview – pistons and conrods	139
5.2	Removing and installing pistons	144
5.3	Removing and installing oil spray jets	148
5.4	Checking piston and cylinder bore	149
5.5	Checking radial clearance of conrods	151
15	Cylinder head, valve gear	153
1	Cylinder head	153
1.1	Assembly overview – cylinder head	153
1.2	Assembly overview – camshaft housing	157
1.3	Removing and installing cylinder head	160
1.4	Removing and installing camshaft housing	168
1.5	Checking compression	182
2	Timing chain cover	184
2.1	Assembly overview - timing chain cover	184
2.2	Removing and installing timing chain cover	187
3	Chain drive	197
3.1	Assembly overview - camshaft timing chains	197
3.2	Assembly overview - drive chain for oil pump	201
3.3	Removing camshaft timing chain from camshafts	202
3.4	Removing and installing camshaft timing chain	227
3.5	Removing and installing chain tensioner	228
4	Valve gear	232
4.1	Assembly overview – valve gear	232
4.2	Measuring axial play of camshaft	235
4.3	Measuring radial clearance of camshaft	236
4.4	Removing and installing camshaft	237
4.5	Removing and installing cam actuators	239
4.6	Removing and installing camshaft control valve 1 N205	242
4.7	Removing and installing valve stem oil seals	242
5	Inlet and exhaust valves	257
5.1	Checking valve guides	257
5.2	Checking valves	258
5.3	Valve dimensions	258
17	Lubrication	259
1	Sump, oil pump	259



1.1	Assembly overview – sump/oil pump	259
1.2	Engine oil	264
1.3	Removing and installing lower part of sump	265
1.4	Removing and installing upper part of sump	268
1.5	Removing and installing oil baffle plate	275
1.6	Removing and installing oil pump	277
1.7	Removing and installing oil level and oil temperature sender G266	279
2	Engine oil cooler	280
2.1	Assembly overview - engine oil cooler	280
2.2	Removing and installing engine oil cooler	280
2.3	Removing and installing spray nozzle valve	283
3	Crankcase breather	284
3.1	Assembly overview - crankcase breather system	284
3.2	Removing and installing crankcase breather module	285
4	Oil filter, oil pressure switch	287
4.1	Assembly overview - oil filter	287
4.2	Assembly overview - oil pressure switches/oil pressure control	288
4.3	Removing and installing oil pressure switch F22	289
4.4	Removing and installing oil temperature sender G8	290
4.5	Checking oil pressure	291
4.6	Removing and installing oil filter housing	292
4.7	Removing and installing valve for oil pressure control N428	293
4.8	Removing and installing oil pressure sender G10	295
19	Cooling	297
1	Cooling system/coolant	297
1.1	Connection diagram - coolant hoses	297
1.2	Overview of fitting locations - cooling system	305
1.3	Assembly overview - coolant expansion tank	308
1.4	Checking cooling system for leaks	310
1.5	Draining and filling cooling system	320
1.6	Removing and installing coolant expansion tank	346
2	Coolant pump, regulation of cooling system	352
2.1	Assembly overview – coolant pump/thermostat	352
2.2	Assembly overview – electric coolant pump	354
2.3	Assembly overview – coolant temperature sender	356
2.4	Assembly overview - coolant valves	360
2.5	Removing and installing electric coolant pump	362
2.6	Removing and installing coolant pump	368
2.7	Removing and installing map-controlled engine cooling system thermostat F265	368
2.8	Removing and installing coolant temperature sender G62	371
2.9	Removing and installing engine outlet coolant temperature sender G82	372
2.10	Removing and installing radiator outlet coolant temperature sender G83	373
2.11	Removing and installing temperature sender for engine temperature regulation G694	376
2.12	Removing and installing coolant valves	377
2.13	Removing and installing coolant temperature sender for high-voltage system	383
3	Coolant pipes	393
3.1	Assembly overview – coolant pipes	393
3.2	Removing and installing coolant pipes	395
4	Radiator, radiator fan	403
4.1	Assembly overview – radiator, radiator fan	403
4.2	Assembly overview - radiator blind	408
4.3	Removing and installing radiator	409
4.4	Removing and installing radiator cowl	414
4.5	Removing and installing radiator fan V7	419



4.6	Removing and installing radiator blind	419
4.7	Removing and installing radiator blind control motor V544	421
4.8	Removing and installing radiator for high-voltage system coolant circuit	423
4.9	Removing and installing air ducts	425
21	Turbocharging/supercharging	430
1	Turbocharger	430
1.1	Assembly overview – turbocharger	430
1.2	Removing and installing turbocharger	435
1.3	Renewing vacuum unit for turbocharger	441
1.4	Removing and installing temperature sender for engine cover panel G765	447
2	Charge air system	448
2.1	Assembly overview – charge air system	448
2.2	Assembly overview - hose connections for charge air system	453
2.3	Removing and installing air intake pipe	454
2.4	Removing and installing pressure pipe	457
2.5	Removing and installing charge air cooler	461
2.6	Removing and installing charge pressure sender G31	464
2.7	Removing and installing overrun air recirculation valve	464
2.8	Checking charge air system for leaks	465
24	Mixture preparation - injection	468
1	Injection system	468
1.1	Overview of fitting locations - injection system	468
1.2	Checking fuel system for leaks	478
2	Vacuum system	479
2.1	Connection diagram - vacuum system	479
2.2	Checking vacuum system	479
3	Injectors	481
3.1	Assembly overview - fuel rail with injectors	481
3.2	Removing and installing fuel rail	483
3.3	Removing and installing injectors	485
3.4	Cleaning injectors	491
4	Air filter	494
4.1	Assembly overview – air filter housing	494
4.2	Removing and installing air filter housing	495
5	Intake manifold	497
5.1	Assembly overview – intake manifold	497
5.2	Removing and installing intake manifold	498
5.3	Removing and installing throttle valve module J338	501
5.4	Cleaning throttle valve module	503
6	Senders and sensors	505
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	505
6.2	Assembly overview - pressure differential sender, models with particulate filter	506
6.3	Removing and installing actuator for structure-borne sound R214	507
6.4	Removing and installing control unit for structure-borne sound J869	508
6.5	Removing and installing intake manifold sender GX9	508
6.6	Removing and installing fuel pressure sender G247	509
6.7	Removing and installing fuel pressure sender for low-pressure G410	510
6.8	Removing and installing pressure differential sender for particulate filter G1037, models with particulate filter (petrol)	510
7	Engine/motor control unit	514
7.1	Assembly overview – motor control unit	514
7.2	Removing and installing motor control unit J623	514



8	High-pressure pump	516
8.1	Assembly overview – high-pressure pump	516
8.2	Removing and installing high-pressure pump	520
8.3	Removing and installing high-pressure pipe	523
9	Lambda probe	527
9.1	Assembly overview – lambda probe	527
9.2	Removing and installing lambda probe	528
26	- Exhaust system	533
1	Exhaust pipes and silencers	533
1.1	Assembly overview – silencers	533
1.2	Removing and installing front silencers	541
1.3	Separating exhaust pipes from silencers	544
1.4	Removing and installing silencer	545
1.5	Aligning exhaust system free of stress	546
1.6	Checking exhaust system for leaks	548
2	Emission control	549
2.1	Assembly overview – emission control	549
2.2	Removing and installing catalytic converter	552
2.3	Removing and installing particulate filter	553
3	Exhaust gas temperature regulation	556
3.1	Removing and installing exhaust gas temperature sender 3 G495	556
28	- Ignition system	558
1	Ignition system	558
1.1	Assembly overview - ignition system	558
1.2	Removing and installing ignition coils with output stage	560
1.3	Removing and installing knock sensor 1 G61	564
1.4	Removing and installing Hall sender	565
1.5	Removing and installing engine speed sender G28	566
93	- Electric drive systems	568
1	High-voltage components	568
1.1	Overview of fitting locations - high-voltage components	568
2	Warning stickers	571
2.1	Checking warning stickers	571
3	High-voltage battery unit	575
3.1	Assembly overview - high-voltage battery	575
3.2	Visual inspection of high-voltage battery 1 AX2	577
3.3	Diagnosing high-voltage battery 1 AX2	578
3.4	Checking high-voltage battery for leaks	578
3.5	Removing and installing high-voltage battery 1 AX2	585
3.6	Removing and installing battery regulation control unit J840	594
3.7	Removing and installing switching unit for high-voltage battery SX6	595
4	High-voltage battery components	599
4.1	Assembly overview - high-voltage battery	599
4.2	Overview of fitting locations - battery modules	604
4.3	Overview of fitting locations - battery connectors	605
4.4	Marking battery modules	606
4.5	Removing battery module	607
4.6	Installing battery module	621
5	Power and control electronics for electric drive	637
5.1	Overview of fitting locations - power and control electronics for electric drive	637
5.2	Removing and installing power and control electronics for electric drive	640



5.3	Removing and installing bracket for power and control electronics for electric drive JX1 . . .	644
6	Electric drive motor	646
6.1	Assembly overview - electric drive motor	646
6.2	Removing and installing three-phase current drive VX54	650
6.3	Removing and installing centring sleeve	650
6.4	Removing and installing drive motor temperature sender G712	652
6.5	Removing and installing drive motor rotor position sender 1 G713	653
6.6	Removing and installing torsion damper	654
6.7	Removing and installing actuator for disengagement clutch V606	656
6.8	Removing and installing coolant connection	659
6.9	Transporting three-phase current drive	660
6.10	Checking ease of movement of disengagement clutch	661
7	High-voltage wiring	663
7.1	Overview of fitting locations - high-voltage wiring	663
7.2	Removing and installing high-voltage wiring harness for high-voltage battery	670
7.3	Removing and installing high-voltage wiring harness for drive motor	676
7.4	Removing and installing high-voltage wire for electrical air conditioner compressor	680
7.5	Removing and installing high-voltage cable for high-voltage heater (PTC)	684
8	De-energising high-voltage system	692
9	Re-energising high-voltage system	694
10	Potential equalisation lines	695
10.1	General notes - potential equalisation lines	695
10.2	Overview of fitting locations - potential equalisation lines	695
10.3	Removing and installing potential equalisation line	697
11	Charging socket	701
11.1	Assembly overview - charging socket	701
11.2	Removing and installing high-voltage battery charging socket 1 UX4	702
11.3	Removing and installing module for battery charge selector buttons EX32	707
12	Charging unit for high-voltage battery	708
12.1	Assembly overview - charging unit for high-voltage battery	708
12.2	Removing and installing charging unit 1 for high-voltage battery AX4	708
12.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	713