



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on fuel system	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on exhaust system	2
1.6 Safety precautions when working on the SCR system	3
1.7 Safety regulations for working on glow plug system	5
1.8 Safety precautions when working on subframe	5
2 Identification	6
2.1 Engine number/engine data	6
3 Repair instructions	8
3.1 Rules for cleanliness	8
3.2 General information	8
3.3 General repair notes	9
3.4 Adapting learnt value for SCR system	10
3.5 Foreign objects in engine	10
3.6 Contact corrosion	10
3.7 Routing and attachment of lines	11
3.8 Fitting radiator and condensers	11
3.9 Checking vacuum system	11
10 - Removing and installing engine	12
1 Removing and installing engine	12
1.1 Removing engine	12
1.2 Separating engine and gearbox	34
1.3 Securing engine on engine and gearbox support	40
1.4 Installing engine	44
2 Assembly mountings	52
2.1 Assembly overview – assembly mountings	52
2.2 Removing and installing engine mounting	56
2.3 Removing and installing gearbox mounting	57
2.4 Supporting engine in installation position	61
2.5 Removing and installing power unit mounting senders	63
2.6 Removing and installing power unit mounting control unit J931	64
2.7 Calibrating electrohydraulic engine mounting	66
3 Engine cover panel	67
3.1 Removing and installing engine cover	67
13 - Crankshaft group	69
1 Cylinder block (pulley end)	69
1.1 Assembly overview - cylinder block (pulley end)	69
1.2 Assembly overview - sealing flange, belt pulley end	73
1.3 Removing and installing poly-V belt	74
1.4 Removing and installing tensioner for poly V-belt	75
1.5 Removing and installing bracket for ancillaries	76
1.6 Removing and installing engine support	78
1.7 Removing and installing pulley	79
1.8 Renewing crankshaft oil seal - belt pulley end	81
1.9 Removing and installing sealing flange on pulley end	83
2 Cylinder block, gearbox end	85



2.1	Assembly overview - cylinder block, gearbox end	85
2.2	Removing and installing drive plate	85
2.3	Renewing crankshaft oil seal (gearbox end)	87
3	Crankshaft	90
3.1	Assembly overview - crankshaft	90
3.2	Crankshaft dimensions	92
3.3	Allocation of main bearing shells	92
3.4	Measuring axial clearance of crankshaft	94
3.5	Measuring radial clearance of crankshaft	95
3.6	Checking sender wheel	95
4	Balancer shaft	97
4.1	Assembly overview - balance shaft	97
4.2	Removing and installing balance shaft	97
5	Pistons and conrods	99
5.1	Assembly overview - pistons and conrods	99
5.2	Removing and installing pistons	101
5.3	Measuring piston projection at TDC	105
5.4	Checking pistons and cylinder bores	107
5.5	Checking radial clearance of conrods	109
5.6	Removing and installing oil spray jets	109
15	Cylinder head, valve gear	111
1	Cylinder head	111
1.1	Assembly overview - cylinder head	111
1.2	Assembly overview - cylinder head cover	113
1.3	Removing and installing cylinder head	116
1.4	Removing and installing cylinder head cover	129
1.5	Removing and installing injector seals	138
1.6	Checking compression	140
2	Cover for timing chain	143
2.1	Assembly overview - cover for timing chain	143
2.2	Removing and installing timing chain cover	147
3	Chain drive	157
3.1	Assembly overview - camshaft timing chains	157
3.2	Assembly overview - drive chain for high pressure pump	159
3.3	Assembly overview - drive chain for oil pump	159
3.4	Removing and installing camshaft timing chain	160
3.5	Removing camshaft timing chain from camshafts	171
3.6	Removing and installing drive chain for high-pressure pump	183
3.7	Installing intermediate drive	185
4	Valve gear	192
4.1	Assembly overview - valve gear	192
4.2	Measuring axial play of camshaft	200
4.3	Measuring radial play of camshaft	202
4.4	Removing and installing camshaft	202
4.5	Removing and installing cam actuators	218
4.6	Removing and installing valve stem seals	227
5	Inlet and exhaust valves	237
5.1	Reworking valve seats	237
5.2	Checking valve guides	237
5.3	Checking valves	238
5.4	Valve dimensions	239
17	Lubrication	240
1	Sump, oil pump	240



1.1	Assembly overview - sump/oil pump	240
1.2	Engine oil:	246
1.3	Removing and installing lower part of sump	247
1.4	Removing and installing upper part of sump	249
1.5	Removing and installing oil pump	254
1.6	Removing and installing oil level and oil temperature sender G266	256
2	Engine oil cooler	258
2.1	Assembly overview - engine oil cooler	258
2.2	Removing and installing engine oil cooler	259
3	Crankcase ventilation	262
3.1	Assembly overview - crankcase breather system	262
3.2	Removing and installing crankcase breather module	263
4	Oil filter, oil pressure switch	265
4.1	Assembly overview - oil filter	265
4.2	Removing and installing oil temperature sender G8	265
4.3	Removing and installing oil pressure sender G10	267
4.4	Checking oil pressure	267
4.5	Removing and installing oil filter housing	268
4.6	Removing and installing oil pressure regulating valve N428	269
19	Cooling	270
1	Cooling system/coolant	270
1.1	Connection diagram - coolant hoses	270
1.2	Checking cooling system for leaks	274
1.3	Draining and adding coolant	277
2	Coolant pump, regulation of cooling system	288
2.1	Assembly overview - coolant pump	288
2.2	Assembly overview - electric coolant pump	289
2.3	Assembly overview - thermostat	290
2.4	Assembly overview - coolant valves	292
2.5	Assembly overview - coolant temperature sender	293
2.6	Removing and installing auxiliary pump for heating V488	294
2.7	Removing and installing coolant pump	296
2.8	Removing and installing map-controlled engine cooling thermostat F265	296
2.9	Removing and installing coolant temperature sender G62/G83	302
2.10	Removing and installing coolant temperature sender 3 G812	303
2.11	Removing and installing coolant valves	304
3	Coolant pipes	308
3.1	Assembly overview - coolant pipes	308
3.2	Removing and installing coolant pipes	313
3.3	Removing and installing coolant pipes for gearbox	328
4	Radiator, radiator fan	330
4.1	Assembly overview - radiator/radiator fan	330
4.2	Removing and installing radiator	332
4.3	Removing and installing radiator fan V7 and radiator fan 2 V177	337
21	Turbocharging/supercharging	338
1	Turbocharger	338
1.1	Assembly overview - turbocharger	338
1.2	Assembly overview - recirculation valve	347
1.3	Removing and installing turbocharger	348
1.4	Removing and installing recirculation valve	356
1.5	Removing and installing sender 1 for turbocharger speed G688	358
1.6	Removing and installing sender 2 for turbocharger speed G689	359
1.7	Removing and installing temperature sender for engine cover panel G765	360



2	Charge air system	363
2.1	Assembly overview - charge air system	363
2.2	Assembly overview - charge-air hose connections	368
2.3	Removing and installing charge air cooler	368
2.4	Checking charge air system for leaks	371
23	Mixture preparation - injection	376
1	Injection system	376
1.1	Schematic overview - fuel system	376
1.2	Overview of fitting locations - injection system	376
1.3	Filling/bleeding fuel system	388
1.4	Checking fuel system for leaks	389
2	Vacuum system	390
2.1	Connection diagram - vacuum system	390
2.2	Checking vacuum system	391
3	Injectors/high-pressure accumulator (rail)	393
3.1	Assembly overview - injectors	393
3.2	Testing injectors	397
3.3	Adapting correction values for injectors	398
3.4	Checking return flow rate of injectors with engine running	399
3.5	Checking return flow rate of injectors at starter speed	403
3.6	Testing jammed-open injectors	406
3.7	Checking restrictor in fuel return line	410
3.8	Removing and installing injectors	411
3.9	Removing and installing high-pressure lines	419
3.10	Removing and installing fuel rail	421
4	Air filter	427
4.1	Assembly overview - air filter housing	427
4.2	Removing and installing air filter housing	429
5	Intake manifold	432
5.1	Assembly overview - intake manifold	432
5.2	Removing and installing intake manifold	433
5.3	Removing and installing intake manifold flap control unit GX14/intake manifold flap control unit 2 GX15	436
5.4	Removing and installing throttle valve module GX3/throttle valve module 2 GX4	437
6	Senders and sensors	439
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	439
6.2	Removing and installing actuator for structure-borne sound R214	440
6.3	Removing and installing control unit for structure-borne sound J869	441
6.4	Removing and installing fuel pressure regulating valve N276	442
6.5	Checking fuel pressure regulating valve N276	444
6.6	Removing and installing fuel pressure sender G247	446
6.7	Removing and installing fuel pressure sender for low-pressure G410	449
6.8	Removing and installing air mass meter G70/air mass meter 2 G246	450
6.9	Removing and installing pressure differential sender G505	451
6.10	Removing and installing intake manifold pressure sender G71	452
6.11	Removing and installing intake air temperature sender G42/intake air temperature sender 2 G299	452
6.12	Removing and installing fuel temperature sender G81	453
7	Engine control unit	455
7.1	Assembly overview - motor control unit	455
7.2	Removing and installing engine control unit J623	456
8	High-pressure pump	457
8.1	Assembly overview - high-pressure pump	457



8.2	Removing and installing high-pressure pump	460
9	Lambda probe	465
9.1	Assembly overview - Lambda probe	465
9.2	Removing and installing Lambda probe	467
9.3	Removing and installing NOx sender	470
9.4	Removing and installing particle sensor G784	474
26	- Exhaust system	477
1	Exhaust pipes and silencers	477
1.1	Assembly overview – silencers	477
1.2	Removing and installing front exhaust pipe	480
1.3	Removing and installing silencer	482
1.4	Aligning exhaust system free of stress	483
1.5	Checking exhaust system for leaks	485
2	Emission control	486
2.1	Assembly overview – emission control	486
2.2	Removing and installing emission control module	488
3	SCR system (selective catalytic reduction)	494
3.1	Assembly overview - tank for reducing agent	494
3.2	Assembly overview - reducing agent supply line	496
3.3	Assembly overview - injector for reducing agent	497
3.4	Assembly overview - control unit for reducing agent metering system	498
3.5	Removing and installing reducing agent tank	499
3.6	Removing and installing injector for reduction agent N474	502
3.7	Draining reducing agent tank	504
3.8	Removing and installing control unit for reducing agent metering system J880	505
3.9	Removing and installing reducing agent quality sensor G849	506
4	Exhaust gas temperature regulation	507
4.1	Assembly overview – exhaust gas temperature regulation	507
4.2	Removing and installing parts of exhaust gas temperature regulation	509
5	Exhaust gas recirculation	520
5.1	Assembly overview – exhaust gas recirculation	520
5.2	Removing and installing exhaust gas recirculation cooler	522
5.3	Removing and installing exhaust gas recirculation temperature sensor G98	524
5.4	Removing and installing pressure sender for exhaust gas recirculation G691	525
6	Exhaust manifold	527
6.1	Assembly overview - exhaust manifold	527
6.2	Removing and installing exhaust manifold	531
28	- Glow plug system	537
1	Glow plug system	537
1.1	Assembly overview - glow plug system	537
1.2	Removing and installing glow plug	539
1.3	Removing and installing automatic glow period control unit J179/glow period control unit 2 J703	544
1.4	Removing and installing Hall sender G40	545
1.5	Removing and installing engine speed sender G28	545