



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety measures when working on vehicles with a start/stop system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
4 Repair instructions	5
4.1 General repair notes	5
4.2 Contact corrosion	5
4.3 Routing and attachment of lines	5
20 - Fuel supply system	6
1 Fuel	6
1.1 Assembly overview – fuel tank	6
1.2 Emptying fuel tank	10
1.3 Removing and installing fuel tank	16
2 Fuel delivery unit/fuel gauge sender	32
2.1 Assembly overview – fuel delivery unit/fuel gauge sender	32
2.2 Removing and installing fuel delivery unit, fuel gauge sender	32
2.3 Removing and installing fuel gauge sender G	36
2.4 Removing and installing assembly opening cover	37
3 Plug-in connectors	39
3.1 Disconnecting plug-in connectors	39
4 Activated charcoal filter system	45
4.1 Connection diagram – activated charcoal filter system	45
4.2 Assembly overview – activated charcoal filter system	48
4.3 Removing and installing activated charcoal filter	51
4.4 Removing and installing air filter for activated charcoal filter system, vehicles with fuel tank leak detection	53
4.5 Removing and installing fuel tank leak detection module GX36	53
4.6 Checking fuel system for leaks, vehicles with fuel tank leak diagnosis	54
5 Accelerator mechanism	63
5.1 Assembly overview – accelerator pedal module	63
5.2 Removing and installing accelerator pedal module GX2	64
6 Fuel pump	67
6.1 Checking fuel system pressurisation pump G6	67
6.2 Removing and installing suction-jet pump	83
6.3 Removing and installing fuel pump control unit J538	84