



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working in vicinity of high-voltage components | 1 |
| 1.2 Safety precautions when working on high-voltage system | 1 |
| 1.3 Safety precautions when working on the vehicle | 2 |
| 1.4 Safety measures when working on vehicles with a start/stop system | 3 |
| 1.5 Safety precautions when using testers and measuring instruments during a road test | 4 |
| 1.6 Safety precautions when working on subframe | 4 |
| 2 Identification | 5 |
| 2.1 Gearbox identification | 5 |
| 3 Repair instructions | 6 |
| 3.1 Rules for cleanliness | 6 |
| 3.2 General information | 6 |
| 3.3 General repair instructions | 7 |
| 4 Technical data | 10 |
| 4.1 Capacities | 10 |
| 4.2 Oil distribution | 11 |
| 32 - Torque converter | 12 |
| 1 Torque converter | 12 |
| 1.1 Assembly overview - torque converter | 12 |
| 1.2 Removing and installing torque converter | 13 |
| 1.3 Draining torque converter | 15 |
| 1.4 Checking torque converter | 16 |
| 1.5 Removing and installing torque converter oil seal | 16 |
| 37 - Controls, housing | 18 |
| 1 Selector mechanism | 18 |
| 1.1 Assembly overview – selector mechanism | 18 |
| 1.2 Assembly overview - manual release mechanism for parking lock | 19 |
| 1.3 Checking selector mechanism | 20 |
| 1.4 Manual release from P position | 24 |
| 1.5 Removing and installing selector lever handle | 25 |
| 1.6 Removing and installing selector mechanism | 26 |
| 1.7 Removing and installing emergency release cable for parking lock | 27 |
| 1.8 Renewing parking lock shaft seal | 32 |
| 2 Removing and installing gearbox | 35 |
| 2.1 Removing gearbox | 35 |
| 2.2 Installing gearbox | 43 |
| 2.3 Removing and installing three-phase current drive VX54 | 49 |
| 2.4 Specified torques for gearbox | 54 |
| 3 Assembly mountings | 57 |
| 3.1 Assembly overview - assembly mountings | 57 |
| 3.2 Removing and installing tunnel cross member | 59 |
| 4 Gearbox transport | 63 |
| 5 Securing to engine and gearbox support | 65 |
| 6 ATF circuit | 66 |
| 6.1 Assembly overview – ATF circuit | 66 |
| 6.2 Removing and installing ATF cooler | 68 |
| 6.3 Removing and installing ATF lines | 69 |
| 7 ATF | 71 |



| | | |
|-----------|--|------------|
| 7.1 | Checking ATF level | 71 |
| 7.2 | Draining and filling ATF | 74 |
| 38 | - Gears, control | 77 |
| 1 | ATF system | 77 |
| 1.1 | Removing and installing ATF strainer | 77 |
| 1.2 | Removing and installing sump | 78 |
| 2 | Mechatronic unit | 80 |
| 2.1 | Assembly overview – mechatronic unit | 80 |
| 2.2 | Removing and installing mechatronic unit | 83 |
| 2.3 | Removing and installing auxiliary hydraulic pump for gearbox oil | 92 |
| 2.4 | Removing and installing hydraulic impulse accumulator with accumulator solenoid N485 | 94 |
| 2.5 | Removing and installing wiring harness for and installing auxiliary pump for gearbox oil | 95 |
| 39 | - Final drive - front differential | 98 |
| 1 | Final drive | 98 |
| 1.1 | Assembly overview – final drive | 98 |
| 1.2 | Removing and installing O-ring on cover for front final drive | 100 |
| 2 | Gear oil | 102 |
| 2.1 | Checking gear oil level | 102 |
| 2.2 | Draining and filling gear oil | 104 |
| 3 | Seals | 108 |
| 3.1 | Overview of fitting locations – oil seals | 108 |
| 3.2 | Renewing left seal | 110 |
| 3.3 | Renewing right seal | 112 |
| 3.4 | Renewing front protective tube seal | 113 |
| 3.5 | Renewing rear protective tube seal | 114 |
| 4 | Differential | 115 |
| 4.1 | Removing and installing left flange shaft | 115 |
| 4.2 | Removing and installing right flange shaft | 119 |
| 5 | Centre differential | 121 |
| 5.1 | Assembly overview - centre differential | 121 |
| 5.2 | Removing and installing centre differential | 123 |
| 5.3 | Removing and installing rear splined shaft | 124 |
| 5.4 | Renewing oil seal for rear splined shaft | 127 |
| 5.5 | Renewing ball bearing for rear splined shaft | 131 |
| 5.6 | Renewing ball bearing for centre differential | 135 |
| 6 | Transfer box | 138 |
| 6.1 | Assembly overview – transfer box | 138 |
| 6.2 | Dismantling and assembling transfer box | 139 |