



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on fuel system	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on the exhaust system	2
1.6 Safety regulations for working on glow plug system	3
1.7 Safety precautions when working on the subframe	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair notes	6
3.4 Foreign material in engine	7
3.5 Contact corrosion	7
3.6 Routing and attachment of lines	7
3.7 Fitting radiator and condensers	8
3.8 Checking vacuum system	8
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing motor	9
1.2 Separating engine and gearbox	30
1.3 Securing engine on engine and gearbox support	36
1.4 Installing motor	39
2 Assembly mountings	44
2.1 Assembly overview - assembly mountings	44
2.2 Removing and installing engine mounting	47
2.3 Removing and installing gearbox mounting	53
2.4 Supporting engine in installation position	54
3 Engine cover panel	58
3.1 Removing and installing engine cover	58
13 - Crankshaft group	62
1 Cylinder block, pulley end	62
1.1 Assembly overview – cylinder block, pulley end	62
1.2 Assembly overview – sealing flange, pulley end	65
1.3 Removing and installing poly-V belt	67
1.4 Removing and installing poly V-belt tensioner	69
1.5 Removing and installing vibration damper	69
1.6 Removing and installing bracket for ancillaries	72
1.7 Removing and installing engine support	74
1.8 Renewing crankshaft oil seal (pulley end)	75
1.9 Removing and installing sealing flange, pulley end	77
2 Cylinder block, gearbox side	82
2.1 Assembly overview – cylinder block, gearbox side	82
2.2 Removing and installing drive plate	82
2.3 Renewing crankshaft oil seal (gearbox end)	85
3 Crankshaft	88
3.1 Assembly overview - crankshaft	88



3.2	Crankshaft dimensions	90
3.3	Allocation of main bearing shells	91
3.4	Measuring axial clearance of crankshaft	94
3.5	Measuring radial clearance of crankshaft	95
3.6	Checking sender wheel	95
4	Balance shaft	97
4.1	Assembly overview - balance shaft	97
4.2	Removing and installing balance shaft	97
5	Pistons and conrods	106
5.1	Assembly overview – pistons and conrods	106
5.2	Removing and installing pistons	110
5.3	Measuring piston projection at TDC	111
5.4	Checking piston and cylinder bore	114
5.5	Checking radial clearance of conrods	116
15	- Cylinder head, valve gear	117
1	Cylinder head	117
1.1	Assembly overview – cylinder head	117
1.2	Assembly overview - cylinder head cover	120
1.3	Removing and installing cylinder head	123
1.4	Removing and installing cylinder head cover	132
1.5	Removing and installing injector seals	138
1.6	Checking compression	139
2	Timing chain cover	141
2.1	Assembly overview - timing chain cover	141
2.2	Removing and installing timing chain cover	145
3	Chain drive	158
3.1	Assembly overview - camshaft timing chains	158
3.2	Assembly overview - drive chain for high pressure pump	160
3.3	Assembly overview - drive chain for oil pump	161
3.4	Assembly overview - intermediate drive	161
3.5	Removing camshaft timing chain from camshafts	162
3.6	Removing and installing camshaft timing chain	175
3.7	Removing and installing drive chain for high-pressure pump	187
3.8	Installing intermediate drive	189
4	Valve gear	198
4.1	Assembly overview – valve gear	198
4.2	Measuring axial play of camshaft	206
4.3	Measuring radial clearance of camshaft	208
4.4	Removing and installing camshaft	208
4.5	Checking hydraulic compensation elements	224
4.6	Removing and installing valve stem oil seals	226
5	Inlet and exhaust valves	236
5.1	Reworking valve seats	236
5.2	Checking valve guides	236
5.3	Checking valves	237
5.4	Valve dimensions	237
17	- Lubrication	238
1	Sump, oil pump	238
1.1	Assembly overview – sump/oil pump	238
1.2	Engine oil	243
1.3	Removing and installing lower part of sump	245
1.4	Removing and installing upper part of sump	247
1.5	Removing and installing oil pump	251



1.6	Removing and installing oil level and oil temperature sender G266	254
2	Engine oil cooler	255
2.1	Assembly overview - engine oil cooler	255
2.2	Removing and installing engine oil cooler	257
2.3	Removing and installing temperature regulator for engine oil cooler	258
3	Crankcase breather	260
3.1	Assembly overview - crankcase breather system	260
3.2	Removing and installing oil separator	261
4	Oil filter, oil pressure switch	262
4.1	Assembly overview - oil filter	262
4.2	Removing and installing oil pressure sender G10	264
4.3	Checking oil pressure	265
4.4	Removing and installing oil filter housing	265
4.5	Removing and installing valve for oil pressure control N428	268
4.6	Removing and installing oil temperature sender 2 G664	268
19 - Cooling		270
1	Cooling system/coolant	270
1.1	Connection diagram - coolant hoses	270
1.2	Checking cooling system for leaks	274
1.3	Assembly overview – coolant expansion tank for engine coolant circuit	277
1.4	Removing and installing coolant expansion tank for engine coolant circuit	278
1.5	Draining and filling cooling system	280
2	Coolant pump, regulation of cooling system	291
2.1	Assembly overview - coolant pump	291
2.2	Assembly overview – electric coolant pump	293
2.3	Assembly overview - thermostat	293
2.4	Assembly overview – coolant temperature sender	295
2.5	Removing and installing coolant circulation pump V50	296
2.6	Removing and installing coolant pump	297
2.7	Removing and installing thermostat housing	300
2.8	Removing and installing map-controlled engine cooling system thermostat F265	301
2.9	Removing and installing coolant temperature sender G62	302
2.10	Removing and installing temperature sender for engine temperature regulation G694	303
2.11	Removing and installing coolant temperature sender 2 G802	304
2.12	Removing and installing coolant valves	305
3	Coolant pipes	308
3.1	Assembly overview – coolant pipes	308
3.2	Removing and installing coolant pipes	311
4	Radiator, radiator fan	321
4.1	Assembly overview - radiators/radiator fans	321
4.2	Removing and installing radiator	324
4.3	Removing and installing radiator cowl	330
4.4	Removing and installing radiator fan V7	332
21 - Turbocharging/supercharging		334
1	Turbocharger	334
1.1	Assembly overview – turbocharger	334
1.2	Removing and installing turbocharger	339
2	Charge air system	344
2.1	Assembly overview – charge air system	344
2.2	Assembly overview - hose connections for charge air system	346
2.3	Removing and installing charge air cooler	347
2.4	Removing and installing charge pressure sender G31	350
2.5	Removing and installing charge air temperature sender after charge air cooler G811	350



2.6	Checking charge air system for leaks	351
23 - Mixture preparation - injection		355
1	Injection system	355
1.1	Schematic overview - fuel system	355
1.2	Overview of fitting locations - injection system	356
1.3	Filling/bleeding fuel system	362
1.4	Checking fuel system for leaks	363
2	Vacuum system	364
2.1	Connection diagram - vacuum system	364
2.2	Checking vacuum system	364
3	Injectors/high-pressure reservoir (rail)	366
3.1	Assembly overview – injectors	366
3.2	Testing injectors	370
3.3	Adapting correction values for injectors	371
3.4	Checking return flow rate of injectors with engine running	372
3.5	Checking return flow rate of injectors at starter speed	375
3.6	Checking open injectors	378
3.7	Checking pressure retention valve in fuel return line	382
3.8	Removing and installing injectors	383
3.9	Removing and installing high-pressure lines	389
3.10	Removing and installing fuel rail	391
4	Air filter	396
4.1	Assembly overview – air filter housing	396
4.2	Removing and installing air filter housing	398
5	Intake manifold	401
5.1	Assembly overview – intake manifold	401
5.2	Removing and installing upper part of intake manifold	405
5.3	Removing and installing lower part of intake manifold	409
5.4	Removing and installing intake manifold flap motor V157	411
5.5	Removing and installing throttle valve module J338	413
6	Senders and sensors	415
6.1	Checking fuel pressure regulating valve N276	415
6.2	Removing and installing fuel pressure regulating valve N276	417
6.3	Removing and installing fuel pressure sender G247	419
6.4	Removing and installing air mass meter G70	421
6.5	Removing and installing pressure differential sender G505	422
6.6	Removing and installing fuel temperature sender G81	423
6.7	Removing and installing fuel pressure sender for low-pressure G410	424
7	Engine/motor control unit	425
7.1	Assembly overview – motor control unit	425
7.2	Removing and installing motor control unit J623	425
8	High-pressure pump	427
8.1	Assembly overview – high-pressure pump	427
8.2	Removing and installing high-pressure pump	430
9	Lambda probe	436
9.1	Assembly overview – lambda probe	436
9.2	Removing and installing lambda probe	437
26 - Exhaust system		439
1	Exhaust pipes and silencers	439
1.1	Assembly overview – silencers	439
1.2	Removing and installing front exhaust pipe	441
1.3	Separating exhaust pipes from silencers	446



1.4	Removing and installing silencer	447
1.5	Aligning exhaust system free of stress	448
1.6	Checking exhaust system for leaks	450
2	Emission control	451
2.1	Assembly overview – emission control	451
2.2	Removing and installing emission control module	454
2.3	Removing and installing catalytic converter	457
3	Exhaust gas temperature regulation	459
3.1	Assembly overview – exhaust gas temperature regulation	459
3.2	Removing and installing exhaust gas temperature sender 1 G235	460
3.3	Removing and installing exhaust gas temperature sender 2 G448	462
3.4	Removing and installing exhaust gas temperature sender 3 G495	463
3.5	Removing and installing exhaust gas temperature sender 4 G648	465
4	Exhaust gas recirculation	467
4.1	Assembly overview – exhaust gas recirculation	467
4.2	Removing and installing exhaust gas recirculation valve	470
4.3	Removing and installing exhaust gas recirculation cooler	473
4.4	Removing and installing exhaust gas recirculation temperature sensor G98	475
5	Exhaust manifolds	477
5.1	Assembly overview - exhaust manifolds	477
5.2	Removing and installing exhaust manifolds	478
28 - Glow plug system	483	
1	Glow plug system	483
1.1	Assembly overview – glow plug system	483
1.2	Removing and installing glow plug	485
1.3	Removing and installing automatic glow period control unit J179	488
1.4	Removing and installing Hall sender G40	488
1.5	Removing and installing engine speed sender G28	489