



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on fuel system	2
2.2 Safety measures when working on vehicles with a start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on SCR system	4
3 Repair instructions	6
3.1 Identification labels	6
3.2 Using impact drivers	6
3.3 Rules for cleanliness	7
3.4 General notes	7
3.5 General repair instructions	9
3.6 Foreign material in engine	10
3.7 Contact corrosion	11
3.8 Routing and attachment of lines	11
3.9 Fitting radiator and condensers	12
3.10 Adapting after component replacement	12
10 - Removing and installing engine	13
1 Removing and installing engine	13
1.1 Removing motor	13
1.2 Separating engine and gearbox	36
1.3 Securing engine on engine and gearbox support	42
1.4 Installing motor	45
2 Assembly mountings	49
2.1 Assembly overview - assembly mountings	49
2.2 Removing and installing engine mounting	53
2.3 Removing and installing gearbox mounting	57
2.4 Supporting engine in installation position	58
2.5 Removing and installing power unit mounting senders	61
2.6 Removing and installing power unit mounting control unit J931	61
2.7 Calibrating electrohydraulic engine mounting	62
3 Engine cover panel	64
3.1 Removing and installing engine cover	64
13 - Crankshaft group	66
1 Cylinder block, pulley end	66
1.1 Assembly overview – cylinder block, pulley end	66
1.2 Assembly overview – sealing flange, pulley end	73
1.3 Removing and installing poly-V belt	76
1.4 Removing and installing poly V-belt tensioner	80
1.5 Removing and installing vibration damper	83
1.6 Removing and installing bracket for ancillaries	90
1.7 Removing and installing engine support	94
1.8 Renewing crankshaft oil seal (pulley end)	94
1.9 Removing and installing sealing flange, pulley end	96
2 Cylinder block, gearbox side	102
2.1 Assembly overview – cylinder block, gearbox side	102



2.2	Removing and installing drive plate	102
2.3	Renewing crankshaft oil seal (gearbox end)	105
3	Crankshaft	108
3.1	Assembly overview - crankshaft	108
3.2	Crankshaft dimensions	111
3.3	Allocation of main bearing shells	111
3.4	Measuring axial clearance of crankshaft	114
3.5	Measuring radial clearance of crankshaft	115
3.6	Checking sender wheel	116
4	Balance shaft	118
4.1	Assembly overview - balance shaft	118
4.2	Removing and installing balance shaft	119
4.3	Renewing roller bearing	127
5	Pistons and conrods	130
5.1	Assembly overview – pistons and conrods	130
5.2	Removing and installing pistons	134
5.3	Measuring piston projection at TDC	135
5.4	Checking piston and cylinder bore	137
5.5	Checking radial clearance of conrods	139
15	Cylinder head, valve gear	141
1	Timing chain cover	141
1.1	Assembly overview - timing chain cover	141
1.2	Removing and installing timing chain cover	146
2	Chain drive	157
2.1	Assembly overview - camshaft timing chains	157
2.2	Assembly overview - drive chain	159
2.3	Removing camshaft timing chain from camshafts	161
2.4	Removing and installing camshaft timing chain	173
2.5	Removing and installing drive chain for high-pressure pump	184
2.6	Installing intermediate drive	186
3	Cylinder head	195
3.1	Assembly overview – cylinder head	195
3.2	Assembly overview - cylinder head cover	198
3.3	Removing and installing cylinder head	201
3.4	Removing and installing cylinder head cover	210
3.5	Removing and installing injector seals	215
3.6	Checking compression	216
4	Valve gear	218
4.1	Assembly overview – valve gear	218
4.2	Measuring axial play of camshaft	227
4.3	Measuring radial clearance of camshaft	229
4.4	Removing and installing camshaft	230
4.5	Removing and installing valve stem oil seals	246
5	Inlet and exhaust valves	256
5.1	Reworking valve seats	256
5.2	Checking valve guides	256
5.3	Checking valves	257
5.4	Valve dimensions	257
17	Lubrication	258
1	Sump, oil pump	258
1.1	Assembly overview – sump/oil pump	258
1.2	Engine oil	262
1.3	Removing and installing lower part of sump	264



1.4	Removing and installing upper part of sump	267
1.5	Removing and installing oil pump	270
1.6	Removing and installing oil level and oil temperature sender G266	272
2	Engine oil cooler	274
2.1	Assembly overview - engine oil cooler	274
2.2	Removing and installing engine oil cooler	276
2.3	Removing and installing temperature regulator for engine oil cooler	277
3	Oil filter, oil pressure switch	279
3.1	Assembly overview - oil filter	279
3.2	Removing and installing oil filter housing	281
3.3	Removing and installing oil pressure sender G10	283
3.4	Checking oil pressure	284
3.5	Removing and installing valve for oil pressure control N428	285
3.6	Removing and installing oil temperature sender 2 G664	285
19	- Cooling	288
1	Cooling system/coolant	288
1.1	Connection diagram - coolant hoses	288
1.2	Assembly overview - coolant expansion tank	292
1.3	Checking cooling system for leaks	293
1.4	Draining and filling cooling system	297
2	Coolant pump, regulation of cooling system	306
2.1	Assembly overview - coolant pump	306
2.2	Assembly overview - electric coolant pump	307
2.3	Assembly overview - thermostat	309
2.4	Assembly overview - coolant valves	311
2.5	Assembly overview - coolant temperature sender	314
2.6	Removing and installing electric coolant pump	316
2.7	Removing and installing coolant pump	319
2.8	Removing and installing map-controlled engine cooling system thermostat F265	322
2.9	Removing and installing housing for map-controlled engine cooling system thermostat F265	323
2.10	Removing and installing coolant temperature sender G62	323
2.11	Removing and installing temperature sender for engine temperature regulation G694	325
2.12	Removing and installing coolant temperature sender 2 G802	326
2.13	Removing and installing coolant temperature sender for charge air cooler G1130	327
2.14	Removing and installing coolant valves	329
3	Coolant pipes	335
3.1	Assembly overview - coolant pipes	335
3.2	Removing and installing coolant pipes	340
3.3	Removing and installing coolant line	360
4	Radiator, radiator fan	362
4.1	Assembly overview - radiators/radiator fans	362
4.2	Assembly overview - radiator cowl and radiator fans	365
4.3	Assembly overview - radiator blind	366
4.4	Assembly overview - auxiliary radiator	367
4.5	Removing and installing radiator	368
4.6	Removing and installing radiator blind	372
4.7	Removing and installing radiator blind control motor V544	373
4.8	Removing and installing water radiator for charge air cooling circuit	375
4.9	Removing and installing radiator cowl	377
4.10	Removing and installing radiator fan	380
4.11	Removing and installing auxiliary radiator	381
21	- Turbocharging/supercharging	384



1	Turbocharger	384
1.1	Assembly overview – turbocharger	384
1.2	Removing and installing turbocharger	388
2	Charge air system	392
2.1	Assembly overview – charge air system	392
2.2	Assembly overview - hose connections for charge air system	394
2.3	Removing and installing charge air cooler	395
2.4	Removing and installing charge pressure sender G31	398
2.5	Removing and installing charge air temperature sender	399
2.6	Checking charge air system for leaks	400
23	Mixture preparation - injection	405
1	Injection system	405
1.1	Schematic overview - fuel system	405
1.2	Overview of fitting locations - injection system	406
1.3	Filling/bleeding fuel system	413
1.4	Checking fuel system for leaks	414
2	Vacuum system	415
2.1	Connection diagram - vacuum system	415
2.2	Checking vacuum system	415
3	Air filter	417
3.1	Assembly overview – air filter housing	417
3.2	Removing and installing air filter housing	419
4	Intake manifold	423
4.1	Assembly overview – intake manifold	423
4.2	Removing and installing upper part of intake manifold	426
4.3	Removing and installing lower part of intake manifold	430
4.4	Removing and installing intake manifold flap control unit GX14	431
4.5	Removing and installing throttle valve module GX3	432
5	Injectors/high-pressure reservoir (rail)	434
5.1	Assembly overview – injectors	434
5.2	Testing injectors	439
5.3	Adapting correction values for injectors	439
5.4	Checking return flow rate of injectors with engine running	440
5.5	Checking return flow rate of injectors at starter speed	445
5.6	Removing and installing injectors	450
5.7	Removing and installing high-pressure lines	462
5.8	Removing and installing fuel rail	464
6	Senders and sensors	470
6.1	Removing and installing air mass meter G70	470
6.2	Removing and installing fuel temperature sender G81	471
6.3	Removing and installing fuel pressure sender G247	472
6.4	Removing and installing fuel pressure sender for low-pressure G410	474
6.5	Checking fuel pressure regulating valve N276	475
6.6	Removing and installing fuel pressure regulating valve N276	477
6.7	Removing and installing pressure differential sender	480
6.8	Removing and installing NOx sender	483
6.9	Removing and installing particulate sensor G784	487
7	High-pressure pump	489
7.1	Assembly overview – high-pressure pump	489
7.2	Removing and installing high-pressure pump	491
8	Lambda probe	496
8.1	Assembly overview – lambda probe	496
8.2	Removing and installing lambda probe	499



9	Engine/motor control unit	503
9.1	Assembly overview – motor control unit	503
9.2	Removing and installing motor control unit J623	503
26	- Exhaust system	505
1	Exhaust pipes and silencers	505
1.1	Assembly overview – silencers	505
1.2	Removing and installing front exhaust pipe	507
1.3	Separating exhaust pipes from silencers	510
1.4	Removing and installing silencer	512
1.5	Aligning exhaust system free of stress	514
1.6	Checking exhaust system for leaks	515
1.7	Installation position of clamp	516
2	Emission control	518
2.1	Assembly overview – emission control	518
2.2	Removing and installing emission control module	521
2.3	Removing and installing ammonia trap	525
2.4	Removing and installing exhaust flap control unit J883	527
3	SCR system (selective catalytic reduction)	529
3.1	Assembly overview – reducing agent tank	529
3.2	Assembly overview - injector for reducing agent	532
3.3	Assembly overview - reducing agent supply line	535
3.4	Relieving pressure in SCR system	536
3.5	Disconnecting reducing agent supply line	537
3.6	Draining reducing agent tank	539
3.7	Removing and installing reducing agent tank	541
3.8	Removing and installing injector for reducing agent N474	543
3.9	Removing and installing injector 2 for reducing agent N758	545
3.10	Removing and installing control unit for reducing agent metering system J880	547
3.11	Removing and installing reducing agent quality sensor G849	548
3.12	Removing and installing pressure sender for reducing agent metering system G686	548
3.13	Removing and installing connection for SCR supply line	551
4	Exhaust gas temperature regulation	553
4.1	Assembly overview – exhaust gas temperature regulation	553
4.2	Removing and installing exhaust gas temperature sender 1 G235	554
4.3	Removing and installing exhaust gas temperature sender 2 G448	556
4.4	Removing and installing exhaust gas temperature sender 3 G495	557
4.5	Removing and installing exhaust gas temperature sender 4 G648	558
5	Exhaust gas recirculation	561
5.1	Assembly overview – exhaust gas recirculation	561
5.2	Removing and installing exhaust gas recirculation cooler	565
5.3	Removing and installing exhaust gas recirculation valve 2 GX6	570
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	571
6	Exhaust manifolds	573
6.1	Assembly overview - exhaust manifolds	573
6.2	Removing and installing exhaust manifolds	574
28	- Ignition system	578
1	Glow plug system	578
1.1	Assembly overview – glow plug system	578
1.2	Removing and installing glow plug	580
1.3	Removing and installing automatic glow period control unit J179	584
1.4	Removing and installing Hall sender G40	585
1.5	Removing and installing engine speed sender G28	586