



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on SCR system	2
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 General information</b>	<b>5</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	5
<b>4 Repair instructions</b>	<b>6</b>
4.1 Rules for cleanliness	6
4.2 Foreign material in engine	6
4.3 Contact corrosion	6
4.4 Routing and attachment of lines	7
4.5 Fitting radiator and condensers	7
<b>20 - Fuel supply system</b>	<b>8</b>
<b>1 Procedure in event of misfuelling</b>	<b>8</b>
1.1 Step 1, engine was started with incorrect fuel	8
1.2 Step 2, engine was not started with incorrect fuel	10
1.3 Step 3, there are metal particles in fuel delivery unit and fuel tank	11
1.4 Step 4, there are no metal particles in fuel delivery unit or fuel tank	12
1.5 Step 5, there are metal particles in high-pressure pump	13
1.6 Step 6, there are no metal particles in high-pressure pump	13
<b>2 Fuel</b>	<b>14</b>
2.1 Assembly overview – fuel tank	14
2.2 Emptying fuel tank	16
2.3 Removing and installing fuel tank	23
2.4 Removing and installing misfuelling prevention device	30
2.5 Deactivating misfuelling prevention device	33
<b>3 Fuel delivery unit/fuel gauge sender</b>	<b>34</b>
3.1 Assembly overview – fuel delivery unit/fuel gauge sender	34
3.2 Removing and installing fuel delivery unit, fuel gauge sender	34
3.3 Removing and installing fuel gauge sender G	39
3.4 Removing and installing assembly opening cover	39
<b>4 Plug-in connectors</b>	<b>42</b>
4.1 Disconnecting plug-in connectors	42
<b>5 Fuel filter</b>	<b>48</b>
5.1 Assembly overview - fuel filter	48
5.2 Removing and installing fuel filter	50
5.3 Drain water from fuel filter	53
<b>6 Accelerator mechanism</b>	<b>55</b>
6.1 Assembly overview – accelerator pedal module	55
6.2 Removing and installing accelerator pedal module GX2	56
<b>7 Fuel pump</b>	<b>59</b>
7.1 Checking fuel system pressurisation pump G6	59
7.2 Removing and installing suction-jet pump	72
7.3 Removing and installing fuel pump control unit J538	73
<b>8 Senders and sensors</b>	<b>75</b>
8.1 Removing and installing water separator sender G63	75