



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Service work</b>	<b>6</b>
2.1	Information about flexible or fixed service	6
2.2	Service tables	8
<b>3</b>	<b>General information</b>	<b>22</b>
3.1	Raising vehicle with lifting platform or trolley jack	22
3.2	Stickers	24
3.3	Entries in service schedule	25
3.4	Connecting vehicle diagnostic tester	25
3.5	Vehicle identification number	26
3.6	Vehicle data sticker	28
3.7	Countries with hot climate	29
3.8	Country overview for diesel not compliant with EN 590	30
3.9	Country overview for petrol not compliant with EN 228	31
3.10	Engine code and engine number	32
3.11	RME fuel (biodiesel) for vehicles to >2006	32
3.12	Severe operating conditions	33
3.13	Countries with high levels of dust	33
3.14	Identification plate	34
3.15	Shortened intervals for spark plug replacement	35
<b>4</b>	<b>Descriptions of work</b>	<b>39</b>
4.1	Removable towing bracket: checking and cleaning if necessary	41
4.2	Swivel joints and suspension link mountings: inspecting	44
4.3	Driving light assist and cornering light: checking function	46
4.4	Automatic gearbox 09G: checking ATF level	48
4.5	Automatic gearbox 09G: changing ATF	48
4.6	Battery: checking battery terminal clamps for secure seating	48
4.7	Battery: checking with battery tester (always refer to workshop manual)	51
4.8	Status of battery: reading, sending diagnosis protocol online	51
4.9	Tyres: checking condition, wear pattern, tyre pressure and tread depth	51
4.10	Brake and clutch system: change brake fluid	60
4.11	Brake fluid level: checking	66
4.12	Brake system and shock absorbers: inspecting for leaks and damage	68
4.13	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	68
4.14	Diesel particulate filter: checking	71
4.15	Dual clutch gearbox 02E: changing gear oil and filter	71
4.16	Electric windows: checking positioning (open and close functions)	71
4.17	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	72
4.18	Front passenger airbag: checking key switch and "On/Off function"	72
4.19	Bonnet catch hook: grease.	75
4.20	Boots: inspecting	76
4.21	Interior and exterior body: inspecting for corrosion with doors and flaps open	76
4.22	Poly V-belt: renewing	76
4.23	Poly V-belt: checking condition	77
4.24	Poly V-belt: adjusting tension on engines without automatic tensioning roller	77
4.25	Cooling system: checking frost protection and coolant level	79
4.26	Diesel fuel filter: renewing	82
4.27	Air filter: cleaning housing and renewing filter element	90
4.28	Multi-purpose additive for diesel fuel: adding	94
4.29	Multi-purpose additive for petrol fuel: adding	96
4.30	Engine cover panel -top-: removing and installing	98
4.31	Engine compartment cover -bottom- (noise insulation): removing and installing	106



4.32	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	106
4.33	Engine oil level: checking	106
4.34	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	107
4.35	Engine oil: capacities and specifications	121
4.36	Panorama tilting/sliding roof with rear panorama roof: checking function, cleaning and greasing guide rails, and cleaning wind deflector	122
4.37	Road test: performing (driving behaviour, noises, air conditioner etc.)	126
4.38	Wheel securing bolts: tightening to specified torque	127
4.39	Radio/navigation system: reading code using vehicle diagnostic tester	128
4.40	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	128
4.41	Tyre pressure loss indicator: performing basic setting	129
4.42	Tyre repair set	130
4.43	Dust and pollen filter: cleaning housing and renewing filter element	131
4.44	Headlight adjustment: checking halogen headlights	132
4.45	Headlight adjustment: checking gas discharge headlights without DLA	138
4.46	Headlight adjustment: checking gas discharge headlights with DLA	145
4.47	Headlight adjustment: checking fog lights	153
4.48	Sliding sunroof drains at front (panoramic sliding sunroof with panoramic roof at rear): checking for blockage, cleaning if necessary	155
4.49	Service interval display: reset	156
4.50	Service interval display: recoding	160
4.51	Sunroof: checking function, cleaning guide rails and greasing with special grease	161
4.52	Sliding sunroof drains: checking for blockage, cleaning if necessary	161
4.53	Windscreen wash/wipe system and headlight washer system: checking function and adjusting	164
4.54	Track rod ends: checking clearance, firm seating and boots	170
4.55	Auxiliary heater: setting weekday in menu of dash panel insert	170
4.56	Door arrester: grease.	173
4.57	Transportation mode: switching off	174
4.58	Transportation devices: removing blocking pieces from springs on front axle	175
4.59	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	176
4.60	Clock and date: setting	176
4.61	Water drain valves at rear: check for blockage, clean if necessary	179
4.62	Toothed belt and toothed belt tensioning roller: renewing (diesel engines)	179
4.63	Camshaft drive toothed belt: renewing (only 2.0 I FSI)	180
4.64	Camshaft drive toothed belt: checking (4-cylinder petrol engines 1.6 I 75 kW and 2.0 I 80 kW)	180
4.65	Spark plugs: renew	181
4.66	Driving instructor pedals: greasing	192
4.67	Natural gas system: inspecting natural gas tank for corrosion and leakage.	195
4.68	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut-off valve	201
4.69	Natural gas filler connection: checking condition, cleaning if necessary and checking seal	201
4.70	Natural gas tank: renewing	202
<b>5</b>	<b>Exhaust emissions test</b>	<b>203</b>
5.1	Exhaust emissions test for petrol engines	203
5.2	Exhaust emissions test for diesel engines	205
<b>6</b>	<b>Glossary</b>	<b>208</b>
<b>7</b>	<b>---Change history---</b>	<b>211</b>