



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Brake allocation via PR No. | 1 |
| 1.1 Front brakes | 1 |
| 1.2 Rear brakes | 2 |
| 2 Technical data for brakes | 3 |
| 2.1 Brake master cylinder and brake servo | 3 |
| 2.2 Front brakes FN 3 | 3 |
| 2.3 Rear brakes (disc brakes) | 4 |
| 3 Brake test | 5 |
| 3.1 General | 5 |
| 3.2 Test for vehicles with front-wheel drive | 5 |
| 45 - Anti-lock brake system | 6 |
| 1 General notes on anti-lock brake system | 6 |
| 2 Notes for repair work on anti-lock brake system | 7 |
| 3 Connecting VAS 5051 and selecting functions | 8 |
| 4 Electrical/electronic components and locations | 10 |
| 4.1 ABS Mark 70 (ABS/TCS) | 10 |
| 4.2 ABS Mark 60 (ABS/EDL/TCS/ESP) up to Week 22/2008 | 12 |
| 4.3 ABS Mark 60 (ABS/EDL/TCS/ESP) from Week 22/2008 | 14 |
| 4.4 ABS Mark 60 EC (ABS/EDL/TCS/ESP) from Week 22/2008, LHD | 16 |
| 5 Fault display via warning lamps | 19 |
| 6 Assembly overview - ABS hydraulic unit N55 , brake servo/brake master cylinder | 21 |
| 6.1 ABS Mark 70 (ABS/TCS) (LHD vehicle) | 21 |
| 6.2 ABS Mark 70 (ABS/TCS) (RHD vehicle) | 29 |
| 6.3 ABS Mark 60 (ABS/EDL/TCS/ESP) to Week 22/2008, LHD | 36 |
| 6.4 ABS Mark 60 EC (ABS/EDL/TCS/ESP) from Week 22/2008, LHD | 44 |
| 6.5 ABS Mark 60 EC (ABS/EDL/TCS/ESP) (RHD vehicle) | 52 |
| 7 Removing and installing parts of ABS system on front and rear axle | 61 |
| 7.1 Removing and installing parts of ABS system on front axle | 61 |
| 7.2 Removing and installing parts of ABS system on rear axle | 62 |
| 8 Removing and installing parts of ESP system | 65 |
| 8.1 Removing and installing ESP sensor unit G419 | 65 |
| 8.2 Removing and installing steering angle sender G85 | 65 |
| 46 - Brakes - mechanism | 67 |
| 1 Repairing front brakes | 67 |
| 1.1 Repairing front brakes, FN 3 brake caliper | 67 |
| 1.2 Removing and installing brake pads, brake caliper FN 3 | 70 |
| 1.3 Removing and installing brake caliper, FS III brake caliper | 72 |
| 2 Repairing rear brakes | 77 |
| 2.1 Assembly overview - rear brake CII 41 | 77 |
| 2.2 Removing and installing brake pads, CII 41 | 79 |
| 2.3 Removing and installing brake caliper, CII 41 | 81 |
| 2.4 Assembly overview - Bosch rear wheel brake | 84 |
| 2.5 Removing and installing brake pads, Bosch | 86 |
| 2.6 Removing and installing brake caliper, Bosch | 88 |
| 3 Assembly overview - handbrake lever | 92 |
| 3.1 Removing and installing handbrake cable up to model year 2007 | 92 |
| 3.2 Removing and installing handbrake cable from model year 2008 | 94 |
| 3.3 Adjusting handbrake | 96 |



| | | |
|-----------|--|------------|
| 4 | Assembly overview - brake pedal | 98 |
| 4.1 | Assembly overview - brake pedal, left-hand drive | 98 |
| 4.2 | Assembly overview - brake pedal, right-hand drive | 103 |
| 47 | Brakes - hydraulics | 108 |
| 1 | Repairing front brake caliper | 108 |
| 1.1 | Repairing brake caliper FN 3 | 108 |
| 1.2 | Removing and installing piston for brake caliper FN 3 | 108 |
| 2 | Repairing rear brake caliper | 112 |
| 2.1 | Assembly overview - brake caliper CII 41 | 112 |
| 2.2 | Removing and installing piston for brake caliper CII 41 | 113 |
| 2.3 | Assembly overview - Bosch brake caliper | 115 |
| 2.4 | Removing and installing brake caliper piston, Bosch | 117 |
| 3 | Pressurised leak test | 120 |
| 3.1 | Test prerequisites: | 120 |
| 4 | Bleeding brake system | 121 |
| 4.1 | Bleeding brake system with the brake filling and bleeding equipment VAS 5234 | 121 |
| 4.2 | Changing brake fluid | 123 |
| 5 | Brake servo and brake master cylinder | 124 |
| 5.1 | Assembly overview - brake servo/brake master cylinder to Week 22/2008, LHD | 124 |
| 5.2 | Assembly overview - brake servo/brake master cylinder from Week 22/2008, LHD | 126 |
| 5.3 | Assembly overview - brake servo/brake master cylinder (right-hand drive vehicle) | 128 |
| 5.4 | Overview - vacuum pump for brake servo (diesel vehicles) | 130 |
| 5.5 | Vacuum pump for brake servo (vehicles with 2.0 l petrol engine) | 130 |
| 5.6 | Checking brake servo vacuum system | 131 |
| 5.7 | Checking non-return valve | 135 |
| 5.8 | Removing and installing vacuum sender G608 | 135 |
| 5.9 | Removing and installing brake servo pressure sensor G294 | 135 |
| 5.10 | Removing and installing brake servo vacuum sender G483 to Week 22/2008 | 136 |
| 5.11 | Vacuum pump for brakes V192 | 136 |
| 5.12 | Removing and installing brake light switch F from Week 45/2005, LHD | 137 |
| 5.13 | Removing and installing brake light switch F, right-hand drive | 138 |
| 6 | Removing and installing brake master cylinder | 141 |
| 6.1 | Removing and installing brake master cylinder, left-hand drive | 141 |
| 6.2 | Removing and installing brake master cylinder, right-hand drive | 142 |
| 7 | Removing and installing brake servo | 147 |
| 7.1 | Removing and installing brake servo, left-hand drive | 147 |
| 7.2 | Removing and installing brake servo, right-hand drive vehicle | 150 |
| 8 | Repairing brake lines | 160 |
| 8.1 | Assembly overview - flanging tool | 162 |
| 8.2 | Work instructions | 162 |